


# Starfire S-4XL Sweeper Body Safety, Operations and Maintenance Manual

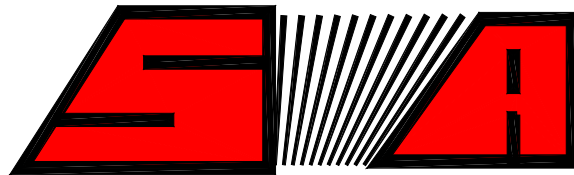


# STEWART-AMOS

Sweeper Co.

SN 6008 & UP



# Starfire S-4XL Sweeper Body Safety, Operations and Maintenance Manual

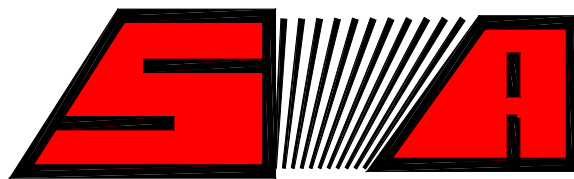

# **STEWART-AMOS**

**Sweeper Co.**

**SN 6008 & UP**





Sweeper Co.

## Table of Contents

<b>Safety</b>	<b>7</b>
Safety Is A Shared Responsibility	9
Recognize Safety Information	9
Equipment Lockout	10
Hopper Port Restrictors	10
General Safety Precautions	11
Before Operating Machine	11
When Operation Machine	11
When Servicing Machine	11
Safety Features	12
Follow Safety Instructions	13
Prevent Bypass Starting	13
Handle Fuel Safely-Avoid Fires	13
Prepare For Emergencies	14
Never Use Starting Fluid	14
Wear Protective Clothing	14
Protect Against Noise	14
Handle Chemical Products Safely	14
Dispose Of Waste Properly	15
Practice Safe Maintenance	15
Work In Ventilated Area	16
Avoid High-Pressure Fluids	16
Avoid Heating Near Pressurized Fluid Lines	17
Remove Paint Before Welding Or Heating	17
Service Cooling System Safely	17
Avoid Harmful Asbestos Dust	18
Stay Clear Of Rotating Equipment	18
Diesel Fuel Storage	19
Filling Fuel Tank	19
<b>Warranty</b>	<b>21</b>
Warranty Certificate	23
General Conditions	23
Items Not Covered By Warranty	25
Items Covered By Separate Warranty	25

<b>General Specifications</b>	<b>27</b>
Serial Number Location	29
<i>Figure 1: Serial Number Plate</i>	
<b>Controls</b>	<b>31</b>
Engine Controls	33
<i>Figure 2: Engine Control Box</i>	34
Sweeper Controls	35
LH Gutter Broom tilt Up/Down	35
Beacon Lights On	35
RH Gutter Broom Tilt Up/Down	35
Brooms Up/Down	35
GB Lights On/GB/MB Lights On	35
Sweep Forward/Sweep Reverse	35
Hopper Up/Down	36
Water	36
Hopper Dump/Retract	36
LH Gutter Broom Up/Down	36
RH Gutter Broom Up/Down	36
Electric Throttle	37
<i>Figure 3: Sweeper Control Box</i>	38



Sweeper Co.

<b>Operation</b>	39	
Chassis		41
Auxiliary Engine	41	
Water Fill Up	43	
<i>Figure 4: Water Tank</i>	43	
Sweeping	44	
Dumping	45	
Break-In Period	47	
Engine Break-In	47	
Sweeper Break-In	47	
Winterizing Your S-4	48	
<b>Service</b>	49	
Fuel, Lubricants, and Coolants	49	
Diesel Fuel	49	
Diesel Engine Oil	49	
Coolant	49	
Hydraulic Oil	49	
Grease	50	
Lubrication and Maintenance	50	
Daily	50	
<i>Figure 5: Service Locations on Auxiliary Engine</i>	51	
Every 40 Hours	51	
Every 250 Hours	51	
Every 500 Hours	52	
Every 1000 Hours	52	
<b>Adjustments</b>	<b>53</b>	
Gutter Broom Angle Adjustment	53	
Correct Gutter Broom Angle	53	
Adjust Tilt Angle	53	
Adjust Front to Back Angle	53	
Gutter Broom Pressure	54	
Correct Gutter Broom Pressure	54	
Adjusting Gutter Broom Pressure	54	
Sweeping Width	54	
Gutter Broom Impact Protection Spring	55	
<i>Figure 6: Gutter Broom Assembly</i>	56	
<i>Figure 7: Correct Broom Pattern</i>	57	
Main Broom Pressure	58	
<i>Figure 8: Main Broom Assembly</i>	58	
Elevator Chain Adjustment	59	
Upper Drive Shaft Adjustment	59	
Center Idler Shaft Adjustment	59	
<i>Figure 9: Elevator Chain Adjustment</i>	60	

<b>Repair and Maintenance</b>		<b>61</b>
Maintenance Filter Cross Reference	63	
Gutter Broom Segment Replacement		63
Main Broom Strip Replacement		63
<i>Figure 10: Main Broom Assembly</i>		64
Main Broom Bearing Replacement		64
<i>Figure 11: Main Broom Arm Assembly</i>		65
Carbide Drag Shoe Replacement		66
<i>Figure 12: Carbide Drag Shoe</i>		66
Elevator Chain Replacement		66
<i>Figure 13: Elevator</i>		68
Bottom Liner Replacement		69
Top Liner Replacement		69
Main Broom Hydraulic Motor Replacement		69
Gutter Broom Hydraulic Motor Replacement		70
Elevator Hydraulic Motor Replacement		70
Hydraulic Pressure Adjustment		71
<i>Figure 14: Hydraulic Valves</i>		71
Stall Switch Adjustment		72
Electrical Activation Sequences at Valve Connectors		73
<b>Lubrication and Maintenance Check List</b>		<b>75</b>
Every 10 Hours		77
Every 40 Hours		79
Every 250 Hours		80
Every 1000 Hours		81
Service Point Lubrication Chart		82



# Safety





Safety is always of prime importance when operating any type of machine or vehicle in the vicinity of people. **All persons working with this unit are to be knowledgeable of the safety practices and features detailed in this section.**

### **Safety Is a Shared Responsibility**

Safety is everyone's responsibility. Working together with Safety as the prime objective will insure a safe work environment and reduce injuries.

The operator must become familiar with safe operating procedures and use the equipment in the fashion that it was intended. Routine inspections and maintenance will prevent premature wear, expensive downtime and ensure that the equipment functions as it is intended.

### **Recognize Safety Information**

This is the safety alert symbol. When you see this symbol in the manual or on your machine, be alert to the potential for personal injury.



**DANGER: Identifies the most serious hazard**

**WARNING: Identifies a potential hazard if safety precautions are not taken**

**CAUTION: Identifies a general safety precaution**

## Equipment Lockout

It is strongly recommended that a commonly known Equipment Lockout procedure be enforced at your work environment. This is a series of precautions designed to protect any personnel that is inspecting, cleaning, or repairing the equipment. The Lockout Procedure should include the following.

1. Apply Parking Brake.
2. Place hopper, hopper door in secure positions so that they can not accidentally fall. If required, install additional blocking devices such as hopper safety pins.
3. Turn off Auxiliary Engine.
4. With auxiliary engine off, turn key to run position and work hydraulic functions to relieve any residual pressure in the hydraulic system.
5. Remove keys from ignition.
6. Store keys in pocket or in a safe controlled area.
7. Place an "OUT OF SERVICE" sign on the steering wheel using a non-reusable fastener.
8. Place an "OUT OF SERVICE" sign on the front window.
9. Disconnect negative terminal from battery.

## Hopper Port Restrictors

To control the decent of the hopper under all conditions port restrictors are used in the hopper lift cylinders. These port restrictors are sized to give a controlled decent of the hopper even if a hydraulic hose would rupture with a full hopper at the top of its travel. The hopper would come back to the at rest position with minimal damage to the equipment.



**DANGER: Do not remove or modify any port restrictors**



## General Safety Precautions

### Before Operating Machine

1. Read the operators manual and the engine manual to familiarize yourself with safe operating practices before operating the machine.
2. Read the chassis operator's manual thoroughly to familiarize yourself with safe operating practices before operating machine.
3. Be sure all observers are clear of the machine and at a safe distance.
4. Ensure mirrors, windows, lights, and monitor equipment (if equipped), are clean and adjusted properly at all times.
5. Do not enter hopper unless engine is shut off, key is removed and there is a note posted indicating not to start the engine. (See Equipment Lockout).

### When Operating Machine

1. Operate controls from the operator's station only.
2. Keep all riders off the machine.
3. Keep all safety shields in place.
4. Ensure the area is clear of any persons or possible obstructions.
5. Do not wear loose clothing or jewelry.
6. Do not leave the vehicle before it is brought to a complete stop and the parking brake is applied.
7. Be cautious while driving with an unevenly distributed load.
8. Inspect for overhead hazards (e.g. power lines) before raising the hopper.
- 9. Raise the hopper only on level ground.**
10. Ensure the hopper has completely lowered and the hopper door is closed before moving the vehicle. Do not move vehicle with hopper up.
11. Do not stand under the hopper when it is in the dump position.

### When Servicing Machine

1. Follow the Equipment Lockout procedure described above.
2. Install safety pins into holes in slide frame to prevent scissor frame from moving when servicing under the hopper. (See Safety Features).
3. Never work under a loaded hopper even with safety pins installed.



## Safety Features

This machine is equipped with many safety features. To operate this equipment safely, it is imperative to be aware of these functions. Please read all of the features listed, as the order they are presented does not reflect the degree of importance. Some safety features listed are options and MAY or MAY NOT be on your unit.

If there are concerns, report to your supervisor or maintenance department.

1. Decals - These must be clean and visible at all times.
2. Mirrors - A variety of mirrors, including large convex ones, are to help ensure adequate rear vision. These must be properly adjusted, clean and visible at all times!
3. Cameras – All machines are equipped with side and rear cameras, if so equipped, they must be in proper working order at all times. The rear camera option is also wired to the chassis transmission, when the chassis is shifted into reverse the rear camera will automatically activate and will go off automatically when chassis is shifted out of reverse.
4. Marker Lights - There is 1 marker lamp on each side of the sweeper and an ID bar at the back on the elevator cover. Marker lights are wired direct to chassis lights and come on with chassis lights.
5. Beacon and/or Strobe Lights - The switch is installed in the sweeper control box inside the cab. The lights are mounted on the front and rear canopy of sweeper.
6. Gutter Broom Lights - These lights are used for work lights and are mounted at both gutter brooms. The switch is found on the control box in the cab.
7. Main Broom Light - This light is used for a work light and is mounted on the drivers side at the back above the main broom. The switch for this work light is combined with the gutter broom light switch in the 3rd position.
8. Backup Alarm - When the truck is put into reverse this alarm sounds. The alarm is mounted to the rear canopy frame.
9. Hopper Safety Prop - If any work is to be done under a lifted hopper, insert props into the main frame roller rails. This will restrict any movement of the scissors frame sliders, thus keeping the hopper stable. **NEVER** use the safety pins to hold a **LOADED HOPPER!**
10. Arrow Board (option) - A separate control box mounted in the cab controls the arrow board mounted on the rear of the sweeper. A switch and pattern selector with indicator lights controls the order the light pattern.
11. Fire Extinguisher (option) - This is located in the cab behind the driver's seat.
12. First Aid Kit (option) - This is located inside the cab behind the driver's seat.

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs.

Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your dealer.



Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your dealer.

## PREVENT BYPASS STARTING

Do not start engine by shorting across starter terminal.

Start engines only from operator's station with transmission in park.




## HANDLE FUEL SAFELY-AVOID FIRES

Handle fuel with care: It is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

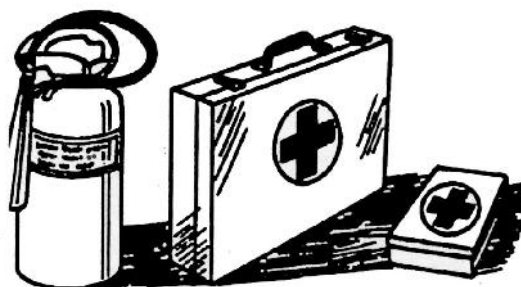

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.



## NEVER USE STARTING FLUID

Starting fluid is highly flammable and can cause serious damage to engines.

## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.



## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with this equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.



Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment. (See your dealer for MSDS on chemical products used with this equipment.)


### **DISPOSE OF WASTE PROPERLY**

Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with this equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leak proof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them. Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of Waste from your local environmental or recycling center, or from your dealer.

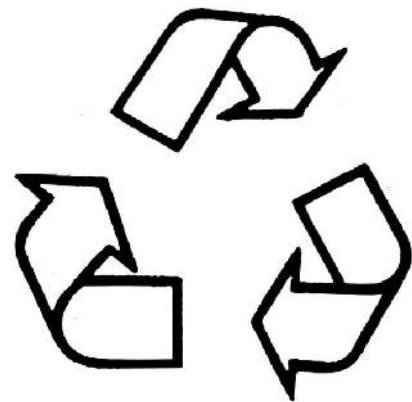

### **PRACTICE SAFE MAINTENANCE**

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.





Securely support any machine elements that must be raised for service work.

Keep all pats in good condition and properly installed.

Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

### **WORK IN VENTILATED AREA**

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.



### **AVOID HIGH-PRESSURE FLUIDS**

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.



## **AVOID HEATING NEAR PRESSURIZED FLUID LINES**

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



## **REMOVE PAINT BEFORE WELDING OR HEATING**

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area.  
Dispose of paint and solvent properly.

Remove paint before welding or heating:

If you sand or grind paint, avoid breathing the dust.  
Wear an approved respirator.

If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.



## **SERVICE COOLING SYSTEM SAFELY**

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



## **AVOID HARMFUL ASBESTOS DUST**

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding materials containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos. Keep bystanders away from the area.

## **STAY CLEAR OF ROTATING EQUIPMENT**

Entanglement in rotating equipment can cause serious injury or death. Keep shields in place at all times.

Wear close fitting clothing. Stop the engine before making adjustments or performing any type service on the equipment.



## DIESEL FUEL STORAGE

Proper fuel storage is critically important. Use clean storage and transfer tanks. Periodically drain water and sediment from bottom of tank. Store fuel in a convenient place away from buildings.

**IMPORTANT: DO NOT** store diesel fuel in galvanized containers. Diesel fuel stored in galvanized containers reacts with zinc coating on container to form zinc flakes. If fuel contains water, a zinc gel will also form. The gel and flakes will quickly plug fuel filters, damage injection nozzles and injection pump.

**DO NOT** use brass-coated containers for fuel storage. Brass is an alloy of copper and zinc.

## FILLING FUEL TANK



**CAUTION: Handle fuel carefully. Do not fill the fuel tank when engine is running. DO NOT smoke while filling fuel tank or servicing fuel system.**

**IMPORTANT:** The fuel tank is vented through the filler cap. If a new filler cap is required, always replace it with an original vented cap.

Fill fuel tank at the end of each day's operation to prevent condensation in tank as moist air cools and freezes during cold weather.

Store diesel fuel in plastic, aluminum, or steel containers specifically coated for diesel fuel storage.

Avoid storing fuel over long periods of time. If fuel is stored for more than a month prior to use, or there is a slow turnover in fuel tank or supply tank, add a fuel conditioner to stabilize the fuel and prevent water condensation. Fuel conditioner also reduces fuel gelling and controls wax separation during cold weather.

Consult your engine distributor or servicing dealer for recommendations and local availability. Always follow manufacturer's directions on label.







# WARRANTY





## WARRANTY CERTIFICATE

Stewart-Amos Sweeper Co. warrants each new machine manufactured to be free from defects in material and workmanship under normal use and service. The obligation under this warranty is limited to replacing F.O.B. its factory, Harrisburg, PA:

Any PART and labor within **ONE YEAR** (twelve months) or **ONE THOUSAND** (1000) **HOURS**, whichever occurs first, after making delivery of such machine to the original purchaser. This warranty is expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on its part, and it neither assumes nor authorized any other person to assume for it any liability in connection with the sale, servicing or repair of any machine manufactured by it.

Stewart-Amos Sweeper Co. reserves the right to have any part being claimed for warranty returned, at customer expense, for inspection and determination that the part was factory defective.

Stewart-Amos Sweeper Co. reserves the right to make changes in design or to make additions to or improvements on its products previously manufactured.

### **Stewart-Amos Sweeper Co. – WARRANTY POLICY**

Stewart-Amos Sweeper Co. provides warranty to the original purchaser of a new product, that the same is free from defects in materials and workmanship that may cause performance failures, subject to the conditions stated herein.

The warranty is limited to a period of one (1) year from the date of the original purchase or 1000 hours, whichever occurs first, included are parts and labor costs associated with the warranty.

### **GENERAL CONDITIONS**

Stewart-Amos Sweeper Co. will honor warranty claims provided:

1. The unit is properly registered. Registration form is located at the front of the operator's manual. Registration form must be received by Stewart-Amos Sweeper Co. within 45 days of the sale. Failure to receive said warranty registration form within the prescribed time will cancel warranty coverage for the product.
2. The failure occurs within the warranty period and is covered under the terms of our written warranty.
3. The repairs are made and an authorized Stewart-Amos Sweeper Co. dealer has submitted a warranty claim within 30 days of completion of repair.
4. The unit has not been altered in any way without prior written approval by Stewart-Amos Sweeper Co.





Sweeper Co.

5. All warranty repairs reimbursable must be performed by an authorized dealer using Stewart-Amos Sweeper Co. approved replacement parts. Failure to repair properly voids future warranty.



## **ITEMS NOT COVERED BY WARRANTY**

1. Set-up and pre-delivery services, service calls, diagnostics, or after sales adjustments due to normal operations, including travel time/mileage.
2. Sweepers sold for use outside of North America.
3. Repairs, modifications or alterations to the machine without the express written consent of Stewart-Amos Sweeper Co.
4. Including but not limited to normal wear parts such as brooms, drag shoes, rubber deflectors, filters, oil, fuel, chains, belts, brakes or other wear parts.
5. Items that, in the opinion of Stewart-Amos Sweeper Co. have been subject to misuse, abuse, negligence, accident or improper maintenance.
6. Failures resulting from the machine being operated in a manner or for a purpose not recommended by Stewart-Amos Sweeper Co.
7. Rentals, consequential or collateral damage, down time costs, or lost revenue incurred due to a failure during the warranty period.
8. Consumables or shop supply materials such as paint, anti-freeze, oil, fuel, bolts.

## **ITEMS COVERED BY SEPARATE WARRANTIES**

1. Parts and components such as the chassis, auxiliary engine, pump, motors, and other similar major components which are under separate warranties from their respective manufacturers. Service for these components can be obtained from their service facilities in the United States. In some circumstances, extended warranties are available at an extra cost. Please contact your Stewart-Amos Sweeper Co. dealer for information on these extended warranties.

**THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANT LIABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESSED WARRANTY.**

**IT IS EXPRESSLY UNDERSTOOD THAT STEWART-AMOS SWEEPER CO. WILL NOT BE LIABLE FOR ANY OTHER INJURY, LOSS, DAMAGE OR EXPENSE, WHETHER DIRECT OR CONSEQUENTIAL, INCLUDING BUT NOT LIMITED TO LOSS OF USE, INCOME, PROFIT OR PRODUCTION, OR INCREASED COST OF OPERATION, OR SPOILAGE OF OR DAMAGE TO MATERIAL, ARISING IN CONNECTION WITH THE SALE, INSTALLATION, USE OF, INABILITY TO USE, OR THE REPAIRS OR REPLACEMENT OF STEWART-AMOS SWEEPER CO.'S PRODUCTS.**

**STEWART-AMOS SWEEPER CO. RESERVES THE RIGHT TO MAKE CHANGES IN DESIGN OR TO MAKE ADDITIONS OR IMPROVEMENTS ON ITS PRODUCTS WITHOUT IMPOSING ANY OBLIGATION UPON ITSELF TO INSTALL THEM ON ITS PRODUCTS PREVIOUSLY MANUFACTURED.**





# General Specifications






### Serial Number Location

The Serial Number Identification Plate is easily found inside the cab on the driver's side door jam. See *Figure 1*: below.

The Serial Number must be quoted whenever ordering parts, requiring technical support, or warranty. It ensures that you are assisted as efficiently and quickly as possible.

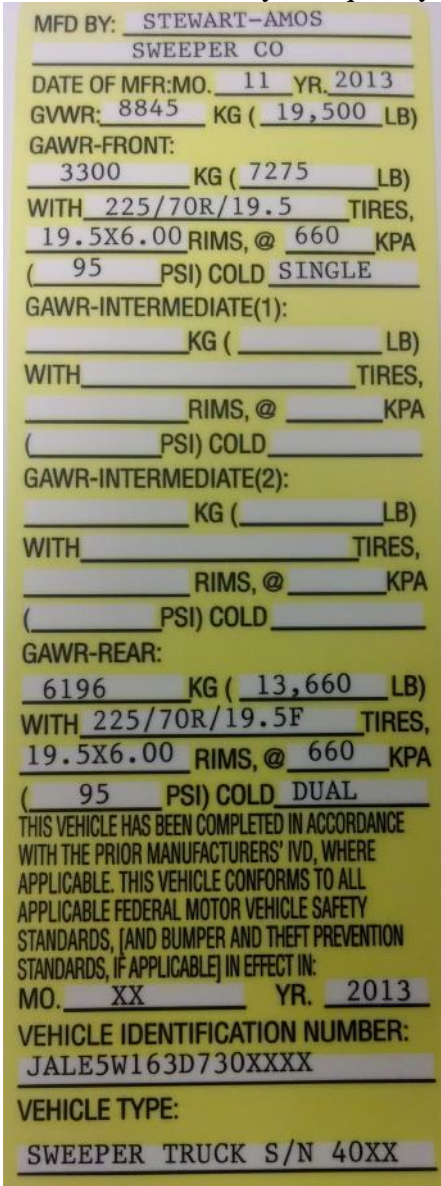

*Figure 1*: Serial Number Decal





# Controls







Refer to this section to quickly find out what each control does on the control panel. Do not use these controls however, until you have thoroughly read and understood the OPERATION Section. The OPERATION Section outlines how each control is to be used for safe operation.

(Refer to *Figure 2: Engine Control Box*)

The Control Box is generally located on a pedestal inside the cab. All Sweeper control buttons, rocker switches, and indicator-warning lamps are housed here. They are easily accessible to the driver from both left and right driving positions.

A brief description of the indicators and controls fitted in the Control Box are as follows:

### **Engine Controls**

(Refer to *Figure 2: Engine Control Box*)

1. Tachometer – Indicates the auxiliary engine RPM.
2. Hour Meter – Indicates the hours of operation of the auxiliary engine only.
3. Oil Pressure Gauge – Should the auxiliary engine oil pressure drop below the manufacturer specified minimum oil pressure of 69 kPa (10 psi), the automatic engine shut off system will be activated
4. Coolant Temperature Gauge – If the auxiliary engine coolant temperature rises above 100<sup>0</sup> C (212<sup>0</sup> F) the automatic engine shut off system will be activated.
5. Ignition Key Switch – This main power switch starts the auxiliary engine enabling all sweeping functions. (See “Operating Auxiliary Engine”).
  - a. **Glow Plug Position** – Turn the starter switch to the “PREHEATING” position to allow the glow lamp to redden. The glow lamp goes out in about 30 seconds when the lamp timer is up. Even with the glow lamp off, the glow plug can be pre-heated by turning the starter switch to the “PREHEATING” position. Turn the key to the “START” position and the engine should start. Release the key immediately when the engine starts. This operation is not required when the engine is warmed up.
  - b. **Start Position** - Turn ignition key to the start position to start auxiliary engine. When engine starts release key and switch will automatically return to the run position. If engine does not start within 15 seconds of turning starter over, return to step a.



Engine Control Box

Figure 2:



## Sweeper Controls

Refer to *Figure 3: Sweeper Control Box*

1. **LH GUTTER BROOM TILT UP / DOWN** – This function is used to clean out deep gutters or depressions in the sweeping surface. When the switch is pressed to the LH GUTTER BROOM TILT DOWN position, the gutter broom will pivot down on the inside of the brush plate. When the switch is pressed to the LH GUTTER BROOM TILT UP position, the gutter broom will pivot up on the inside of the brush plate.
2. **BEACON LIGHT ON** – Turns both the front and back strobe light on and off.
3. **RH GUTTER BROOM TILT UP / DOWN** - This function is used to clean out deep gutters or depressions in the sweeping surface. When the switch is pressed to the RH GUTTER BROOM TILT DOWN position, the gutter broom will pivot down on the inside of the brush plate. When the switch is pressed to the RH GUTTER BROOM TILT UP position, the gutter broom will pivot up on the inside of the brush plate.
4. **BROOMS UP/DOWN** – This switch lifts/lowers the rear broom and elevator and must be pushed and held in the up/down position until the function is complete. To lower, push down and hold the switch until rear broom is fully down, then release. When the brooms are fully down, the hydraulic cylinders will bottom and pull the engine rpm down as the hydraulic oil is dumped over the relief valve. The gutter brooms will lift/lower with the rear broom if they are activated (see: LH / RH GUTTER BROOM UP / DOWN SWITCHES). The switch is interlocked through a proximity switch with the HOPPER UP/DOWN function to prevent the hopper from interfering with the elevator and will not function unless the light in the center of the switch is on. When the brooms are down they are designed to float to accommodate uneven pavement.
5. **GB LIGHTS ON / GB/MB LIGHTS ON** – This is a three-position switch which controls both gutter broom lights and main broom lights. When switch is in the “GB LIGHTS ON” position both gutter broom working lights will be on. When the switch is in the “GB/MB LIGHTS ON” position both gutter broom lights as well as the rear main broom work light will be on. When the switch is in the middle position all working lights will be off.
6. **SWEEP FORWARD / SWEEP REVERSE** – This switch controls the direction of rotation of all brooms and the elevator. The switch is interlocked through a proximity switch with the BROOMS UP/DOWN function to prevent the brooms from rotating without being lowered and will not function unless the light in the center of the switch is on. When the switch is in the “SWEEP FORWARD” position the gutter brooms, if they are activated (see: LH / RH GUTTER BROOM UP / DOWN SWITCHES), will rotate vertically so that the leading edge of the brooms move material to the center of the machine, the rear main broom will rotate horizontally against the direction of travel which throws the material into the elevator. The elevator rotates dragging the material up the floor and depositing it in the hopper. When the switch is in the “SWEEP REVERSE” position all brooms and elevator will rotate in the opposite directions. The “SWEEP REVERSE” function dislodges any material that may have obstructed the elevator and



- sweep large objects out of the sweeping path that may be too large to sweep. This switch will not function unless the light in the center of the switch is on.
7. **HOPPER UP / DOWN** – This switch controls the hopper up and down function. To raise the hopper, press and hold the spring-loaded switch to the “HOPPER UP” position. To lower the hopper, press the switch to the “HOPPER DOWN” position. If the switch is not being depressed it will automatically return to the center or hold position. The hopper will maintain its current position if the switch is not depressed in either direction. This switch will not function unless the light in the center of the switch is on. The switch is interlocked through a proximity switch with the BROOMS UP/DOWN function to prevent the hopper from raising without having the brooms up and will not function unless the light in the center of the switch is on. This is to protect the hopper from interfering with the elevator.
  8. **WATER** – This switch controls the water used for dust control. When the switch is in the up position, the water pump will go on and off with the sweep forward function to extend water supply. When the switch is in the down position the water pump will be on continuous function.
  9. **HOPPER DUMP / RETRACT** – This switch controls the hopper dumping function. The hopper can be dumped at any height in the lift cycle. When the hopper has been raised to the desired height, press and hold the switch in the “HOPPER DUMP” position until the hopper is fully tipped with the door open. To return the hopper to the retracted position press and hold the switch in the “HOPPER RETRACT” position until the hopper is fully retracted. At any time in the dumping cycle the switch can be released and the hopper will hold that position. The switch is interlocked through a proximity switch with the BROOMS UP/DOWN function to prevent the hopper from interfering with the elevator function. This switch will not function unless the light in the center of the switch is on.
  10. **LH GUTTER BROOM UP / DOWN** – This switch controls the independent operation of the left hand gutter broom only. When the switch is in the center position the gutter broom will stay up when the rear main broom is lowered. When the switch is in the “LH GUTTER BROOM DOWN” position the gutter broom will go up/down and turn on/off with the rear main broom. When the rear main broom is down and the gutter broom is operating in the lowered position and you wish to turn off the left gutter broom only, push and hold the switch to the “LH GUTTER BROOM UP” position until the gutter broom is fully up then release the switch. When the switch is released the gutter broom rotation will stop and the switch will automatically return to the center position.
  11. **RH GUTTER BROOM UP / DOWN** – This switch controls the independent operation of the right hand gutter broom only. When the switch is in the center position the gutter broom will stay up when the rear main broom is lowered. When the switch is in the “RH GUTTER BROOM DOWN” position the gutter broom will go up/down and turn on/off with the rear main broom. When the rear main broom is down and the gutter broom is operating in the lowered position and you wish to turn off the right gutter broom only, push and hold the switch to the “RH GUTTER BROOM UP” position until the gutter broom is fully up then release the switch. When the switch is released the gutter broom rotation will stop and the switch will automatically return to the center position.



**STEWART-AMOS**

Sweeper Co.

12. **ELECTRIC THROTTLE** – Available as standard equipment on SN 7980 & up. Push switch up to increase auxiliary engine rpm and down to reduce rpm.

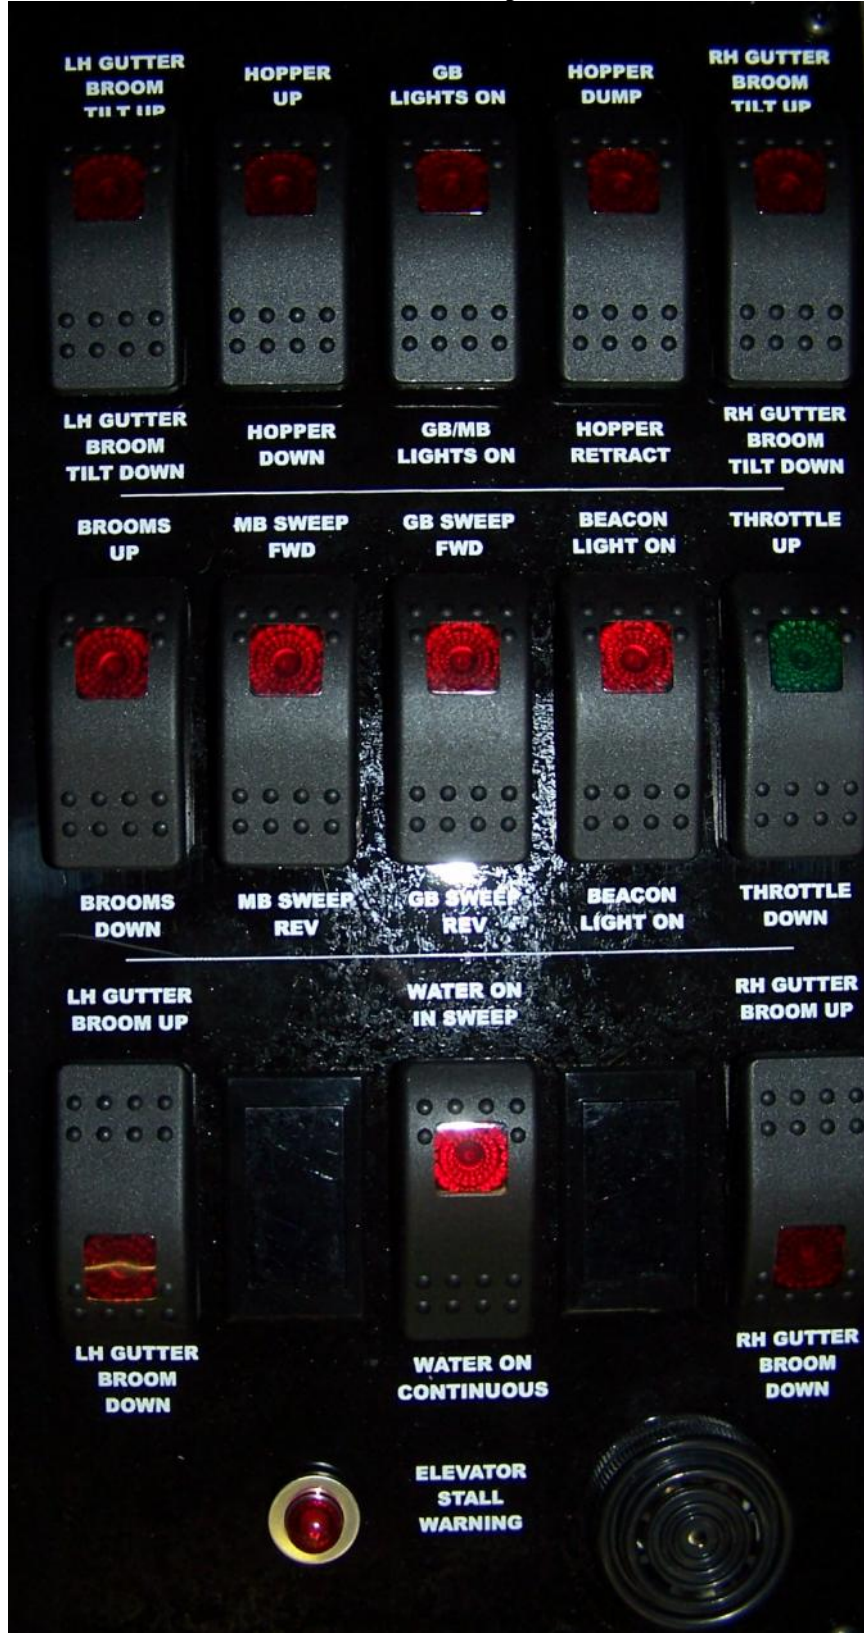


Figure 3: Sweeper Control Box to SN 4011 and up



# Operation





## Chassis

**IMPORTANT:** Refer to Chassis owner's manual on all chassis related operations including regeneration instructions. Street Sweepers run at low operating speeds, therefore it is important that the regeneration procedure is understood and followed. Failure to follow these procedures may cause damage to the chassis and may affect the warranty.



**CAUTION: Read the chassis OWNER'S MANUAL prior to operating. Make sure all operating instructions and Regeneration Process is understood.**

## Auxiliary Engine

**IMPORTANT:** Before starting the auxiliary engine, check the SERVICE section in this manual and perform scheduled maintenance for the required service period.

1. Read the auxiliary engine instruction manual before operating engine.
2. Check the auxiliary engine fuel, oil, coolant, and hydraulic oil levels.
3. Make sure that all sweeper control switches are in the neutral positions and the park brake is engaged.
4. Turn the starter key to the start position and release as soon as the engine starts. Do not crank engine for more than 10 seconds at a time or starter damage may occur.
5. If the engine does not start on the first try, wait for 30 seconds before trying again.
6. Once the engine is running, check the gauges. Allow the engine to warm up at 1000 rpm for 10 minutes.

**IMPORTANT:** When the auxiliary engine is no longer required to run the sweeper controls, let the engine run at low idle for three to five minutes before shutting the engine off. This allows the engine to properly cool.



**CAUTION: If the engine stalls during normal operation, restart it immediately to prevent excessive heat build up.**

- Recommended engine speed on normal street sweepings is 2300 – 2400 rpm.
- Minimum oil pressure is 15 psi at 700 rpm at normal operating temperature.
- Normal engine coolant temperature is 180<sup>0</sup> – 202<sup>0</sup> F).

**NOTE:** It is a good practice to operate the engine under a lighter load and at lower speeds for the first 30 minutes after start up.

## Water Fill Up

(Refer to Figure 4: Water Tank)

1. The water tank can be filled with a hydrant hose at the main fill location (B).

**IMPORTANT:** The water tank is equipped with a 3” air gap to help prevent damage to the water tank when filling from a hydrant as well as siphoning back to hydrant. However, care must be taken when filling from a high-pressure source.

2. From curb side open the water shut off (C). Access to the valve is gained through the right rear canopy door on the sweeper.
3. After filling the water tank, close valve (C) to close the canopy door. This prevents dirt from accumulating in water tank.

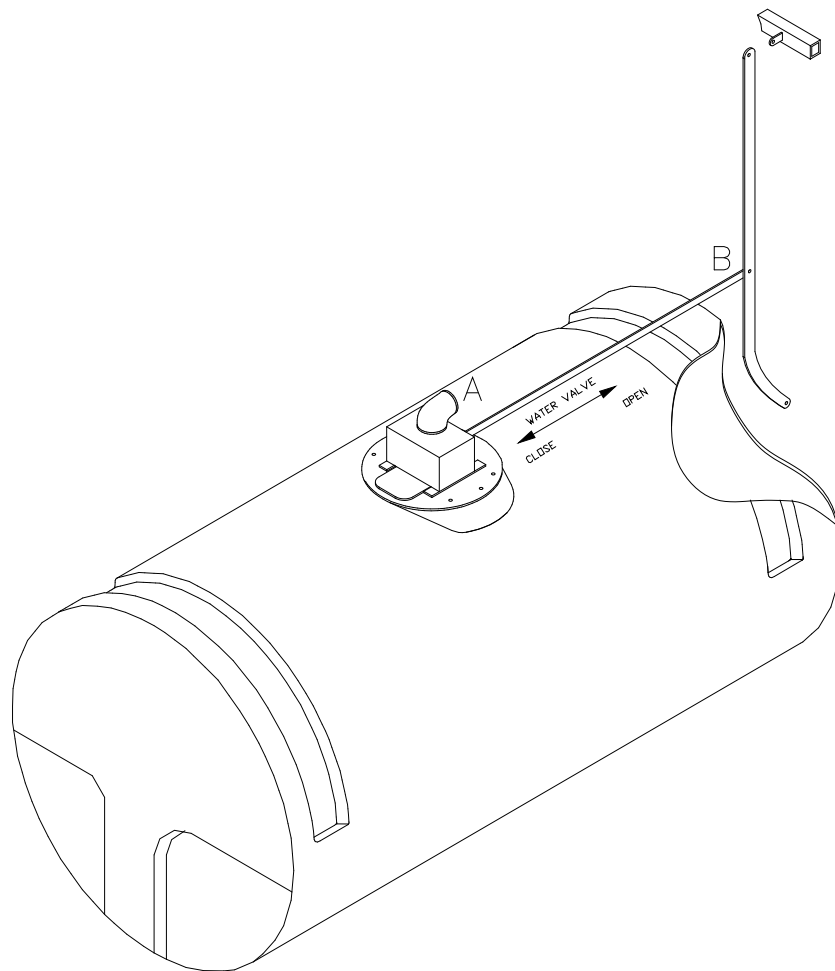


Figure 4: Water Tank

## Sweeping

1. With the engine idling, ensure the hopper is fully lowered by depressing the HOPPER UP/DOWN switch to the “DOWN” position.
2. Run the auxiliary engine up to 2300 – 2400 rpm. This is the rpm range for normal street sweepings. If sweeping becomes heavy, engine rpm can be increased to maximum throttle position.
3. Lower the brooms and elevator into sweeping position by depressing the BROOMS UP/DOWN switch to the “DOWN” location.
4. Press the SWEEP FORWARD switch to the “FORWARD” sweep position. The gutter brooms and main broom will begin turning.
5. For dust control suppression press the WATER ON switch to the “ON” position. The water pump will begin operating to activate pressure spray to the front/rear spray bar and the gutter broom nozzles.



**WARNING: Ensure all observers are clear of the sweeper at a minimum, distance of 10 feet.**

**NOTE:** If the main broom and/or elevator become plugged with debris, push the SWEEP FORWARD /REVERSE switch to the centre position. Then reverse the rotation by holding the switch in the “REVERSE” position. Once the main broom and elevator are free of debris, release the switch.

**NOTE:** When sweeping is extremely heavy, it is advisable to sweep with the truck moving as slow as possible and have the aux. engine at maximum rpm.



**WARNING: It is unlawful to exceed the GVWR of the chassis. Care must be taken not to, overloading conditions will also void warranty.**

## Dumping

**IMPORTANT:** When the hopper is full, it must be dumped before sweeping can continue.

1. Push the SWEEP switch to the centre position to stop all rotation of the gutter brooms and main broom. Then lift the brooms and elevator by depressing the BROOMS UP/DOWN switch to the “UP” position. Do not operate the hopper until all brooms are lifted and are secure. Return the SPRAY switch to the centre position to turn off the water pump.
2. Drive to an appropriate level and stable dump area.



**WARNING: The sweeper must be positioned on level and stable ground while dumping to prevent serious injury or damage. If raising and dumping the hopper is not done on level and stable ground, the lifting arms, frame and canopies may be damaged. Failures resulting from the machine being dumped on uneven ground will void the warranty.**



**WARNING: Never MOVE vehicle while dumping.**  
**WARNING: Always check BEHIND and ABOVE sweeper before backing up or raising the hopper! Serious damage may result otherwise.**

**WARNING: Never use hopper safeties with material in the hopper. Safeties will not hold a loaded hopper.**


3. When in position, place the sweeper transmission lever in neutral and engage the parking brake.
4. Elevate the hopper by pressing the HOPPER RAISE/LOWER switch to the “RAISE” position until the desired height is reached.

**NOTE:** The hopper is capable of being dumped at any height and can be raised or lowered while dumping, provided the sweeper is being operated on level ground.


5. Tilt the hopper to dump its contents by pressing the HOPPER DUMP/RETRACT switch to the “DUMP” position.
6. When the hopper is empty, return it back to its home position by retracting the hopper using the HOPPER DUMP/RETRACT switch and lowering the hopper with the HOPPER RAISE/LOWER switch.
7. To resume sweeping, lower brooms and elevator into sweeping position with the BROOMS UP/DOWN switch, press the SWEEP switch to the “FWD” position, and turn on the dust control system with the SPRAY switch, if desired.

**REMINDER:** At night, the Main Broom light may be used to assist in backing up.


NOT A SAFE HOPPER LIFT AND/OR DUMP ANGLE

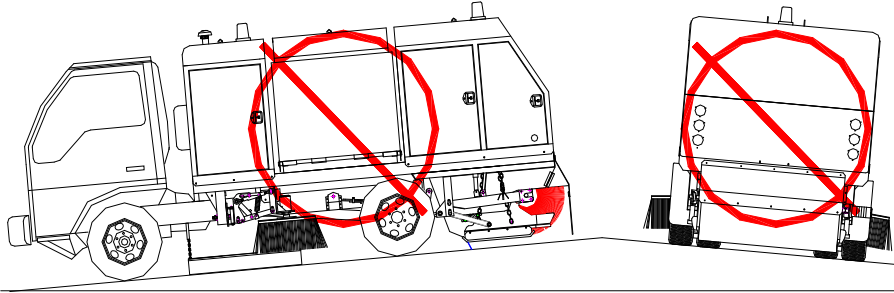

NOT A SAFE HOPPER LIFT AND/OR DUMP ANGLE

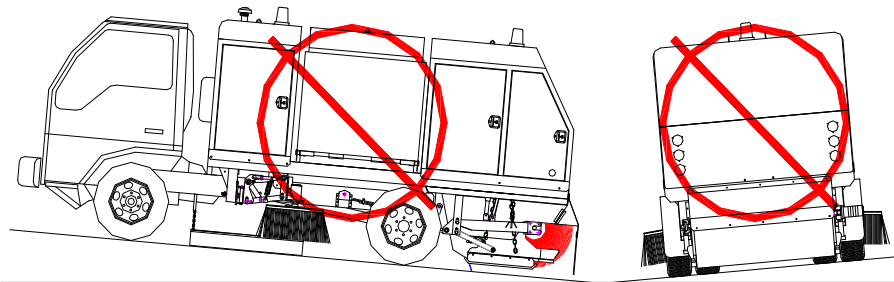

SAFE HOPPER LIFT AND/OR DUMP ANGLE

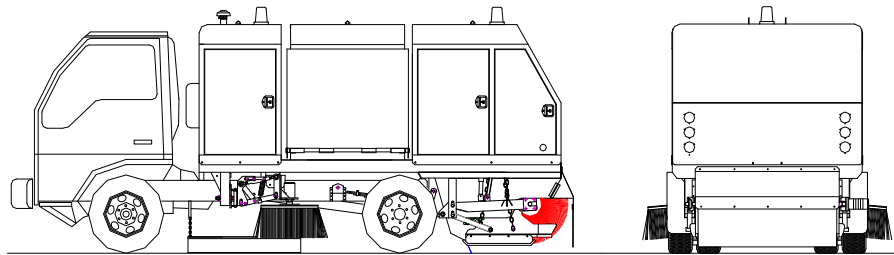



## **Engine Break-In**

For engine break-in please refer to the auxiliary engine Operator's Manual.

## **Sweeper Break-In**

After the first 8 hours of operation.

1. Check and tighten:
  - a. Suspension bolts
  - b. Main broom coupler
  - c. Broom bolts
  - d. Elevator bolts
  - e. Set screws
  - f. Wheel nuts

For every 25 hours for the first 100 hours.

1. Check and tighten:
  - g. Suspension bolts
  - h. Main broom coupler
  - i. Broom bolts
  - j. Elevator bolts
  - k. Set screws
  - l. Wheel nuts
2. Inspect all areas of sweeper periodically to ensure long term life and reliability. Practicing regular routine maintenance will payback in minimal operating costs and less down time over the life of the machine.



## Winterizing Your Sweeper

1. Remove dust suppression water filter, allow as much water as possible to drain from the system and replace water canister without filter.
2. Remove water line coming from the tank at the filter.
3. With water pump running, pressurize the filter housing by using compressed air. This removes water from the pump and lines preventing the water from freezing and rupturing water lines or the pump. Continue blowing air into the filter housing until all nozzles blow air.
4. Remove dust suppression water filter canister and leave off for winter.
5. If sweeping in winter months, do not use water system if below freezing temperatures. If water system is used, it must be purged, using the method stated above before temperature drops below freezing.
6. Engine – Maintain and service engine as per the engine manual provided with the unit.
7. Check antifreeze strength. Must be good for -35<sup>0</sup> F.
8. Insure all fluid levels at maximum of the operating range.
9. Clean or change engine air filter before parking for winter.
10. Maintain and service chassis as per the owners manual provided with unit.



## Service

### Fuel, Lubricants, and Coolants

#### Diesel Fuel

(Refer to the original engine manufacturer's recommendations).

Use ASTM No. 2-D grade fuel when outside air temperature is above 50° C (40° F).

Use ASTM No. 1-D grade diesel fuel when outside air temperature is below 5° C (40° F).

**IMPORTANT:** Do NOT use fuel that is contaminated by water and dirt!



**WARNING: Be careful when handling fuel! Never fill the tank when the engine is hot or running! Do not smoke while filling the fuel tank!**

#### Diesel Engine Oil

(Refer to the original engine manufacturer's recommendations).

#### Coolant

(Refer to the original engine manufacturer's recommendations).

50% water and 50% ethylene glycol base antifreeze should be used year round.



**WARNING: Use extreme care when removing radiator filler caps. Remove only when coolant temperature is below the boiling point.**

#### Hydraulic Oil

The recommended hydraulic oil for this sweeper **Exxon Hydraulic H 68** or equivalent. Failure to do so **WILL** void warranty.

The hydraulic system is very susceptible to contamination from both dirt and moisture and is designed to use a system breather which must be kept clean.



**CAUTION: The entire hydraulic oil system must be of the same viscosity grade.**

## Grease

The recommended grease for this sweeper is **EP 2** multipurpose grease.

## Lubrication and Maintenance

**IMPORTANT:** Maintenance includes inspection and replacement of worn parts as required.



**WARNING: Before servicing the sweeper follow a proper Equipment Lockout procedure as described in the Safety section. Serious personal injury or death may result otherwise!**

**NOTE:** To service the chassis or auxiliary engine, refer to the manufacturer's manual included with your sweeper.

For Auxiliary Engine service locations, see Figure 5: Service Locations on Auxiliary Engine


## Daily

(Refer also to the engine manual that comes with your sweeper for locations).

1. Check oil and coolant levels on the engine.
2. Do a walk around inspection to check all linkages cotter pins and bolts for looseness or missing.
3. Check hydraulic oil level in the hydraulic oil tank. The sight glass is located on the front of the hydraulic oil tank on the driver's side of the vehicle.
4. Check the hydraulic oil breather filter, located on tank, for cleanliness.
5. Inspect the Air Restriction Indicator on the engine air filter. For longer engine life it is strongly recommended to change the air filter element at regular intervals. The Air Restriction Indicator gives you a guideline of when changing is needed.
6. Lubricate the elevator bearings.
7. Lubricate the main broom bearing.



**WARNING: Do not pull on hydraulic oil cooler outlet hose when servicing. This may cause the cooler to leak.**

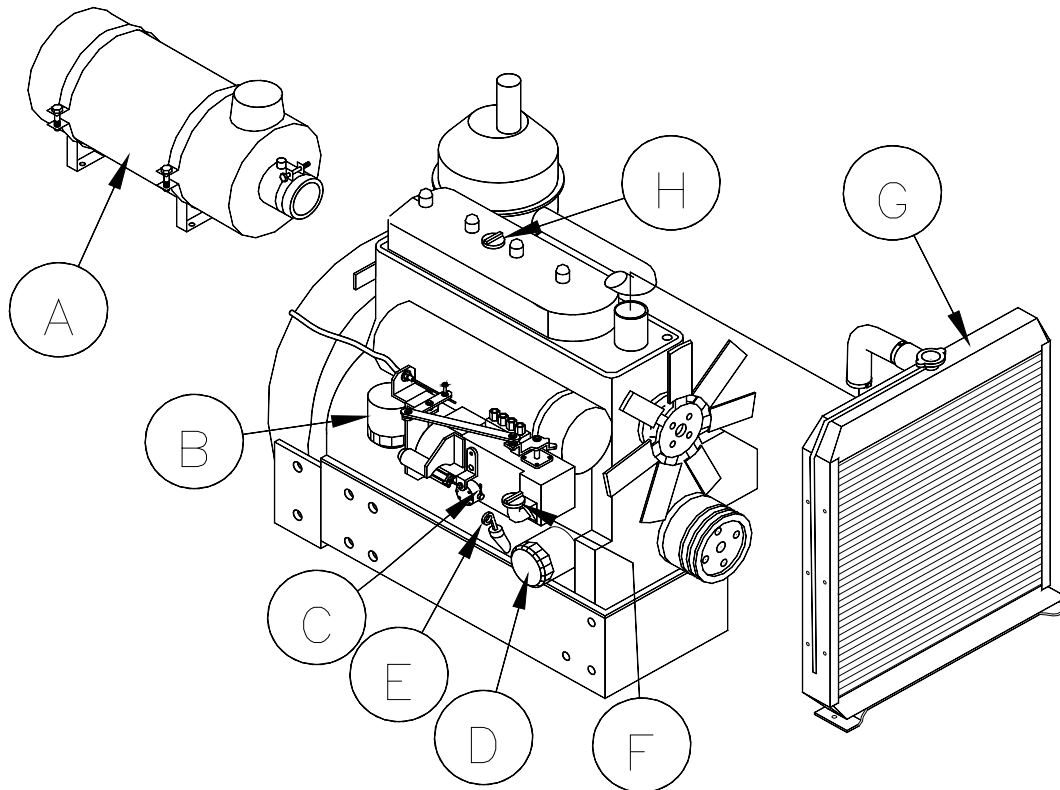

- |                      |                        |
|----------------------|------------------------|
| 1. Air Filter        | 5. Engine Oil Dipstick |
| 2. Fuel Filter       | 6. Engine Oil Fill Cap |
| 3. Fuel Primer Pump  | 7. Coolant Fill Cap    |
| 4. Engine Oil Filter | 8. Engine Oil Fill Cap |

*Figure 5: Service Locations on Auxiliary Engine*

### Every 40 Hours

1. Clean the dust control water filter and inspect the sprayer nozzles.
2. Check the radiator for plugging. Ensure radiator is cool before cleaning. Clean with fresh water.
3. Replace the engine oil in the auxiliary engine (initial change only).
4. Replace the hydraulic oil filter in the auxiliary engine (initial change only).
5. Lubricate gutter broom pivot points.
6. Lubricate main broom arms.
7. Lubricate drag shoe links.

### Every 250 Hours

1. Replace the hydraulic oil filter.
2. Replace the oil breather filter.
3. Replace the auxiliary engine oil and filter.



### Every 500 Hours

1. Replace the hydraulic oil filter.
2. Replace the hydraulic oil breather filter.

**NOTE:** It is advised to use only factory replacement oil filters. All replacement filters must meet or exceed 10 micron absolute rating. Failure to meet or exceed these specifications will void the warranty.

3. Visually inspect the hydraulic system.
4. Check all lines and hoses for cracks or wear and replace as required.
5. Check all fittings for leakage and retighten or replace if necessary.
6. Check all components for possible wear and have them serviced if necessary.

### Every 1000 Hours

Replace Hydraulic Oil, Oil Breather Filter, and Hydraulic Oil Filter as follows:

1. Run the sweeper until hydraulic oil is warm.
2. Stop the engine.
3. Remove both magnetic drain plugs from the bottom of the oil reservoir (one on each side). Drain the oil into a large container.
4. Clean and reinstall both magnetic drain plugs.
5. Replace the reservoir breather filter.
6. Replace the hydraulic filter.
7. Fill reservoir with hydraulic oil as recommended from the pump manufacturer.

**IMPORTANT:** If Hydraulic Oil is replaced due to contamination, it is imperative to **DISMANTLE AND THOROUGHLY CLEAN** the hydraulic reservoir, lines and hoses, all other components, and flush the entire hydraulic system before new oil is added!

8. Run the sweeper for several minutes and check for leaks. (Actuate all cylinder circuits and run all motor circuits).
9. Add oil as required. Oil level should be above low level sight glass.

**Refer to the Lubrication and Maintenance Check List at the end of the manual.**



## **Gutter Broom Angle Adjustments**

(Refer to *Figure 6: Gutter Broom Assembly*) also  
(Refer to *Figure 7: Gutter Broom Pattern*)

The proper tilt angle must be maintained for effective sweeping. If the broom is set too flat, it will tend to throw debris back to the curb. If the broom angles are too great, streaks of debris will be left on the pavement.

### **Correct Gutter Broom Angle**

The broom angles are correct when the front outside 1/3 of the broom contacts the pavement. With the brooms fully lowered, ensure the gutter broom pattern overlaps the main broom pattern. This setting is met when the brooms are adjusted between 3° - 5° tilt angle.

The attack angles of the brooms are adjustable as well but are set at the factory and should not require further adjustment except for special applications. Only the tilt angle may need modification from time to time. The attack angle should be set to 3° - 5° for normal sweeping.

### **Adjust Tilt Angle**

(Refer to *Figure 6: Gutter Broom Assembly*) also  
(Refer to *Figure 7: Gutter Broom Pattern*)

1. Loosen angle adjustment lock nut (B) to allow movement of the angle adjustment turnbuckle (C).
2. To increase the tilt angle of the gutter brooms, decrease the length of turnbuckle (C). To decrease the angle, lengthen turnbuckle (C).
3. Once the proper tilt angle is achieved, tighten angle adjustment lock nut (B) to secure brooms.

### **Adjust Front to Back Angle**

(Refer to *Figure 7: Gutter Broom Pattern*)

1. Loosen lock nut on adjustment turnbuckle (L) to allow movement of the lower section of the gutter broom.
2. To increase the forward attack angle of the broom to the sweeping surface, turnbuckle must be shortened. To decrease the attack angle or flatten the broom, turnbuckle must be lengthened. The attack angle should be set to 30 – 50 for normal sweeping.
3. Once the correct angle is adjusted, make sure the turnbuckle lock nut is tightened.



## Gutter Broom Pressure

Proper broom pressure is very important. Low broom pressure will cause poor sweeping. High broom pressure will cause excessive broom wear.

**IMPORTANT:** Be sure gutter broom angle is correct before setting gutter broom pressure.

## Correct Gutter Broom Pressure

1. Lower brooms onto the road surface and have them rotate with the sweeper stationary.
2. Stop and raise the brooms.
3. Drive sweeper off the swept pattern.
4. Inspect the pattern: If the gutter broom pressure adjustment is correct, the front outside 1/3 of the broom must be in contact with the road surface.

## Adjust Gutter Broom Pressure

(Refer to *Figure 6: Gutter Broom Assembly*)

1. Loosen turnbuckle lock nut (I) on suspension turnbuckle (H).
2. To increase down pressure on gutter broom lengthen the turnbuckle, to reduce down pressure shorten the turnbuckle. By lengthening or shortening the turnbuckle will affect spring (D) which increases or lowers gutter broom pressure to compensate for wear.
3. Tighten lock nut (I) on suspension turnbuckle (H)

## Sweeping Width

(Refer to *Figure 6: Gutter Broom Assembly*) also

(Refer to *Figure 7: Gutter Broom Pattern*)

The sweeping path width can be adjusted for a broader or narrower sweeping path.

**NOTE:** The wider the sweeping path the greater the possibility of damaging the broom linkages from impacts.

Tighten bolt (K) to decrease the sweeping path and loosen to increase sweeping path.

**NOTE:** The wider the sweeping path the greater the possibility of streaking between the rear broom and the main broom. A sufficient gutter broom to main broom overlap must be maintained.




## **Gutter Broom Impact Protection Spring**

(Refer to *Figure 6: Gutter Broom Assembly*) also  
(Refer to *Figure 7: Gutter Broom Pattern*)

Each gutter broom is equipped with an impact protection spring (A) to protect it from side impact damage. There is no adjustment for this spring.

**NOTE:** The wider the sweeping path the greater the possibility of damaging the broom linkages from impacts.

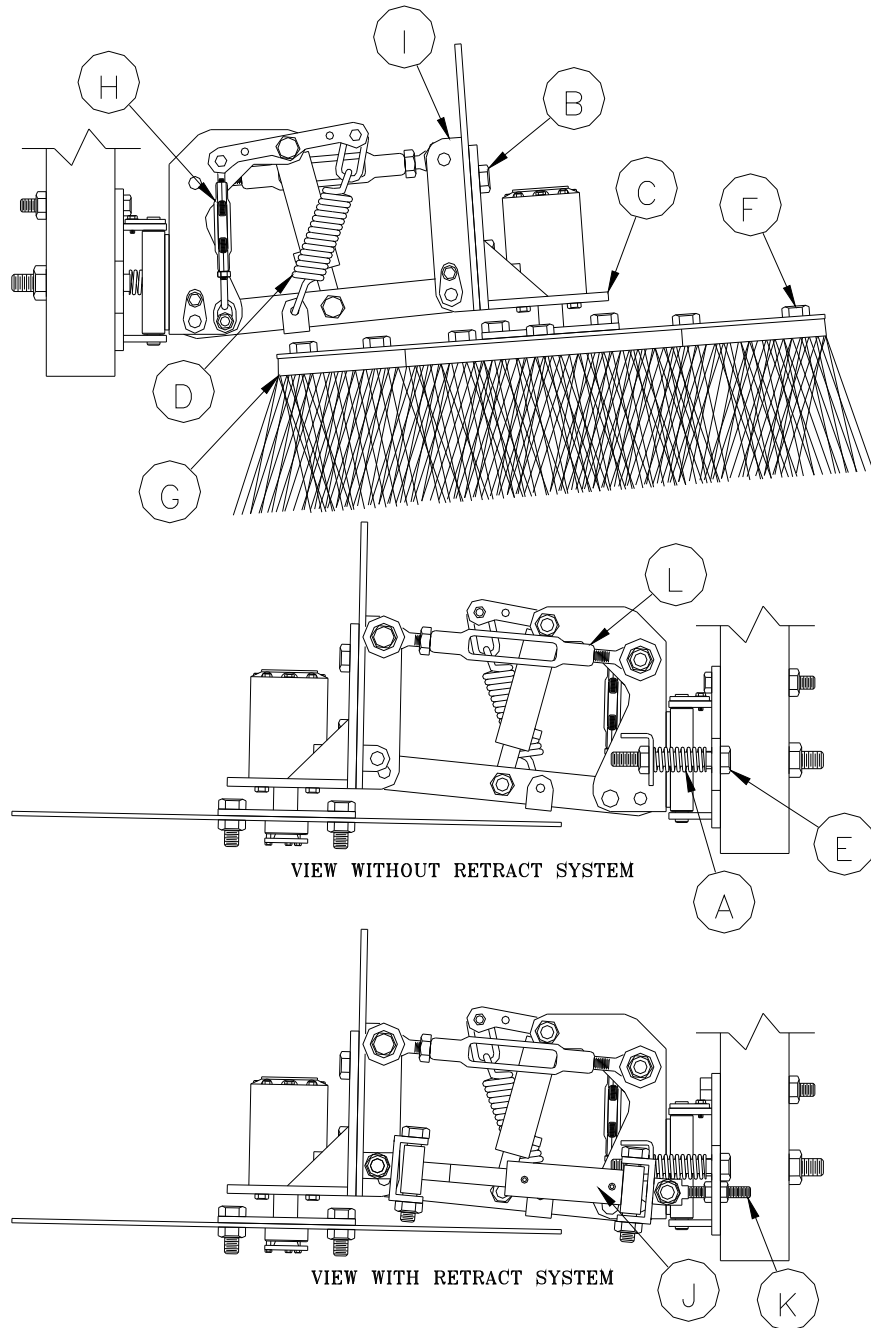

- |                              |                                |
|------------------------------|--------------------------------|
| A. IMPACT SUPPRESSION SPRING | G. BRUSH SEGMENTS              |
| B. SIDE TILT ADJUSTMENT BOLT | H. SUSPENSION ADJ. TURNBUCKLE  |
| C. MOTOR BRACKET             | I. LINKAGE MOUNT               |
| D. SUSPENSION SPRING         | J. RETRACT CYLINDER            |
| E. PATH WIDTH ADJ. BOLT      | K. RETRACT ADJ. BOLT           |
| F. SEGMENT RETAINING BOLTS   | L. FRONT/BACK ANGLE TURNBUCKLE |

**Figure 6: Gutter Broom Assembly**



FRONT OF SWEEPER

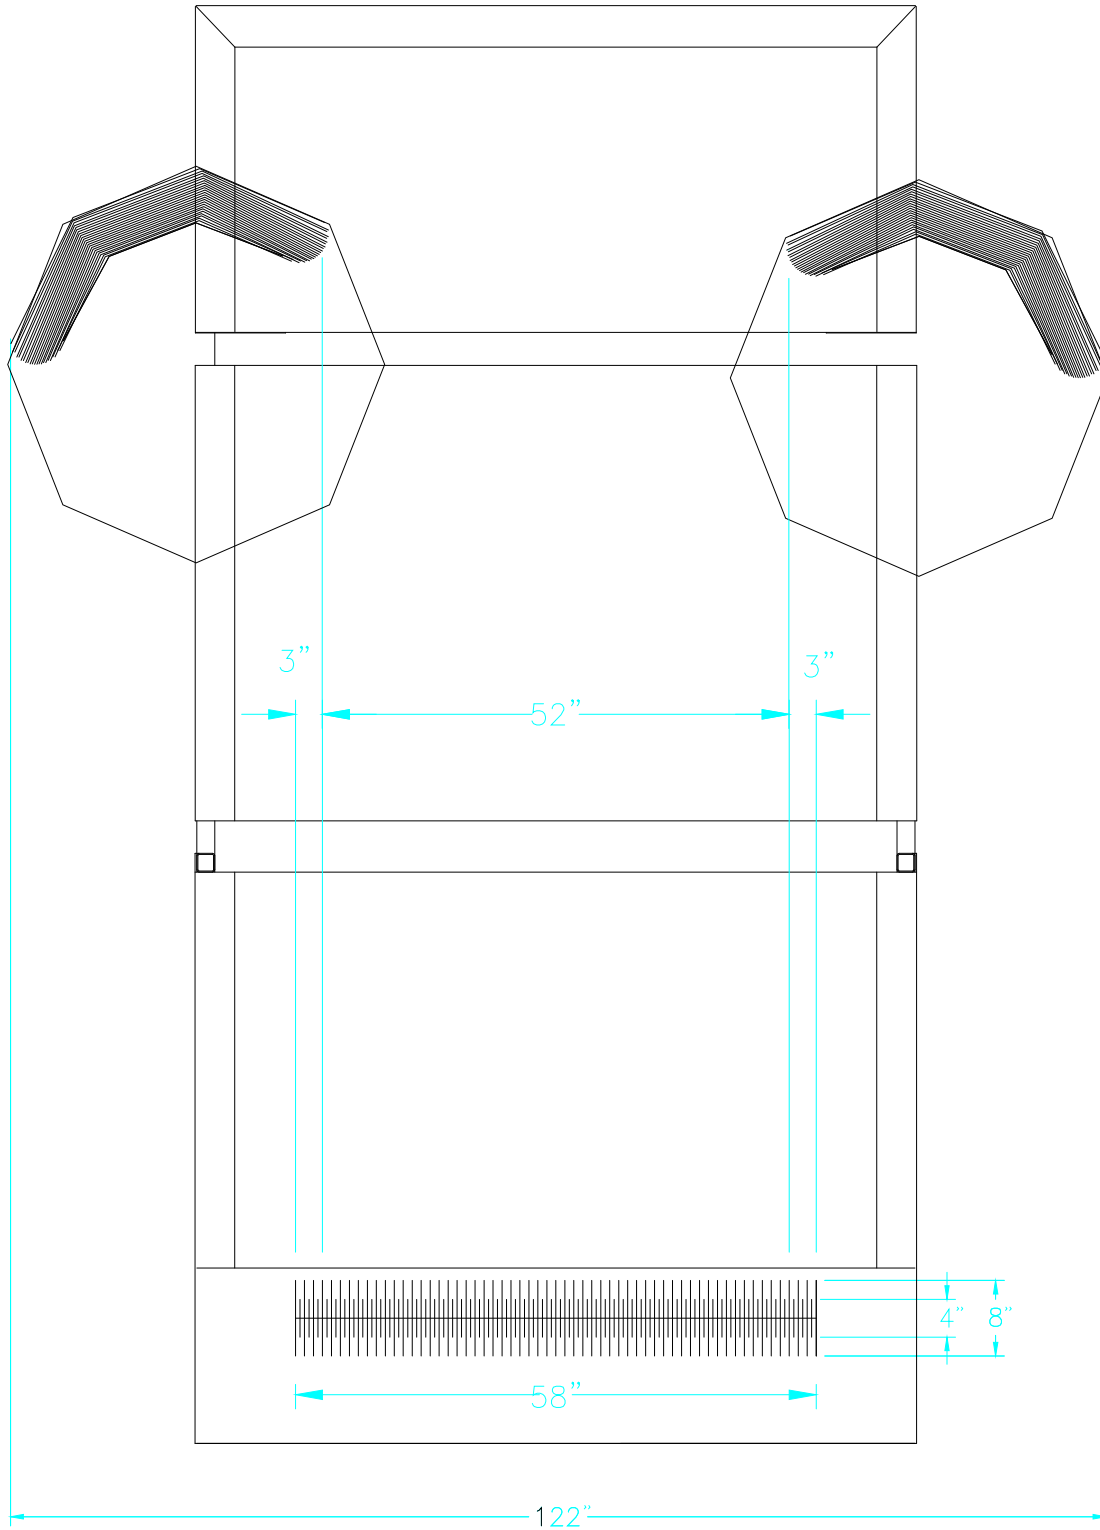



Figure 7: Correct Broom Pattern

## Main Broom Pressure

(Refer to *Figure 8: Main Broom Assembly*)

The main broom pressure is controlled by the tension on the suspension spring (F) while the shock absorber (E) applies down pressure. To adjust the down pressure:

1. Loosen the lock nut on turnbuckle (D).
2. Lengthen the turnbuckle to increase the down pressure and shorten the turnbuckle to decrease down pressure.

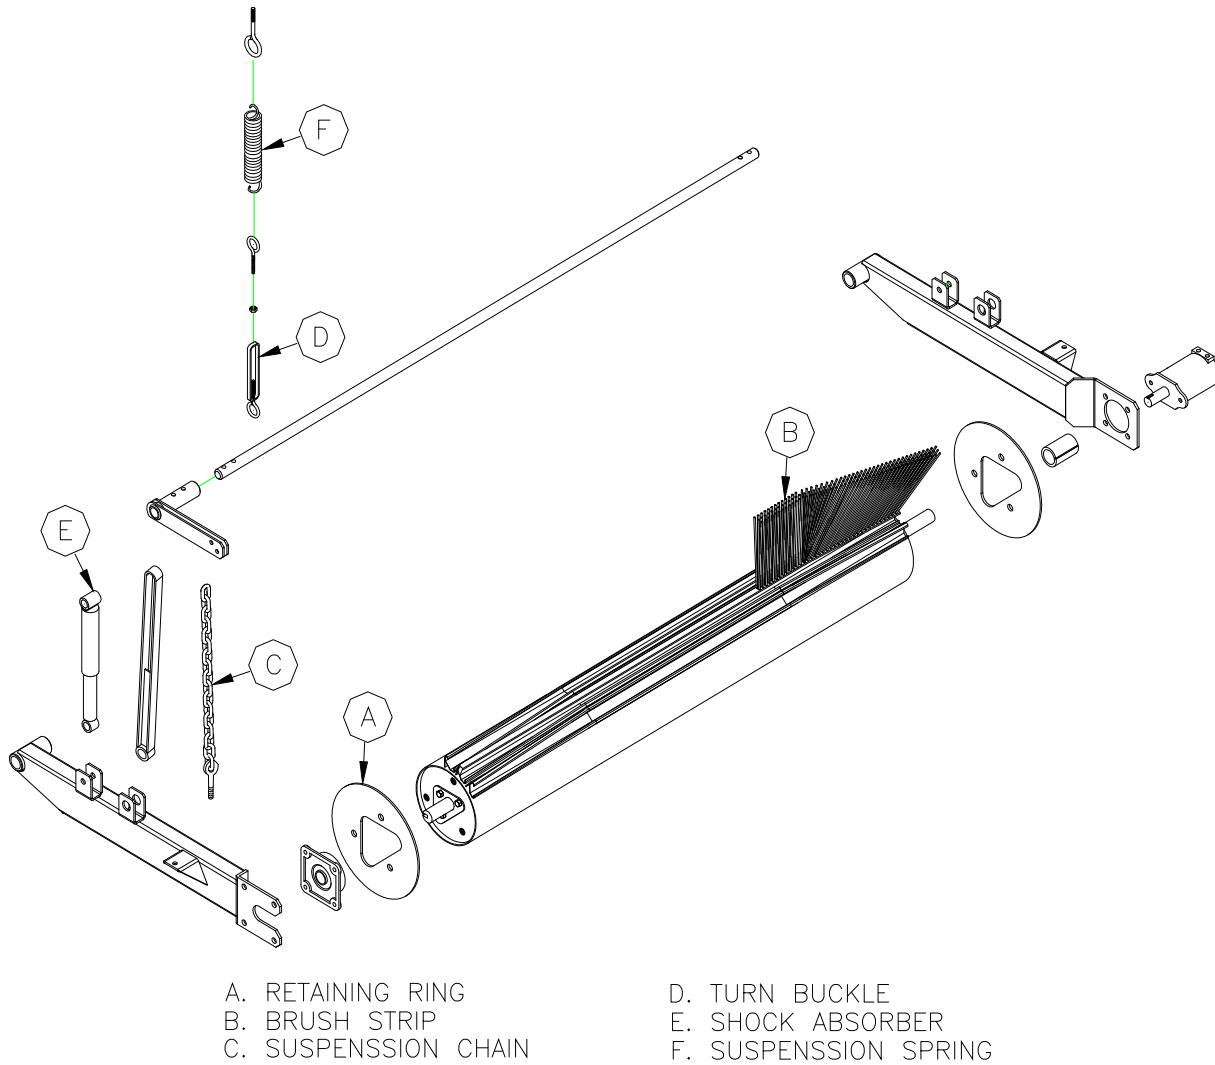

*Figure 8: Main Broom Assembly*

## Elevator Chain Adjustment

### Upper Drive Shaft

(Refer to *Figure 13*: Elevator)

1. Loosen bolts (C).
2. Loosen lock nut (E).
3. Tighten adjustment bolt (D).

**NOTE:** Bottom shaft and bearings (P) should never require adjusting. This shaft is preset at the factory.

**NOTE:** Elevator chains should always be run **as loose as possible once in operation**, without rubbing on each other or the separator bar.

**NOTE:** Always adjust upper drive shaft first. When upper shaft has moved to the end of its travel then center shaft can be adjusted.

**NOTE:** Slide (A) has limited travel because of bolts on bearing (B). Slide (A) will only move as far as bolts on bearing (B) come to the end of the travel.

4. Once bolt (D) has been adjusted, tighten lock nut (E).
5. Tighten bolts (C).

### Center Idler Shaft


1. Loosen bolts on bearing (H).
2. Loosen lock nut (G).
3. Tighten bolt (F) until desired chain tension is reached.
4. Tighten bolts on bearing (H).
5. Tighten lock nut (G).

**NOTE:** The correct tension on **new elevator chain and sprockets only** is 1-3” deflection on the chain between shaft (L) and shaft (J).

**NOTE:** Partially **worn chain and sprockets** should be run **as loose as possible** between shaft (L) and shaft (J). **Chains that are being run to tight will have excessive wear and create excessive load on the elevator.**

**NOTE:** If all the adjustment has been used and the chain is still loose, a ½ or 1 full link may have to be removed by loosening the shaft adjustments, remove a link and readjust the shafts using the procedure above.

(Refer to *Figure 9*: Elevator Chain Adjustment)

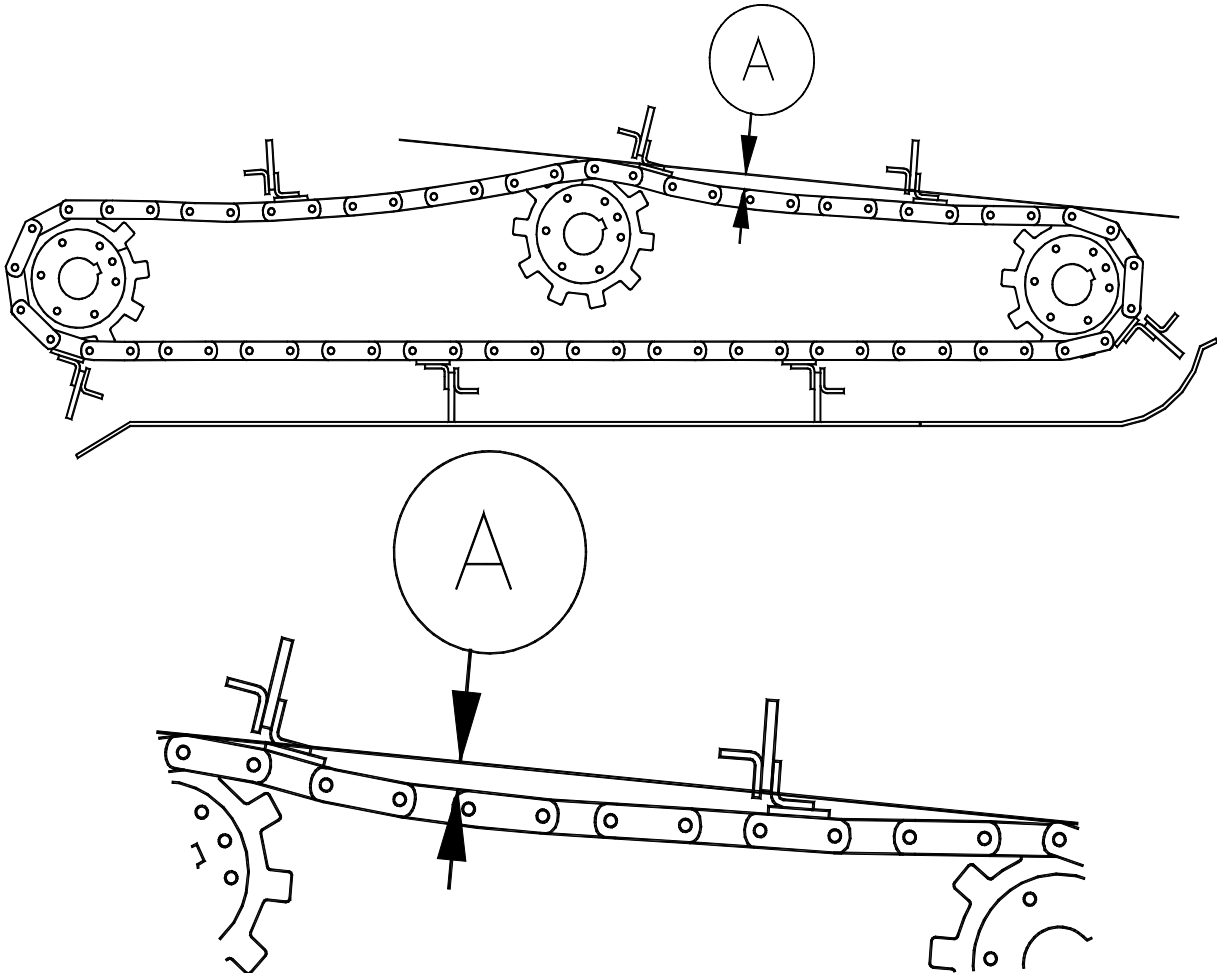

Refer to *Figure 9: Elevator Chain Adjustment*





# REPAIR AND MAINTENANCE





## Maintenance Filter Cross Reference

Filter Manufacturer		KUBOTA	DONALDSON	FRAM	CARQUEST	BALDWIN	ZING A
	141						
small hyd. oil filter	6		P551551	P1653A	85259	BT839-10	AE-10
<b>V2403</b>							
	110						
engine oil	6	HH164-32430	P550939	PH7328	85307	B7152	
	139						
outer air filter	0		P822768	CA9246	88489	RS3988	
	139						
inner air filter	1		P822769	CA9246SY	88490	RS3703	
	110						
fuel filter	8	16631-43560	P502163	P9458	86398	BF7967	

### Gutter Broom Segment Replacement

(Refer to *Figure 6: Gutter Broom Assembly*)

1. Fully raise brooms.
2. Remove bolts (F) that hold broom segments (G) in place.
3. Bolt new broom segments in place.
4. Repeat this procedure for all segments.
5. After installing new segments, gutter broom pressure must be reset as per Gutter .

### Main Broom Strip Replacement


(Refer to *Figure 10: Main Broom Assembly*)

1. Main broom must be raised for this operation so broom can be rotated.
2. Remove 3 bolts holding retaining ring (A) to the mandrel (B).
3. Lower retaining ring (A) onto the mandrel end shaft.
4. Pull worn broom strips out the side of machine.
5. Clean the C-channel before inserting the new strips.
6. As each strip is removed from the mandrel, immediately replace with a new strip. Ensure the new broom strips slide into the C-channel. If strip is tight in the C-ch:

**NOTE:** Eighteen broom strips are required to complete the main broom.

7. After all strips have been replaced, reinstall retaining ring (A) onto the mandrel (I)



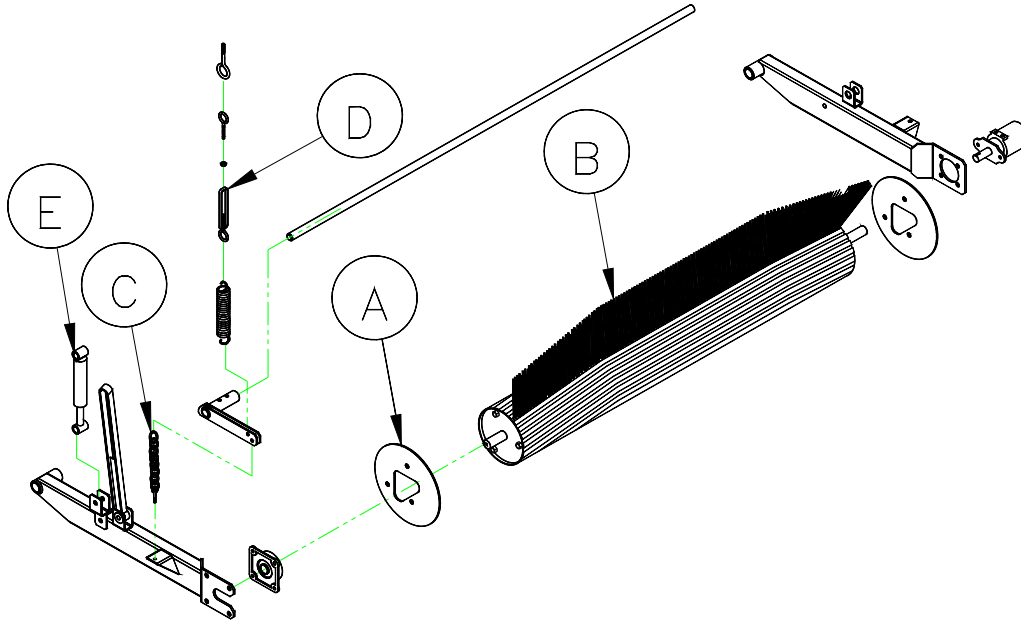


*Figure 10: Main Broom Assembly*

## Main Broom Bearing Replacement

(Refer to *Figure 11: Main Broom Arm Assembly*)

1. Lower the main broom fully to the shop floor.
2. If the bearing has an Eccentric Locking Collar, loosen the set screws (C) and tap the collar in the reverse direction of the shaft rotation, using a punch and hammer to unlock the Collar and bearing assembly (B) from the shaft (F). If the bearing does not have the Eccentric Locking Collar, loosen the set screws (C) to unlock the bearing (B) from the shaft (F).
3. Remove all 4 bolts (D) retaining bearing (B) to arm (G).
4. Clean shaft (F) with emery cloth to prevent bearing from hanging up when removing.
5. Slide bearing assembly (B) off end of broom shaft (F). A Bearing Puller may have to be used.
6. Install new bearing assembly, reversing the procedure for removal. Ensure that the bearing grease nipple (E) is pointing towards the rear of machine.
7. Centre the broom between the rear drag shoes by moving bearing (B) on the main broom shaft (F). Pull or push on main broom arm as required.
8. If bearing has an Eccentric Locking Collar, lock in place by using the Collar rotated in the direction of the shaft rotation. Tighten all set screws (C) using a thread lock. If bearing does not have Eccentric Locking Collar, tighten all set screws (C) using a thread lock.

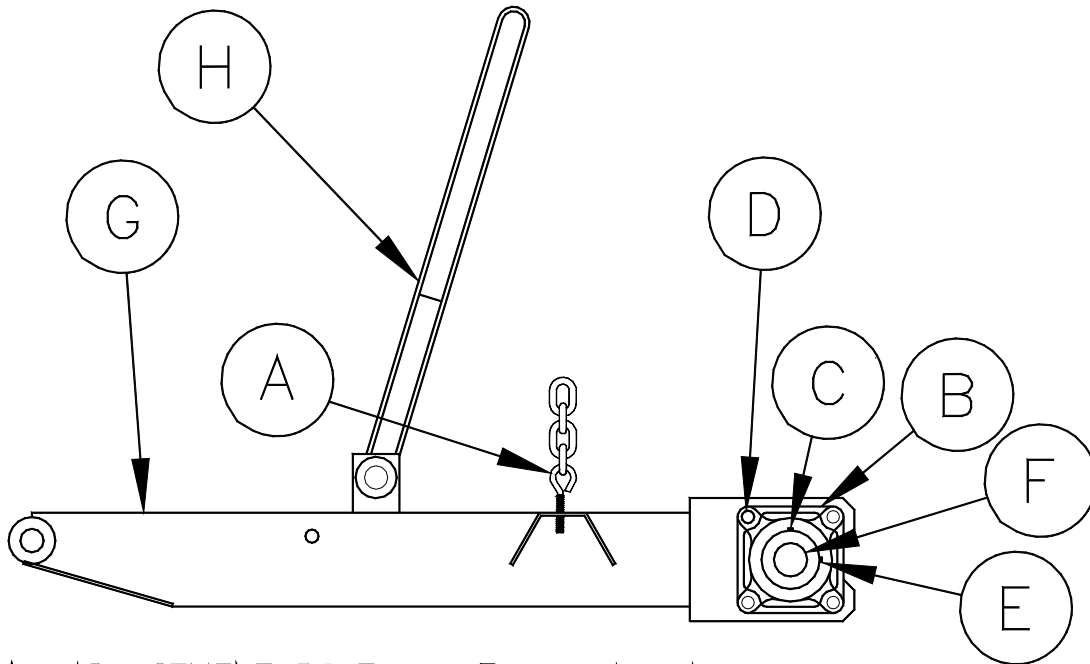


- |                       |                          |
|-----------------------|--------------------------|
| A. ADJUSTMENT BOLT    | E. GREASE NIPPLE         |
| B. MAIN BROOM BEARING | F. MAIN BROOM SHAFT      |
| C. SET SCREW          | G. MAIN BROOM ARM        |
| D. RETAINING NUT      | H. MAIN BROOM LIFT STRAP |

*Figure 11: Main Broom Arm Assembly*

## Carbide Drag Shoe Replacement

(Refer to *Figure 12: Carbide Drag Shoe*)

1. Raise the main broom.
2. Remove bolts (B) and worn drag shoe (C).
3. Install new carbide drag shoe and bolts (B).

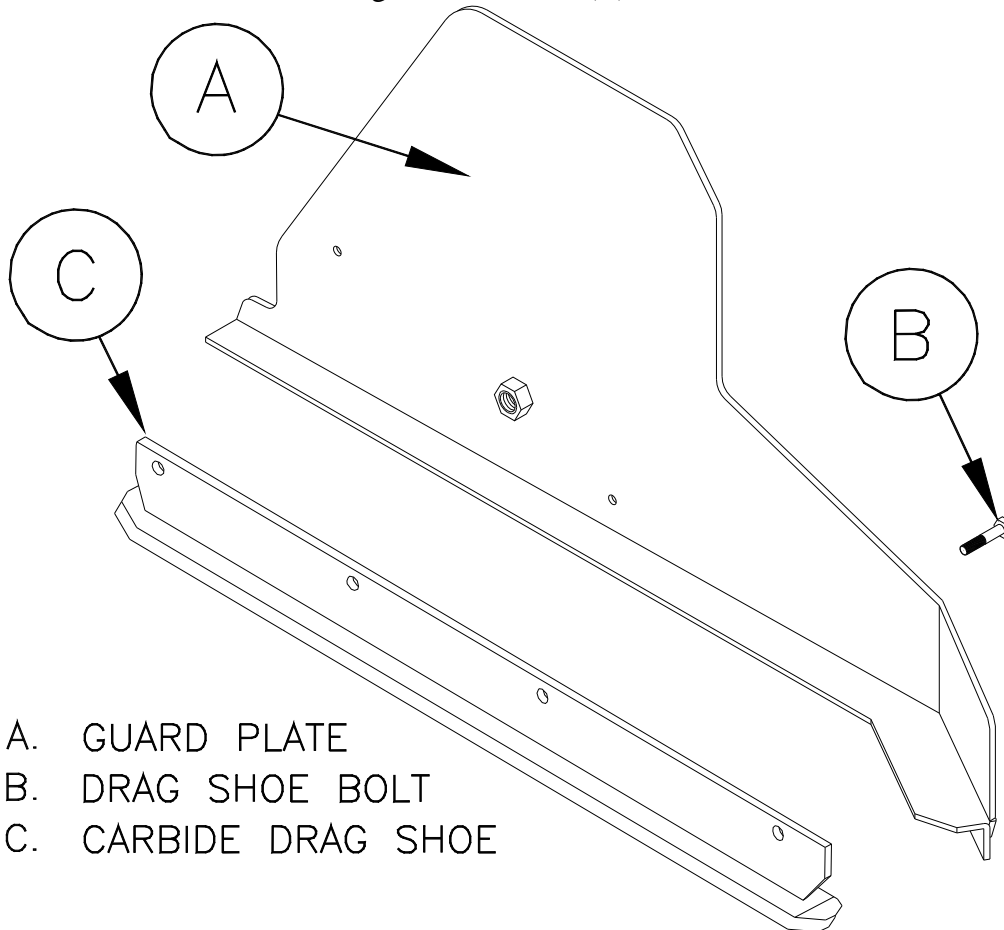

- A. GUARD PLATE
- B. DRAG SHOE BOLT
- C. CARBIDE DRAG SHOE

*Figure 12: Carbide Drag Shoe*

## Elevator Chain, Sprocket/Shaft Replacement

(Refer to *Figure 13: Elevator*)

1. Remove rear canopy.
2. Remove water tank.
3. Remove elevator canopy and canopy extension.

**NOTE:** the procedure give is for one side only and must be repeated for the opposite side.

4. Loosen top shaft bolts (C).



5. Loosen lock nut (E).
6. By adjusting bolt (D), move the top shaft slide (A) down closer to the middle of elevator housing until bearing bolts are at the bottom of the travel.
7. Loosen the bolts on bearing (H).
8. Loosen lock nut (G).
9. By adjusting bolt (F), lower bearing (H) to the bottom of the retaining bolt slots.
10. Remove squeegee (M) and squeegee angle (N) assembly from the chain.
11. Remove elevator chain master link pin and let chain fall to the floor and remove.

**NOTE:** At this point it is vary easy to replace or repair any damage to the elevator housing, shafts, sprockets, and liners if required.

**NOTE:** The elevator sprockets are split for easy removal but when installing make sure the sprockets on the same shaft are timed to each other.

**NOTE:** One of the elevator shaft retainers for each sprocket are tack welded to the shaft to maintain chain alignment, make sure one of the retainers are welded.

**NOTE:** Bottom shaft and bearings (P) should never require adjusting. This shaft is preset at the factory.

12. Install new chain (K) making sure the squeegee attachment links are aligned.
13. Adjust top shaft first using adjustment bolts (D) until proper chain tension is achieved.

**NOTE:** When adjusting top shaft make sure both sides move equally.


14. Adjust center shaft suing adjustment bolt (F) until the sprocket touches the chain.

**NOTE:** Do not add to the tension of the chain at this time. The purpose of the center shaft is to reduce chain slap when going from sweeping forward to sweeping reverse and to adjust for chain stretch as chain wears.

15. Reinstall squeegee and squeegee angles on chain.
16. Tighten all bearing slides, lock nuts, and bearing bolts.
17. Reinstall elevator canopy and canopy extension.
18. Reinstall water tank.
19. Reinstall rear canopy.

**NOTE:** The correct tension on **new** elevator chain is 1-3” deflection on the chain between shafts.

**NOTE:** Elevator chains should always be run as loose as possible, once in operation, without rubbing on each other or the separator bar.

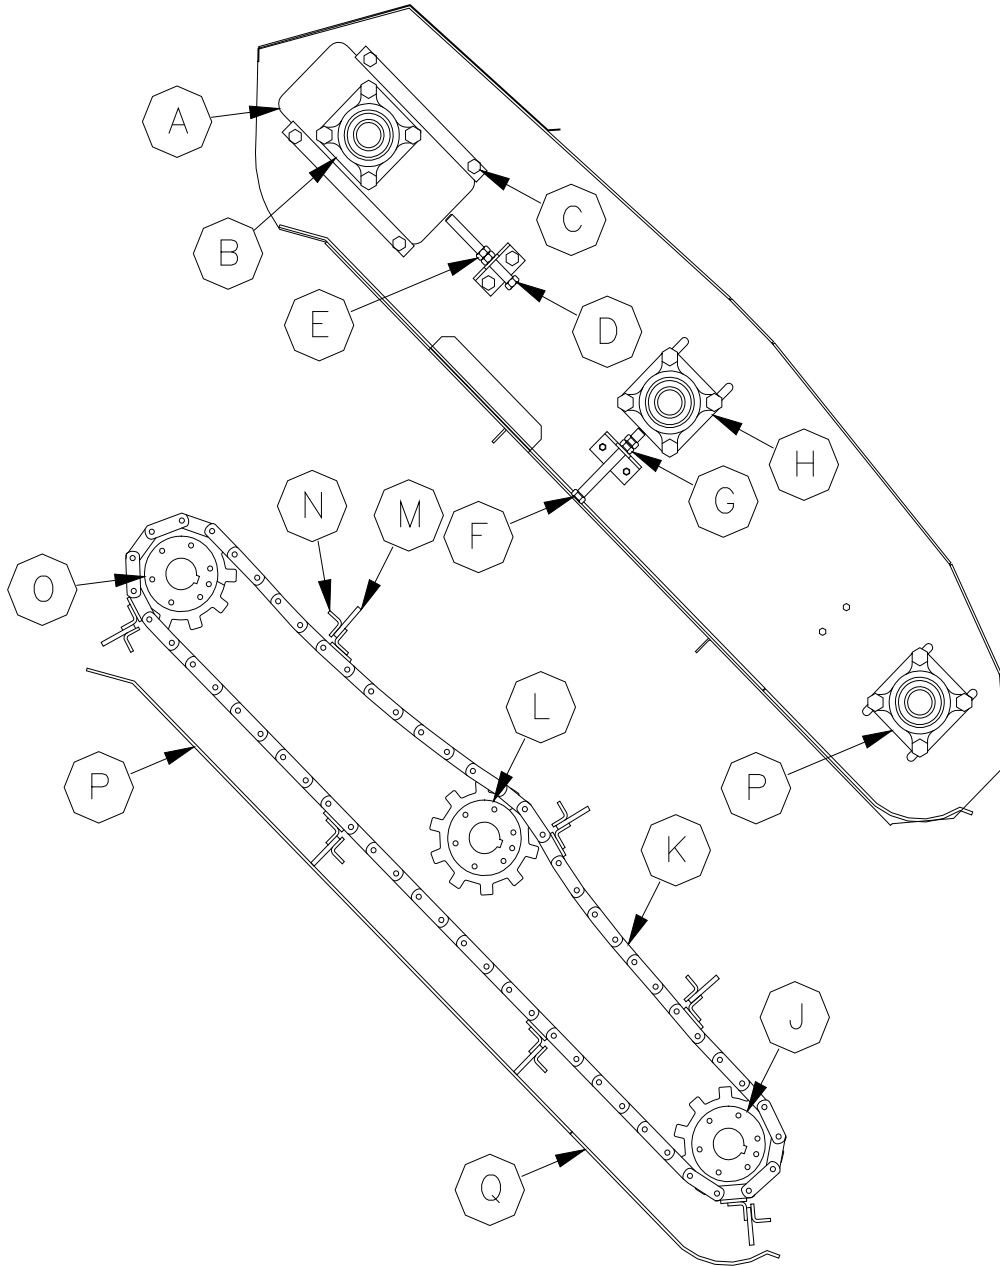

- |                         |                   |
|-------------------------|-------------------|
| A. TOP SHAFT SLIDE      | J. BOTTOM SHAFT   |
| B. TOP SHAFT BEARING    | K. ELEVATOR CHAIN |
| C. SLIDE RETAINER       | L. CENTER SHAFT   |
| D. ADJUSTMENT BOLT      | M. SQUEEGEE       |
| E. LOCK NUT             | N. SQUEEGEE ANGLE |
| F. ADJUSTMENT BOLT      | O. TOP SHAFT      |
| G. LOCK NUT             | P. TOP LINER      |
| H. CENTER SHAFT BEARING | Q. BOTTOM LINER   |
| I. BOTTOM SHAFT BEARING |                   |

*Figure 13: Elevator*



### **Bottom Liner Replacement**

1. Drive machine up on blocks ensuring machine is secure before going under machine.
2. Remove bolts that hold liner in place.
3. Remove liner.
4. Remove bottom rubber and install on new liner.
5. Reinstall liner.

### **Top Liner Replacement**

1. Remove rear canopy.
2. Remove water tank.
3. Remove elevator canopy and canopy extension.
4. Remove bolts from top liner.
5. Pull line out from the top of elevator.
6. Replace liner.
7. Reinstall elevator canopy and canopy extension.
8. Reinstall water tank.
9. Reinstall rear canopy.

### **Main Broom Hydraulic Motor Replacement**

1. Lower broom to floor.
2. Loosen bolts on main broom coupler.
3. Disconnect hydraulic lines to motor.
4. Remove motor bolts.
5. Replace motor.

**NOTE:** Motor requires an offset key in shaft, 5/16" side of key goes into the motor shaft and 1/4" goes into coupler.

6. Reinstall and tighten mounting bolts.

**NOTE:** Ensure motor shaft is completely in coupler.

7. Tighten coupler bolts.



## Gutter Broom Hydraulic Motor Replacement

1. Lower gutter broom to floor.
2. Remove one segment from the gutter broom plate.
3. From underneath remove center mount retaining bolt.
4. Remove bolts from taper lock bushing.
5. Put bolts that are removed from the bushing into the threaded holes in bushing.
6. Tighten bolts evenly until taper lock releases from shaft.
7. Gutter broom plate should slip off motor shaft.
8. Disconnect hydraulic lines to motor.
9. Remove motor mounting bolts.
10. Replace motor.
11. Reinstall and tighten motor mounting bolts.

**NOTE:** Motor requires an offset key in shaft, 5/16" side of key goes into the motor shaft and 1/4" goes into mounting plate.

12. Using a floor jack, lift gutter broom mounting plate onto shaft.
13. Tighten taper lock bushing evenly, tightening mounting plate to shaft.
14. Reinstall center mount bolts.
15. Tighten all plate and mount bolts.
16. Reinstall gutter broom segment.

## Elevator Hydraulic Motor Replacement

1. Remove drive chain mount cover.
2. Disconnect drive chain.
3. Loosen set screws on motor sprocket.
4. Remove sprocket.
5. Disconnect hydraulic lines.
6. Remove motor mounting bolts.
7. Replace motor.

**NOTE:** Motor requires an offset key in shaft, 5/16" side of key goes into the motor shaft and 1/4" goes sprocket.


8. Reinstall motor mount bolts.
9. Reinstall hydraulic lines.
10. Reinstall sprocket.
11. Connect drive chain.
12. Reinstall cover.

## Hydraulic Pressure Adjustment


(for RH VALVE STACK (Passengers Side))  
(set pressure to 2,850 psi @ 2 000 rpm)

1. Install a 0-5000 psi pressure gauge in test port A on top of valve.
2. Remove cap from the relief valve.
3. Take engine to 2,000 rpm.
4. Push hopper lift switch and raise hopper until cylinders are bottomed.
5. While holding switch, read pressure gauge.
6. Turn relief screw clockwise to increase pressure and counter clockwise to lower pressure.
7. Adjust pressure to a maximum of 2,850 psi.
8. Replace relief cap and gauge.

80120 LH VALVE SPOOL  
ASSEMBLY  
(DRIVERS SIDE)  
SN 4011 & UP

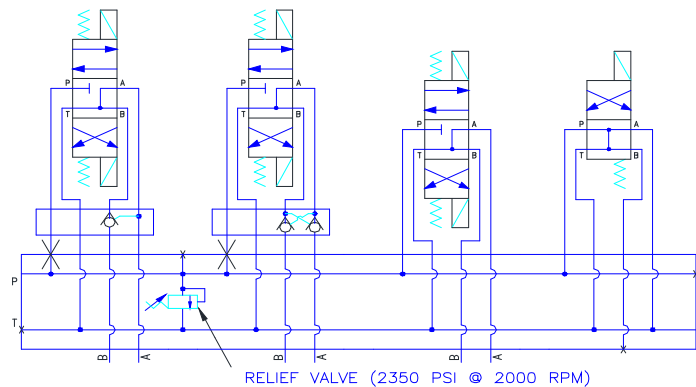

80134 RH VALVE SPOOL  
ASSEMBLY  
(PASSENGER SIDE)  
SN 4011 & UP

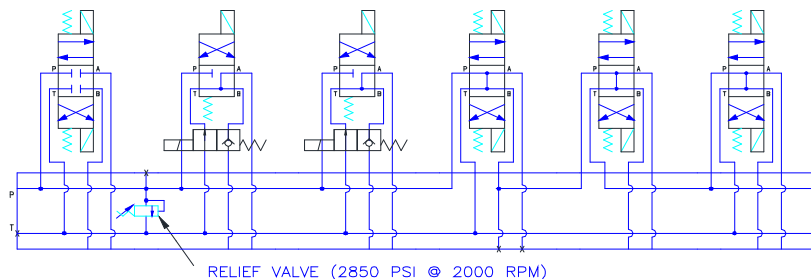





(for LH VALVE STACK (Driver Side))  
(set pressure to 2,350 psi @ 2 000 rpm)


1. Install a 0-5000 psi pressure gauge in test port A on top of valve.
2. Remove cap from the relief valve.
3. Take engine to 2,000 rpm.
4. Push hopper dump switch and dump hopper until cylinders are bottomed.
5. While holding switch, read pressure gauge.
6. Turn relief screw clockwise to increase pressure and counter clockwise to lower pressure.
7. Adjust pressure to a maximum of 2,350 psi.
8. Replace relief cap and gauge.

### **Stall Alarm Adjustment**

1. Remove the DIN electrical connector from the pressure switch.
2. Insert a 3/32" Allen wrench in the DIN connector retaining screw hole.
  - a. Turn the Allen screw at the bottom of the hole to raise and lower the pressure setting of the switch. Counter clockwise lowers the pressure, Clockwise raises the pressure setting of the switch.
3. Remove the retaining screw from the DIN connector.
4. Place the DIN connector back onto the pressure switch.
5. Start the auxiliary engine.
6. Use the procedure for setting the LH valve stack pressure.
7. If the stall alarm does not come on, use the Allen wrench, while the DIN connector is on, to turn the Allen screw counter clockwise until the alarm comes on. Once the alarm is on turn the screw clockwise until the alarms just goes off.
8. If the stall alarm is on then turn the screw clockwise until the alarm just goes off.
9. Remove the Allen wrench and replace the DIN retaining screw.

This procedure sets the alarm at just slightly higher pressure than the pressure relief valve while the engine is at 1000 rpm. When the engine is at operating speeds the alarm will activate when the elevator is stalled. In normal operation it is not uncommon to have the alarm chirp when the main brooms up/down function is activated and stalled at the end of the cylinder stroke.

### Electrical Activation Sequences At Valve Connectors

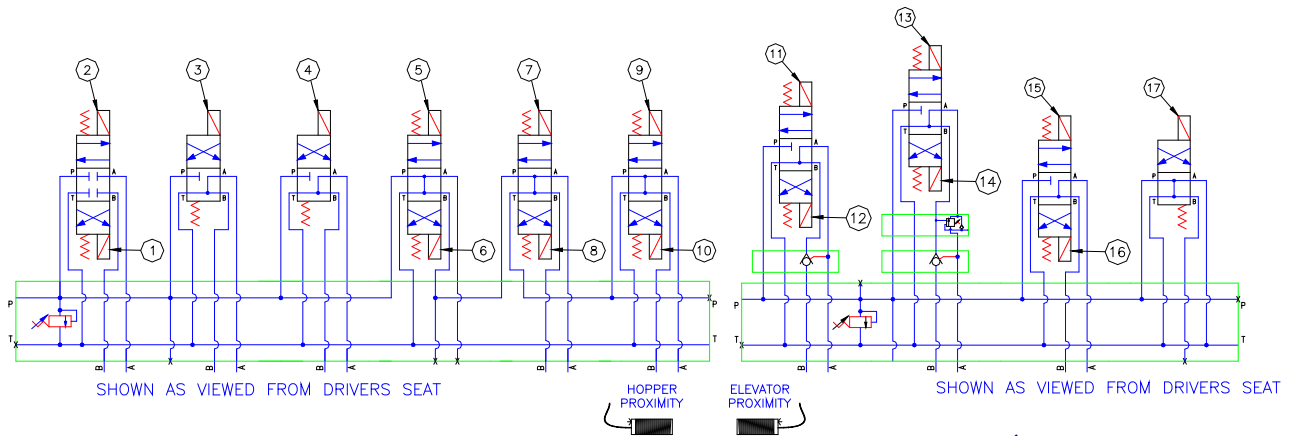

DIN #	HOPPER RAISE	HOPPER LOWER	HOPPER DUMP	HOPPER RETRACT	BROOMS RAISE	BROOMS LOWER	MB SWEEP FORWARD	MB SWEEP REVERSE	LH GB LOWER (FLOAT)	LH GB RAISE	RH GB LOWER (FLOAT)	RH GB RAISE	LH GB SWEEP FORWARD	LH GB SWEEP REVERSE	RH GB SWEEP FORWARD	RH GB SWEEP REVERSE
1	X															
2		X														
3					X				X							
4					X						X					
5						X			X		X		X	X	X	X
6	X	X			X				X		X					
7													X			
8														X		
9															X	
10																X
11					X											
12						X										
13				X												
14			X													
15							X									
16								X								
17			X	X	X	X	X	X	X							





# Lubrication and Maintenance Check List





EVERY 10 HOURS

**STARFIRE SWEEPER DAILY  
MAINTENANCE CHECKLIST**

Perform this routine BEFORE every shift or after 10 hours of operation (whichever is sooner)

Sweeper S/N: \_\_\_\_\_ Date: \_\_\_\_\_ Hours: \_\_\_\_\_ Miles: \_\_\_\_\_

This CHECKLIST PERFORMED BY: \_\_\_\_\_

		<u>Done:</u>
1	The OPERATOR has READ and THOROUGHLY UNDERSTANDS the "Safety, Operations and Maintenance Manual" for this sweeper and understands the safe operation of the vehicle including the chassis, the chassis "Owners Manual" and the diesel particulate filter. Refuel with "ULTRA LOW Sulfur Highway Diesel" ONLY.	<input type="checkbox"/>
2	Check Engine Oil (dipstick) and Coolant Levels on BOTH Engines.	<input type="checkbox"/>
3	Check Hydraulic Oil Level on the site tube on side of hydraulic oil tank.	<input type="checkbox"/>
4	Check Air Filter Restriction Indicator (AFRI) for BOTH Engines. If AFRI shows that the airflow through filter is too low, change the air filter and RESET the Indicator. Write the Date and Hours on the new filter and Note the change on this form by putting a circle around the filter changed today- TRUCK AUXILIARY	<input type="checkbox"/>
5	Check ALL tires for proper inflation and tread wear.	<input type="checkbox"/>
6	Check that Back-up Alarm, Lights, and Strobes are working properly.	<input type="checkbox"/>
7	Clean water system filter. Inspect water system spray nozzles. Clean, if necessary.	<input type="checkbox"/>
8	Check sweeper functions for proper operation. "Note" any exceptions.	<input type="checkbox"/>
9	Check broom sweeping pattern of side and main brooms. Correct any bad pattern.	<input type="checkbox"/>
10	Service truck chassis - refer to Owners Manual.	<input type="checkbox"/>
11	Check power steering, transmission, and windshield washer fluids.	<input type="checkbox"/>
12	Inspect for any damage and any loose items such as wires, fittings, pins, nuts and bolts. Correct problem and/or NOTE below.	<input type="checkbox"/>



**NOTES and REMARKS:**

---



---



---

Perform this routine AFTER every shift or after 10 hours of operation (whichever is sooner)

Sweeper S/N:                      Date:                      Hours:                      Miles:

**This CHECKLIST PERFORMED BY:**

		<u>Done:</u>
1	Allow BOTH engines to idle for 2 minutes before shut-down.	<input type="checkbox"/>
2	WASH THOROUGHLY: Including engine radiators, hydraulic oil cooler, elevator (including the shafts), hopper and hopper lift frame/scissors area. Be sure engine is cool before washing. DO NOT use high pressure to wash radiators or hydraulic oil cooler fins.	<input type="checkbox"/>
3	Grease elevator shaft bearings and main broom stub-shaft bearing with EP2 grease.  Note: the shafts should be rotating while being greased to insure proper distribution of lubricant.	<input type="checkbox"/>
4	Check for and remove any tape, string, etc., wound around broom motor and elevator shafts.	<input type="checkbox"/>
5	Inspect for any damage and any loose items such as wires, fittings, pins, nuts and bolts. Correct problem and/or NOTE below.	<input type="checkbox"/>

**NOTES and REMARKS:**

---



---



---

**Thank you for choosing Stewart-Amos Sweepers! HAPPY SWEEPING!!!**



**EVERY 40 HOURS**

**STARFIRE SWEEPER WEEKLY  
MAINTENANCE CHECKLIST**

Perform this routine WEEKLY or after 40 hours of operation (whichever is sooner)

Sweeper S/N: \_\_\_\_\_ Date: \_\_\_\_\_ Hours: \_\_\_\_\_ Miles: \_\_\_\_\_

This CHECKLIST PERFORMED BY: \_\_\_\_\_

		<u>Done:</u>
<b>1</b>	The OPERATOR has READ and THOROUGHLY UNDERSTANDS the "Safety, Operations and Maintenance Manual" for this sweeper and understands the safe operation of the vehicle including the chassis, the chassis "Owners Manual" and the diesel particulate filter. Refuel with "ULTRA LOW Sulfur Highway Diesel" ONLY.	<input type="checkbox"/>
<b>2</b>	Perform the DAILY ROUTINE.	<input type="checkbox"/>
<b>3</b>	Grease the pivot point on the main broom and gutter broom "arms".	<input type="checkbox"/>
<b>4</b>	Perform an extra thorough cleaning of the hydraulic oil cooler.	<input type="checkbox"/>
<b>5</b>	Service truck chassis - refer to Owners Manual.	<input type="checkbox"/>
<b>6</b>	Inspect for any damage and any loose items such as wires, fittings, pins, nuts and bolts. Correct problem and/or NOTE below.	<input type="checkbox"/>

**NOTES and REMARKS:**

---



---



---



---

**Thank you for choosing Stewart-Amos Sweepers! HAPPY SWEEPING!!!**





**EVERY 250 HOURS**

**STARFIRE SWEEPER PERIODIC  
MAINTENANCE CHECKLIST**

**ALL MAINTENANCE BEYOND DAILY AND  
WEEKLY IS PERFORMED ON A USAGE BASIS AS  
INDICATED IN THE MANUALS**

Perform this routine **AFTER EVERY 250 hours** of operation **OR** sooner if conditions dictate

<b>Sweeper S/N:</b>	<b>Date:</b>	<b>Hours:</b>	<b>Miles:</b>
<b>This CHECKLIST PERFORMED BY:</b>			

		<u>Done:</u>
<b>1</b>	<b>Change BOTH engine oils AND filters - Write Date and Hours on filter housings.</b>	<input type="checkbox"/>
<b>2</b>	<b>Replace hydraulic oil filter - Write Date and Hours on filter housing.</b>	<input type="checkbox"/>
<b>3</b>	<b>Clean hydraulic oil tank breather filter.</b>	<input type="checkbox"/>
<b>4</b>	<b>Inspect for any damage and any loose items such as wires, fittings, pins, nuts and bolts. Correct problem and/or NOTE below.</b>	<input type="checkbox"/>

**NOTES and REMARKS:**

---



---



---



---

**Thank you for choosing Stewart-Amos Sweepers! HAPPY SWEEPING!!!**



**EVERY 1000 HOURS**

**STARFIRE SWEEPER PERIODIC  
MAINTENANCE CHECKLIST**

**ALL MAINTENANCE BEYOND DAILY AND  
WEEKLY IS PERFORMED ON A USAGE  
BASIS AS INDICATED IN THE MANUALS**

Perform this routine AFTER EVERY 1000 hours of operation OR sooner if conditions dictate

Sweeper S/N: \_\_\_\_\_ Date: \_\_\_\_\_ Hours: \_\_\_\_\_ Miles: \_\_\_\_\_

This CHECKLIST  
PERFORMED BY: \_\_\_\_\_

		<u>Done:</u>
1	Perform a 250 hour Maintenance Routine.	<input type="checkbox"/>
2	Change Hydraulic Oil per Manual.	<input type="checkbox"/>
3	Grease chassis per "Owners Manual" including front steering linkage, U-joints, bearings, and king pins.	<input type="checkbox"/>
4	Check elevator chain for adjustment.	<input type="checkbox"/>
5	Inspect for any damage and any loose items such as wires, fittings, pins, nuts and bolts. Correct problem and/or NOTE below.	<input type="checkbox"/>

**NOTES and REMARKS:**

\_\_\_\_\_


\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_


**Thank you for choosing Stewart-Amos Sweepers! HAPPY SWEEPING!!!**


## S-4XL SERVICE POINTS

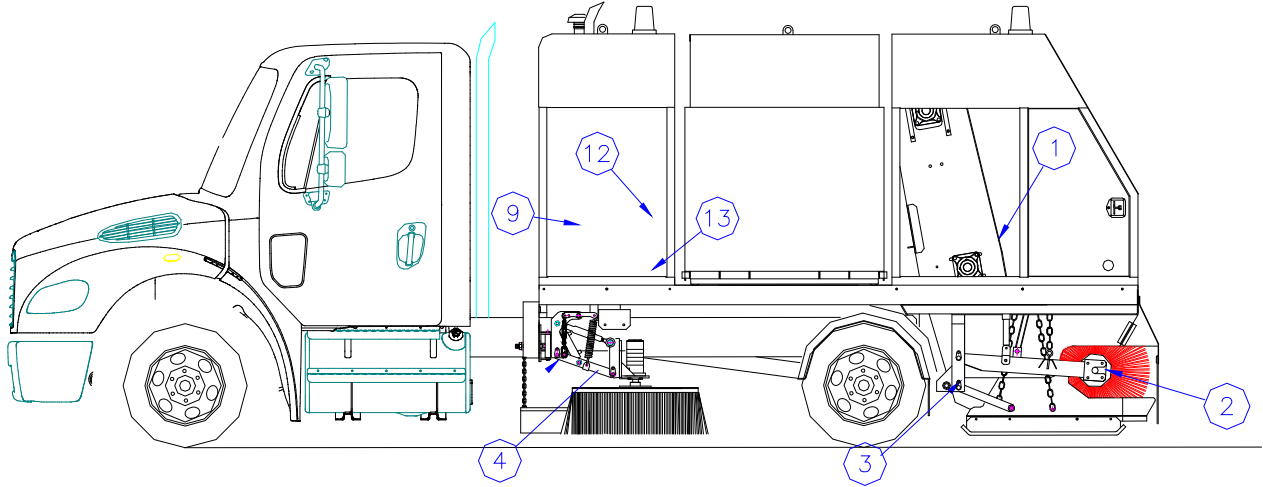

### SWEEPER SERVICE POINTS

LOCATION	NO. OF POINTS	FREQUENCY	DESCRIPTION
1	3	DAILY	ELEVATOR BEARINGS (DRIVERS SIDE)
2	1	DAILY	MAIN BROOM BEARING
3	3	WEEKLY	MB AND DRAG SHOE LINKAGE
4	3	WEEKLY	GUTTER BROOM LINKAGE
5	3	DAILY	ELEVATOR BEARINGS (PASSENGER SIDE)
6	3	WEEKLY	MB AND DRAG SHOE LINKAGE
7	3	WEEKLY	GUTTER BROOM LINKAGE
8	1	DAILY	ENGINE OIL LEVEL
9	1	DAILY	HYDRAULIC OIL LEVEL
10	1	DAILY	AIR FILTER AUX. ENGINE
11	1	AS REQ.	FUEL FILTER
12	1	250 HR.	HYDRAULIC OIL FILTER
13	1	1000 HRS.	HYDRAULIC OIL
14	1	250 HRS	ENGINE OIL
15	1	250 HRS	ENGINE OIL FILTER
16	1	DAILY	AIR FILTER TRUCK

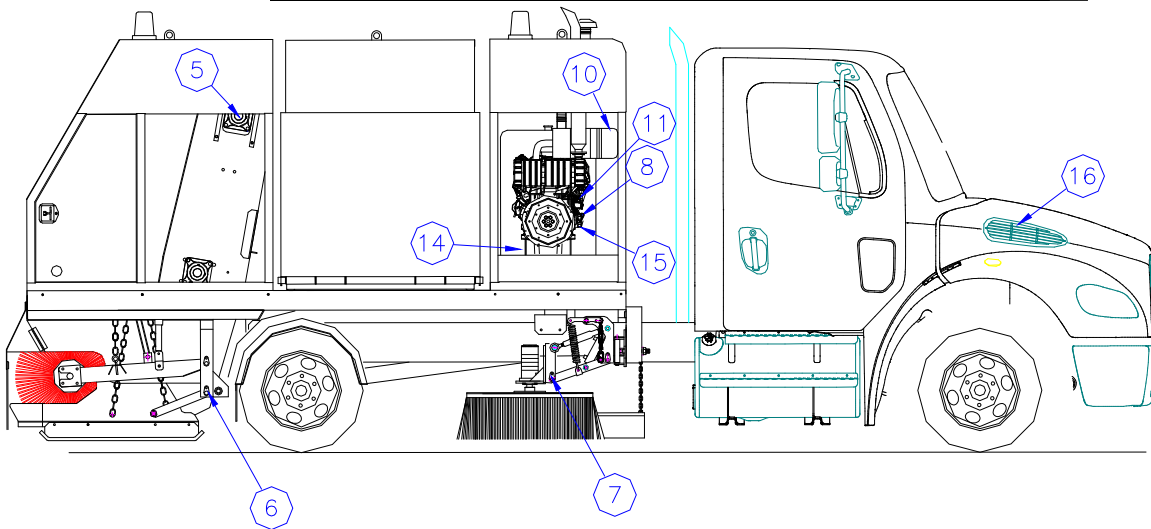

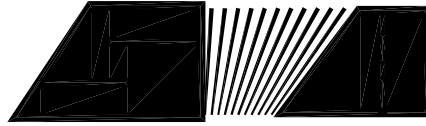


**STEWART-AMOS**

**Sweeper Co.**

STARFIRE

S-4 XL

PARTS MANUAL

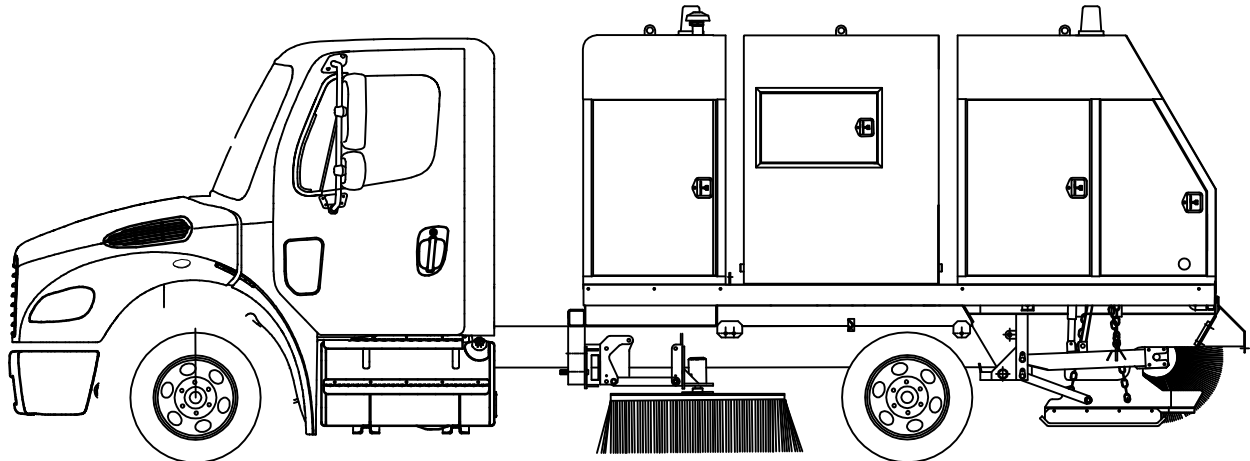


SN 6008 and UP  
Last Updated January, 2015



# TABLE OF CONTENTS

MAIN FRAME	89
FRONT CANOPY	91
REAR CANOPY	93
HOPPER	95
LIFT FRAME SCISSOR	97
GUTTER BROOM	99
MAIN BROOM	103
HYDRAULICS	107
AUXILARY ENGINE	117
ELEVATOR	121
WATER SYSTEM	129
ELECTRICAL	131
IN CAB PANEL	142
DECALS	143
INDEX	153

MAIN FRAME  
ASSEMBLY  
SN 6001 & UP

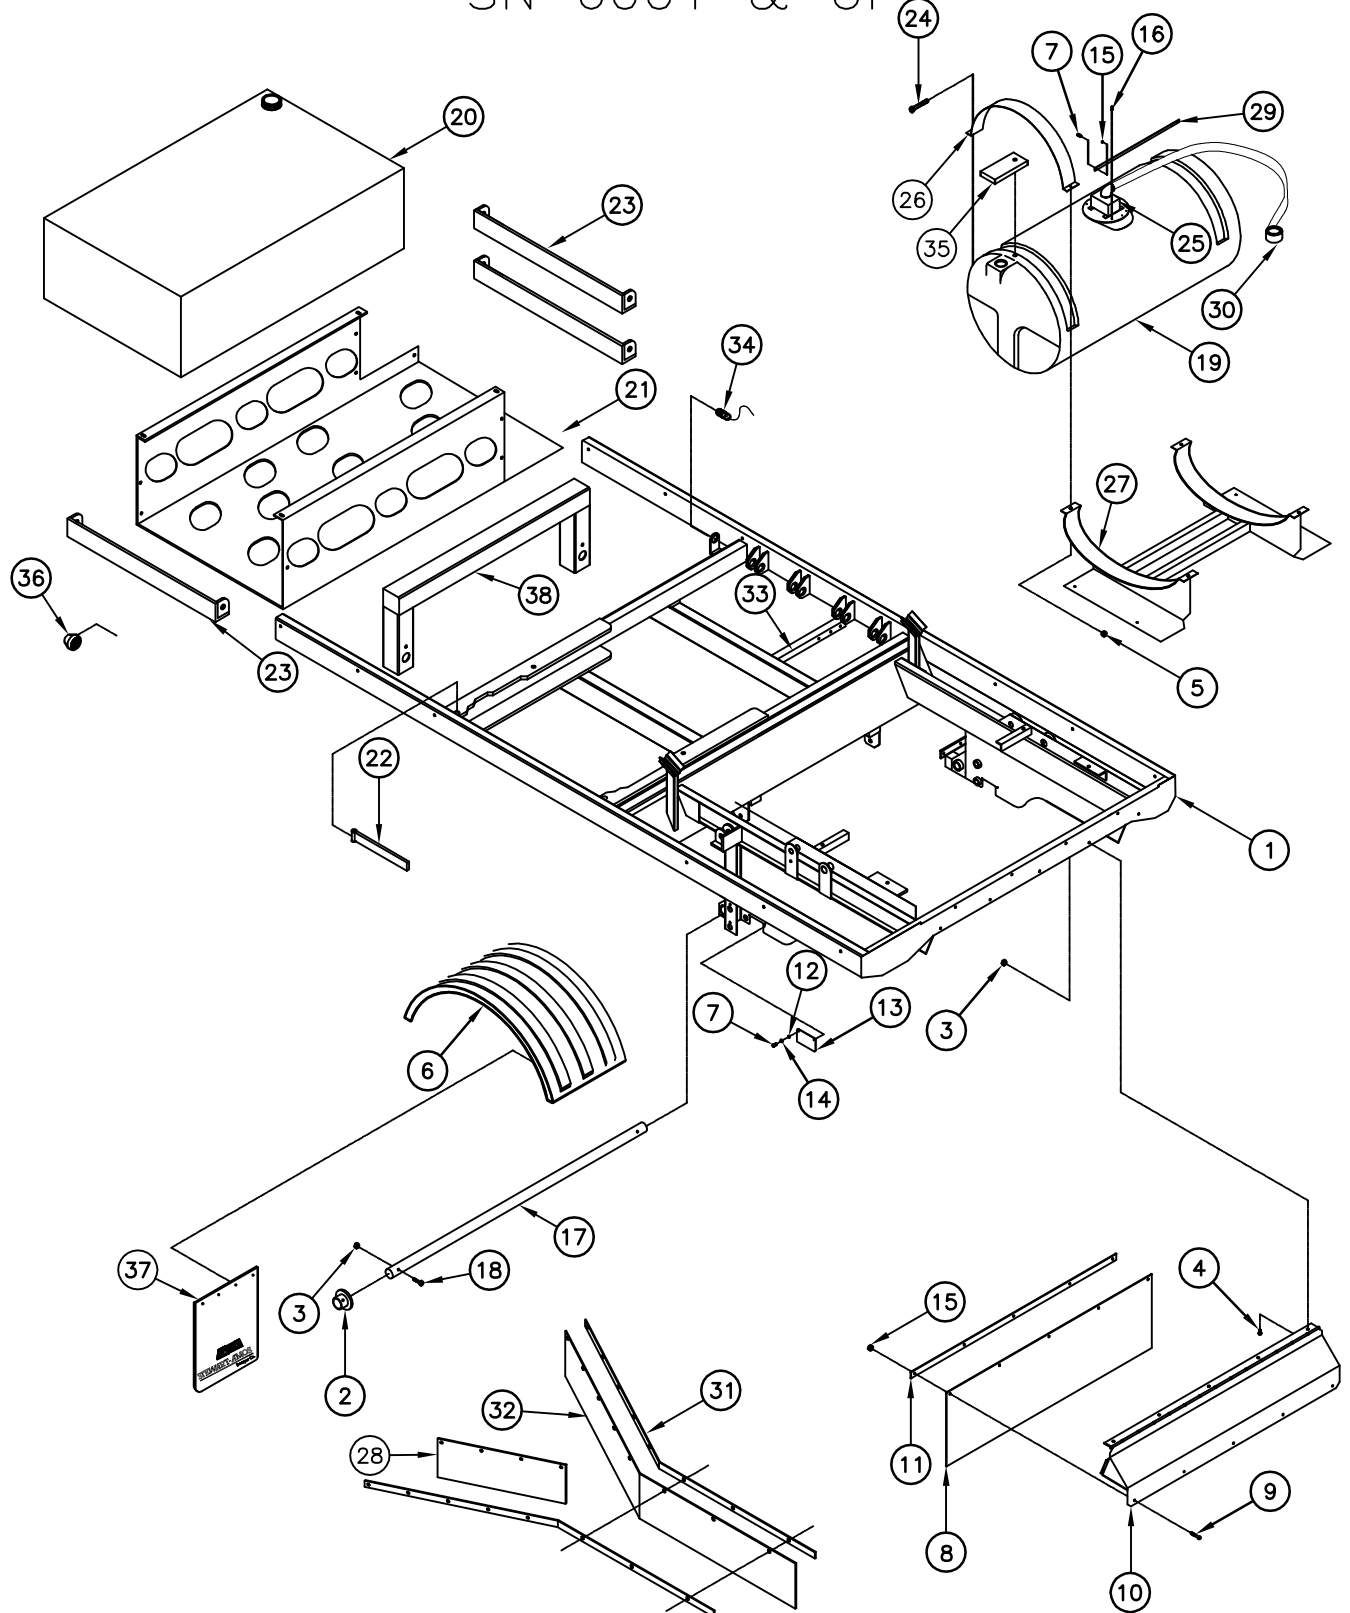

**STEWART-AMOS**

Sweeper Co


MAIN FRAME  
ASSEMBLY  
SN 6003 & UP

ITEM	PART #	DESCRIPTION	QTY
1	92001	MAIN FRAME WELDMENT	1
2	43129	ELEVATOR CENTERING BUSHING	2
3	1502	NUT	17
4	1535	BOLT	17
5	1505	NUT	4
6	9356	FENDER	2
7	1537	BOLT	2
8	42073	SKIRT	1
9	1534	BOLT	12
10	42060	REAR SKIRT	1
11	42075	BASE STRIP	1
12	1822	WASHER	16
13	42077	BEARING INSPECTION COVER	2
14	1670	WASHER	4
15	1503	NUT	12
16	1591	SCREW	6
17	41771	REST TUBE	1
18	1843	BOLT	2
19	1075	200 GAL. PLASTIC WATER TANK	1
20	9185	130 GAL. PLASTIC WATER TANK	1
21	92201	WATER TANK TUB	1
22	42085	SAFETY PROP	2
23	92203	WATER TANK END ANGLE	3
24	1843	BOLT	4
25	42065	WATER VALVE	1
26	42220-06	WATER TANK STRAP	2
27	42220	WATER TANK MOUNT	1
28	42146	CENTER DRAG RUBBER	1
29	42083	WATER VALVE ROD	1
30	1116	HYDRANT HOSE	1
31	42103	CENTER DRAG SUPPORT	2
32	42101	CENTER DRAG RUBBER	1
33	9357	FENDER MOUNT	2
34	1087-3	PROXIMITY SWITCH	2
35	42214	FILL RELIEF RUBBER	1
36	1915	WORK LIGHT	2
37	3206	MUD FLAP	2
38	91201	GB MOUNT	1



# FRONT CANOPY ASSEMBLY


SN 6001 & UP

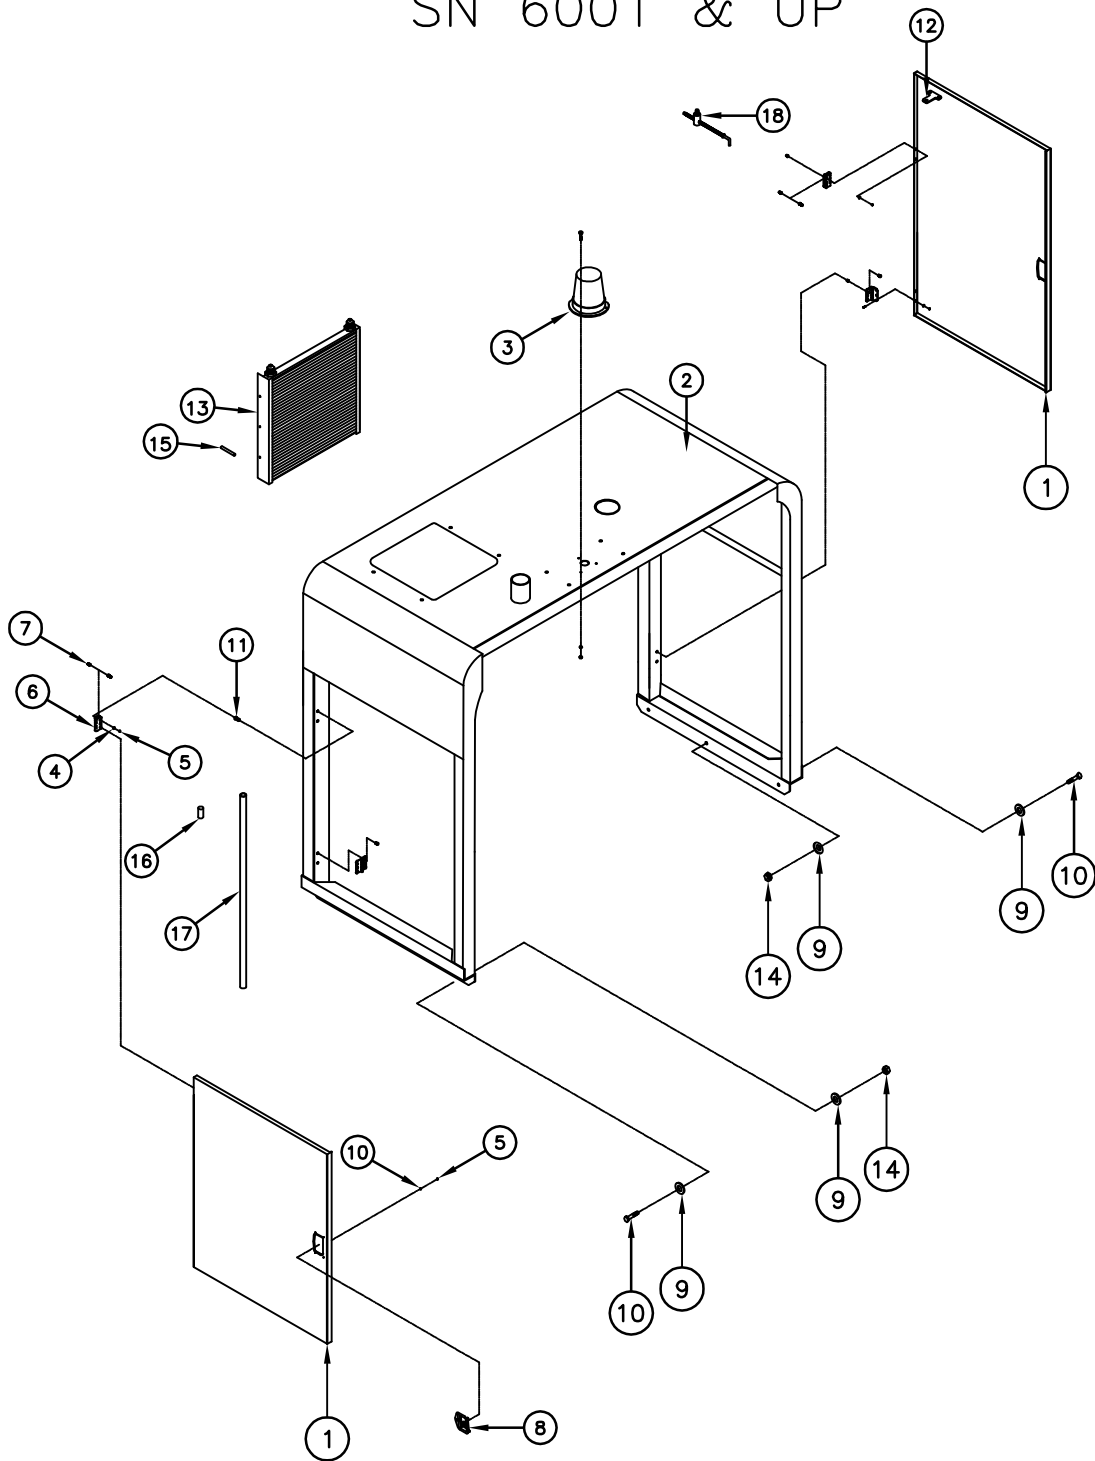

FRONT CANOPY  
ASSEMBLY  
SN 6001 & UP

ITEM	PART #	DESCRIPTION	QTY
1	41503	DOOR	2
2	91501	FRONT CANOPY	1
3	1916	STROBE	1
4	1520	WASHER	20
5	1501	NUT	20
6	1031	HINGE	4
7	1579	BOLT	8
8	1005	DOOR LATCH	4
9	1522	WASHER	6
10	1843	BOLT	6
11	1750	INSERT	8
12	91502	DOOR STOP	2
13	1955	HYD. COOLER & FAN	1
14	1503	NUT	6
15	41504	SPACER	4
	42107	LIMB GUARD (NOT SHOWN OPTIONAL)	1
16	1394	WATER LEVEL FLOAT	1
17	1395	CLEAR FLOAT TUBE	1
18	1861	DOOR STOP SPRING	2

# REAR CANOPY ASSEMBLY SN 6001 & UP

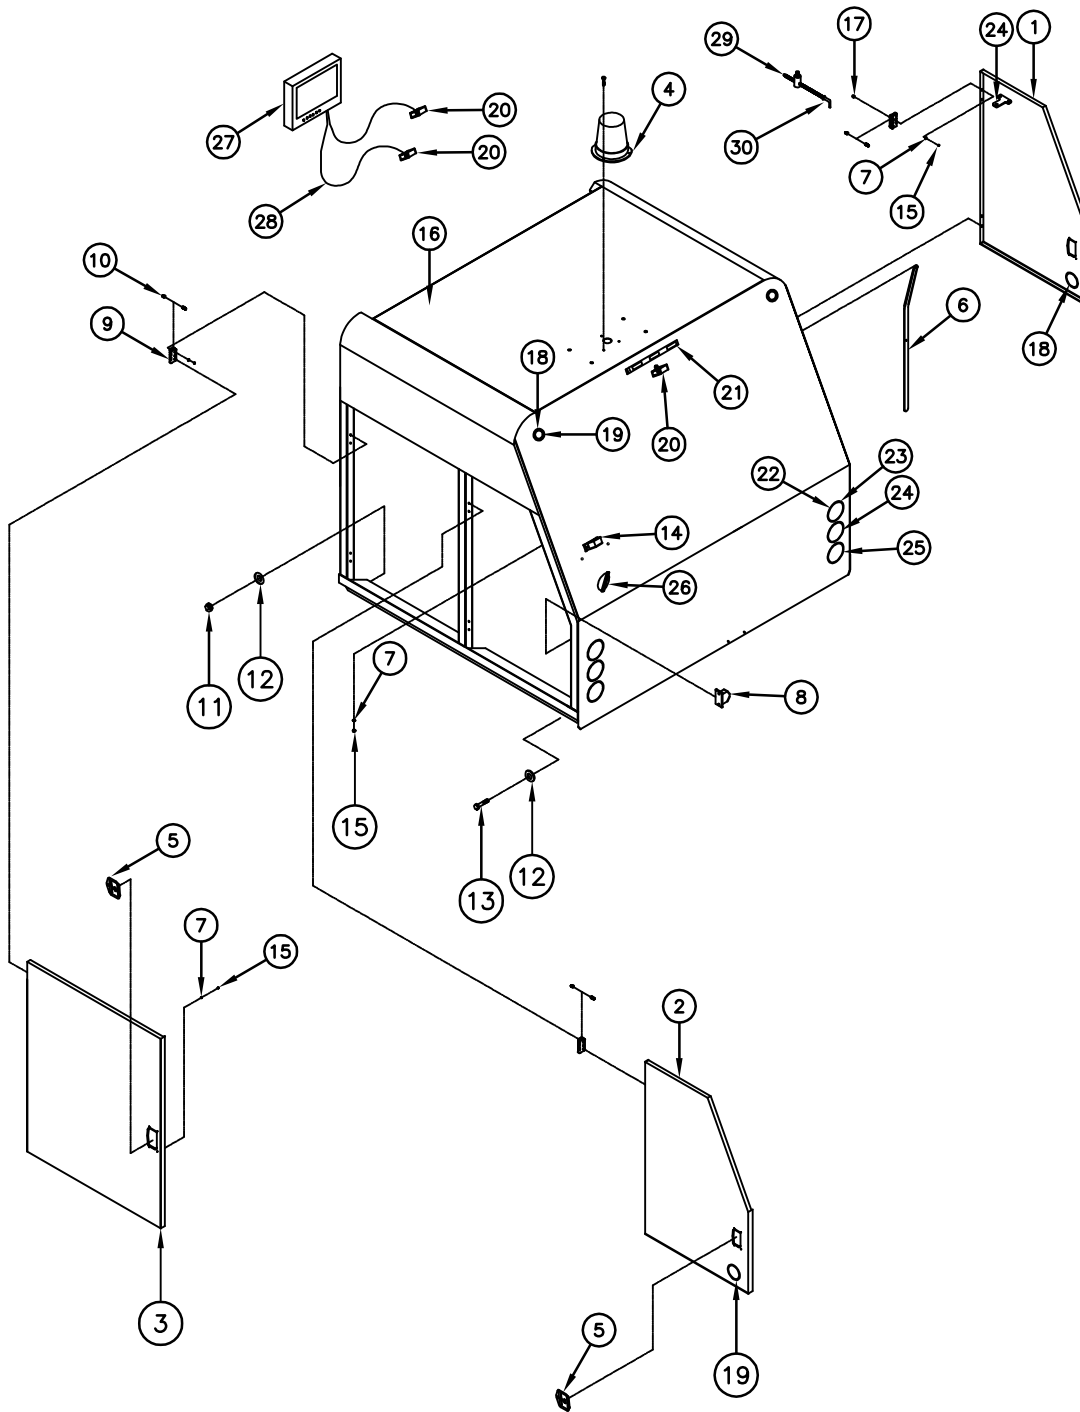




**STEWART-AMOS**

Sweeper Co

REAR CANOPY  
ASSEMBLY  
SN 6001 & UP

ITEM	PART #	DESCRIPTION	QTY
1	41614	RIGHT REAR DOOR	1
2	41612	LEFT REAR DOOR	1
3	41503	DOOR	2
4	1916	STROBE	1
5	1005	DOOR LATCH	4
6	42081	WATER VALVE LEVER	1
7	1520	WASHER	36
8	1024	BACKUP ALARM	1
9	1031	HINGE	8
10	1579	BOLT	32
11	1503	NUT	6
12	1822	WASHER	6
13	1843	BOLT	6
14	1908	LICENSE PLATE LIGHT	1
15	1501	NUT	36
16	91602	REAR CANOPY	1
17	1750	INSERT	16
18	1905	CLEARANCE LIGHT	4
19	1906	GROMMET	4
20	1770	CAMERA	1
21	1907	ID BAR	1
22	1911	BACKUP LIGHT	2
23	1912	GROMMET	6
24	1910	TURN SIGNAL LIGHT	2
25	1909	BRAKE LIGHT	2
26	1915	WORK LIGHT	1
	42107	LIMB GUARD <sub>(NOT SHOWN)</sub>	1
27	1769	CAMERA/MONITOR	1
28	1768	CAMERA CABLE	2
29	1861	DOOR STOP SPRING	4
30	91502	DOOR STOP	4


# HOPPER ASSEMBLY SN 6001 & UP

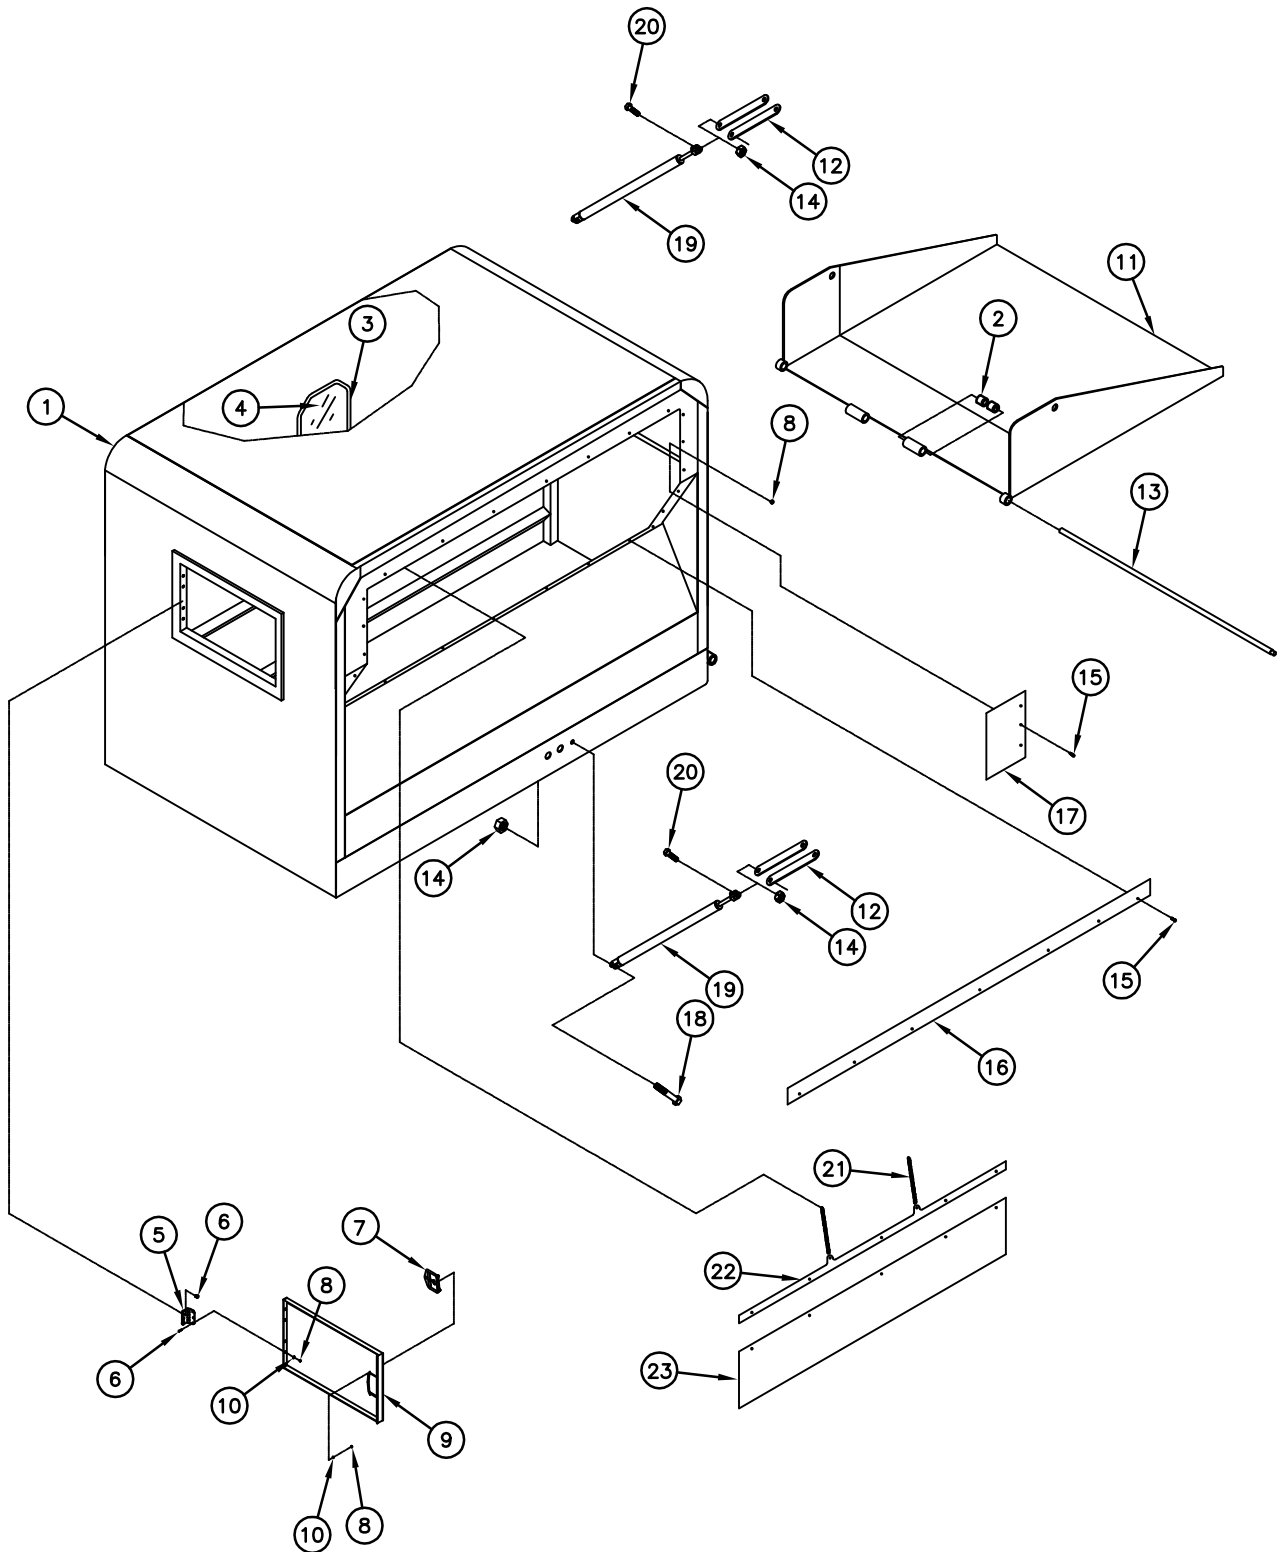


HOPPER  
ASSEMBLY  
SN 6001 & UP

ITEM	PART #	DESCRIPTION	QTY
1	92901	HOPPER	1
2	1185	BUSHING	18
3	1033	WINDOW RUBBER	37"
4	42913	WINDOW	1
5	1031	HINGE	2
6	1579	BOLT	8
7	1005	DOOR LATCH	1
8	1501	NUT	20
9	62907	ACCESS DOOR	1
10	1520	WASHER	34
11	92906	HOPPER DOOR	1
12	42905	DOOR LINK	4
13	92904	PIN	1
14	1583	NUT	4
15	1530	BOLT	13
16	42915	RUBBER FLASHING	1
17	42917	UPRIGHT FLASHING	2
18	1560	BOLT	2
19	1061	CYLINDER	2
20	1558	BOLT	4
21	1173	CHAIN	2-6"
22	32910	DRAIPER MOUNT	1
23	32911	DRAIPER RUBBER	1
	1934	OPTIONAL BIN VIB. (NOT SHOWN)	1

LIFT FRAME  
SCISSOR  
ASSEMBLY  
SN 6001 & UP

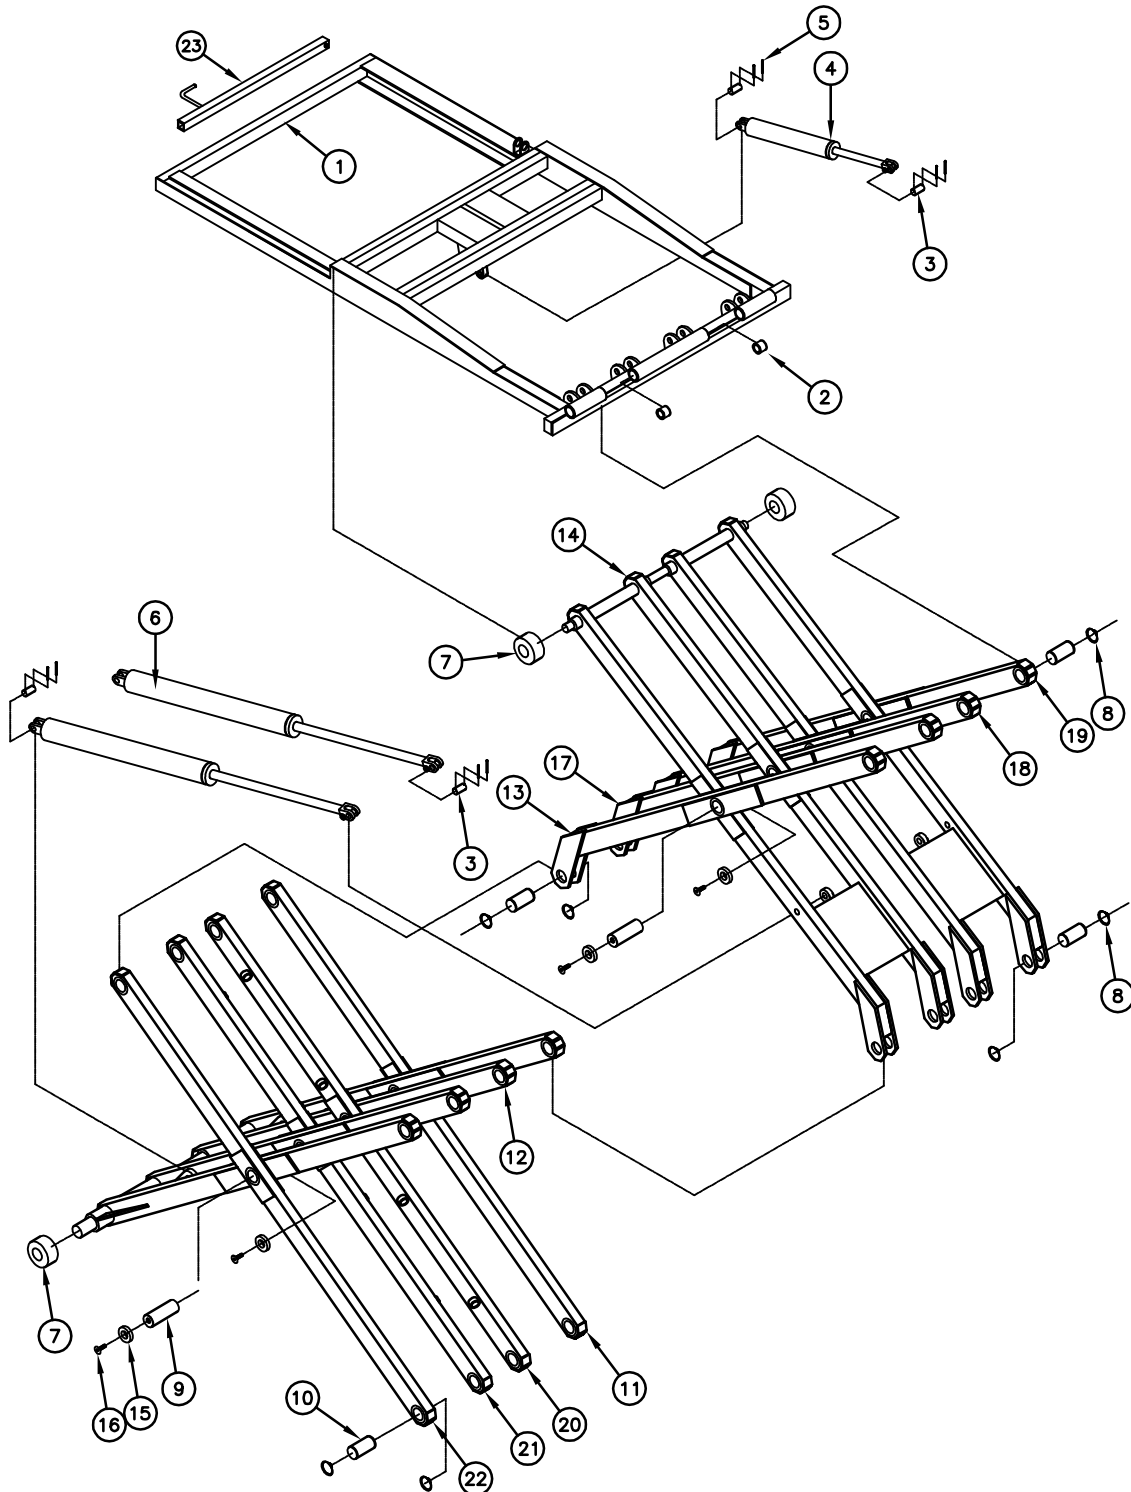

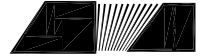

**STEWART-AMOS**

Sweeper Co


LIFT FRAME  
SCISSOR  
ASSEMBLY  
SN 6001 & UP

ITEM	PART #	DESCRIPTION	QTY
1	93002	HOPPER LIFT FRAME	1
2	1185	BUSHING	8
3	1623	PIN	6
4	1985	CYLINDER	1
5	1604	COTTER PIN	6
6	3210	CYLINDER	2
7	42813	SCISSOR ROLLER	4
8	1074	SNAP RING	16
9	62812	CENTER PIN	8
10	62811	SCISSOR PIN	16
11	92815	LOWER ANCHOR SECT. LEG #1	1
12	92806	LOWER SCISSOR, ROLLER SECT.	1
13	92811	UPPER ANCHOR SECT. LEG #1	1
14	92801	UPPER SCISSOR, ROLLER SECT.	1
15	62813	RETAINER WASHER	16
16	1782	BOLT	16
17	92812	UPPER ANCHOR SECT. LEG #2	1
18	92813	UPPER ANCHOR SECT. LEG #3	1
19	92814	UPPER ANCHOR SECT. LEG #4	1
20	92816	LOWER ANCHOR SECT. LEG #2	1
21	92817	LOWER ANCHOR SECT. LEG #3	1
22	92818	LOWER ANCHOR SECT. LEG #4	1
23	42131	SAFETY	1



# GUTTER BROOM ASSEMBLY UPPER SECTION

(QUANTITIES SHOWN ARE FOR ONE SIDE ONLY)

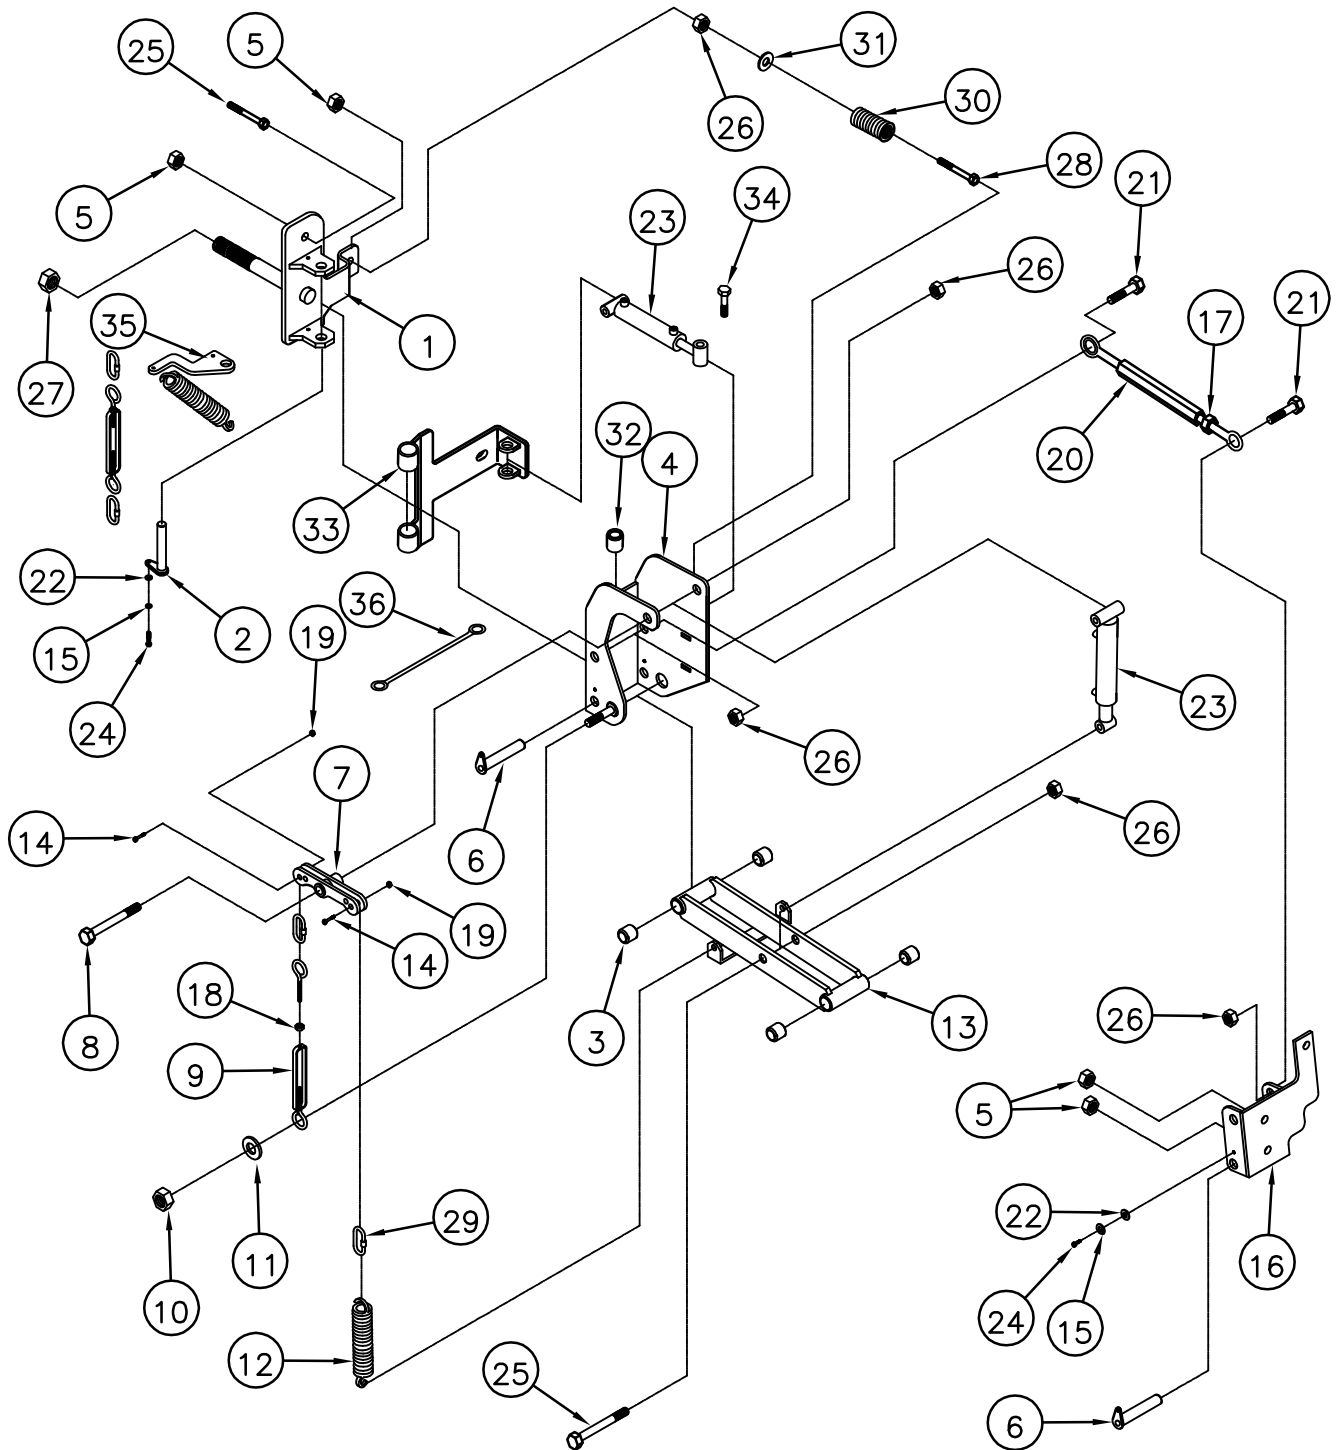




# GUTTER BROOM ASSEMBLY UPPER SECTION

(QUANTITIES SHOWN ARE FOR ONE SIDE ONLY)

ITEM	PART #	DESCRIPTION	QTY
1	61201	GB MOUNT (LEFT HAND)	1
	61301	GB MOUNT (RIGHT HAND)	1
2	61213	PIN	1
3	1020	BUSHING	4
4	61203	GB PIVOT (LEFT)	1
	61303	GB PIVOT (RIGHT)	1
5	1506	NUT	5
6	41211	PIN	2
7	41215	SPRING BELL CRANK	1
8	1561	BOLT	1
9	1023	TURN BUCKLE	1
10	1505	NUT	1
11	1581	WASHER	1
12	1018	SUSPENSION SPRING	2
13	41221	LINK	1
14	1540	BOLT	2
15	1670	WASHER	3
16	41205	LINKAGE MOUNT (LEFT)	1
	41316	LINKAGE MOUNT (RIGHT)	1
17	1642	NUT	2
18	1640	NUT	1
19	1503	NUT	2
20	1022	TURN BUCKLE	2
21	1559	BOLT	5
22	1822	WASHERS	3
23	1379	CYLINDER	2
24	1537	BOLT	3
25	1556	BOLT	2
26	1507	NUT	7
27	1508	NUT	1
28	1574	BOLT	1
29	1042	QUICK LINK	4
30	1019	RETRACT SPRING	1
31	1526	WASHER	2
32	1185	BUSHING	4
33	61235	RETRACT PLATE (LEFT)	1
	61335	RETRACT PLATE (RIGHT)	1
34	1560	BOLT	2
35	41230	EXTEND SPRING MOUNT	1
36	9137	LANYARD	2

# GUTTER BROOM ASSEMBLY LOWER SECTION

(QUANTITIES SHOWN ARE FOR ONE SIDE ONLY)

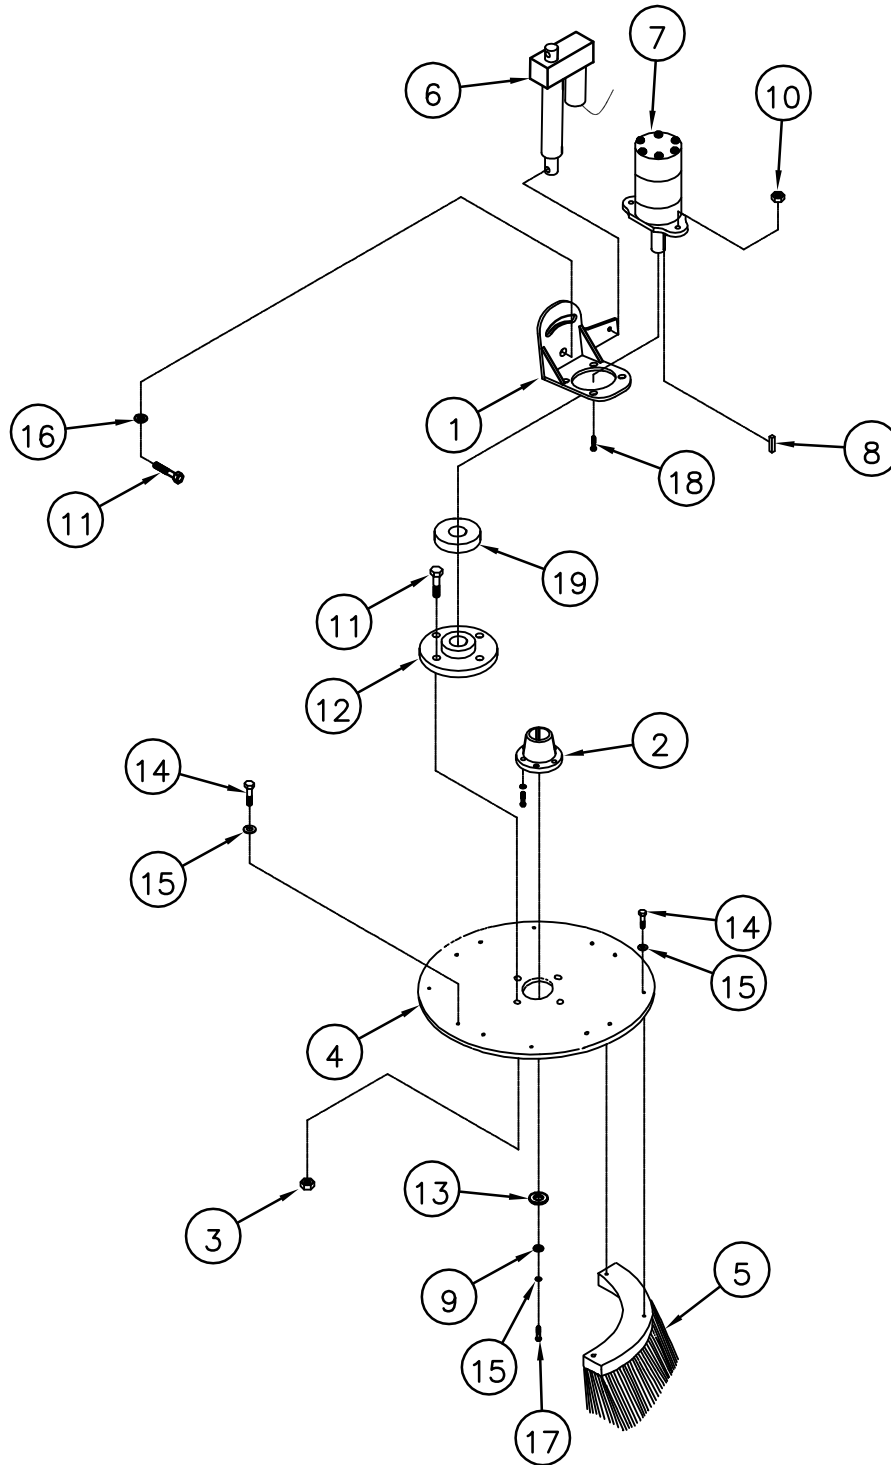



**STEWART-AMOS**


Sweeper Co

# GUTTER BROOM ASSEMBLY LOWER SECTION


(QUANTITIES SHOWN ARE FOR ONE SIDE ONLY)

ITEM	PART #	DESCRIPTION	QTY
1	41207	MOTOR BRACKET (LEFT)	1
	41318	MOTOR BRACKET (RIGHT)	1
2	3248	BUSHING C/W 3-BOLT, 3-LW	1
3	1506	NUT	4
4	41227	32" PLATE	1
5	1148	GB BRUSH SET FOR 32" PLATE	1
6	1078	LINEAR ACTUATOR	1
7	3243	MOTOR	1
8	1683	OFFSET KEY	1
9	1822	WASHERS	1
10	1505	NUT	2
11	1549	BOLT	4
12	41209	DRIVE HUB	1
13	1526	WASHER	1
14	1540	BOLT	24
15	1670	WASHER	5
16	1525	WASHER	2
17	1537	BOLT	3
18	1546	BOLT	2
19	42316	SPACER	2
	61307	OPTIONAL 42" PLATE (NOT SHOWN)	1
	3229	GB BRUSH SET for 61307 (NOT SHOWN)	1

# MAIN BROOM ASSEMBLY

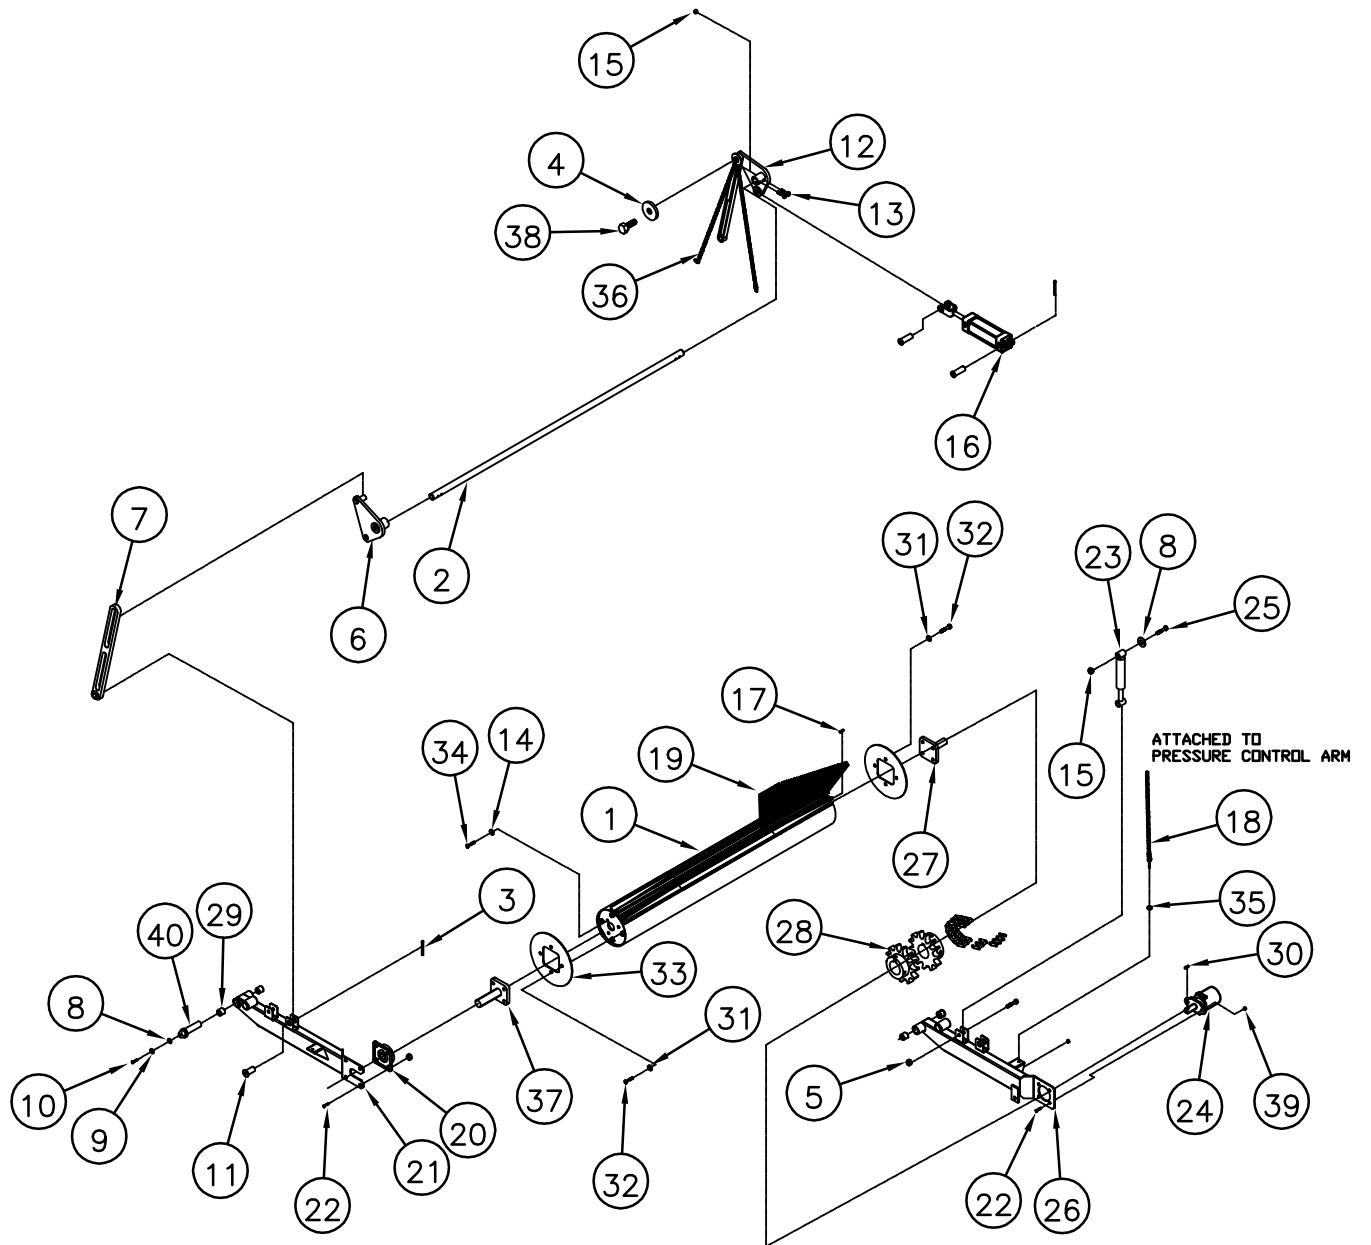


# MAIN BROOM ASSEMBLY

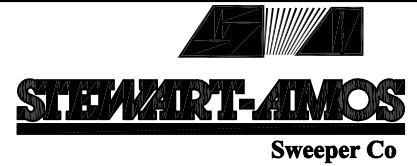

ITEM	PART #	DESCRIPTION	QTY
1	1014	MAIN BROOM MANDREL	1
2	41413	MAIN BROOM ROCK SHAFT	1
3	1604	COTTER PIN	2
4	62813	WASHER	4
5	1505	NUT	6
6	41406	LIFT BELL CRANK (LEFT)	1
7	41421	MAIN BROOM LIFT STRAP	2
8	1822	WASHER	30
9	1670	WASHER	2
10	1537	BOLT	2
11	41417	PIN	2
12	41405	LIFT BELL CRANK (RIGHT)	1
13	1630	CAPSCREW	4
14	1671	WASHER	6
15	1503	NUT	10
16	1043	CYLINDER	2
17	1680	KEY	1
18	41427	MAIN BROOM LIFT CHAIN	2
19	1016	MAIN BROOM STRIP SET	1
20	1030	BEARING	1
21	64501	MAIN BROOM LIFT ARM (LEFT)	1
22	1546	BOLT	6
23	1046	SHOCK	2
24	3243	HYDRAULIC MOTOR	1
25	1843	BOLT	4
26	64502	MAIN BROOM LIFT ARM (RIGHT)	1
27	3213-3	MANDRELL SHAFT	1
28	80129	MAIN BROOM COUPLER	1
29	1185	BUSHING	4
30	1683	KEY	1
31	1669	WASHER	6
32	1781	BOLT	6
33	1266	MANDRELL END PLATE	2
34	1545	BOLT	6
35	1639	NUT	2
36	41437	DRAG SHOE LIFT CHAIN	2
37	61415	LONG MANDRELL SHAFT	1
38	1782	BOLT	4
39	1545	BOLT	2
40	41401	PIN	4

# DRAG SHOE ASSEMBLY

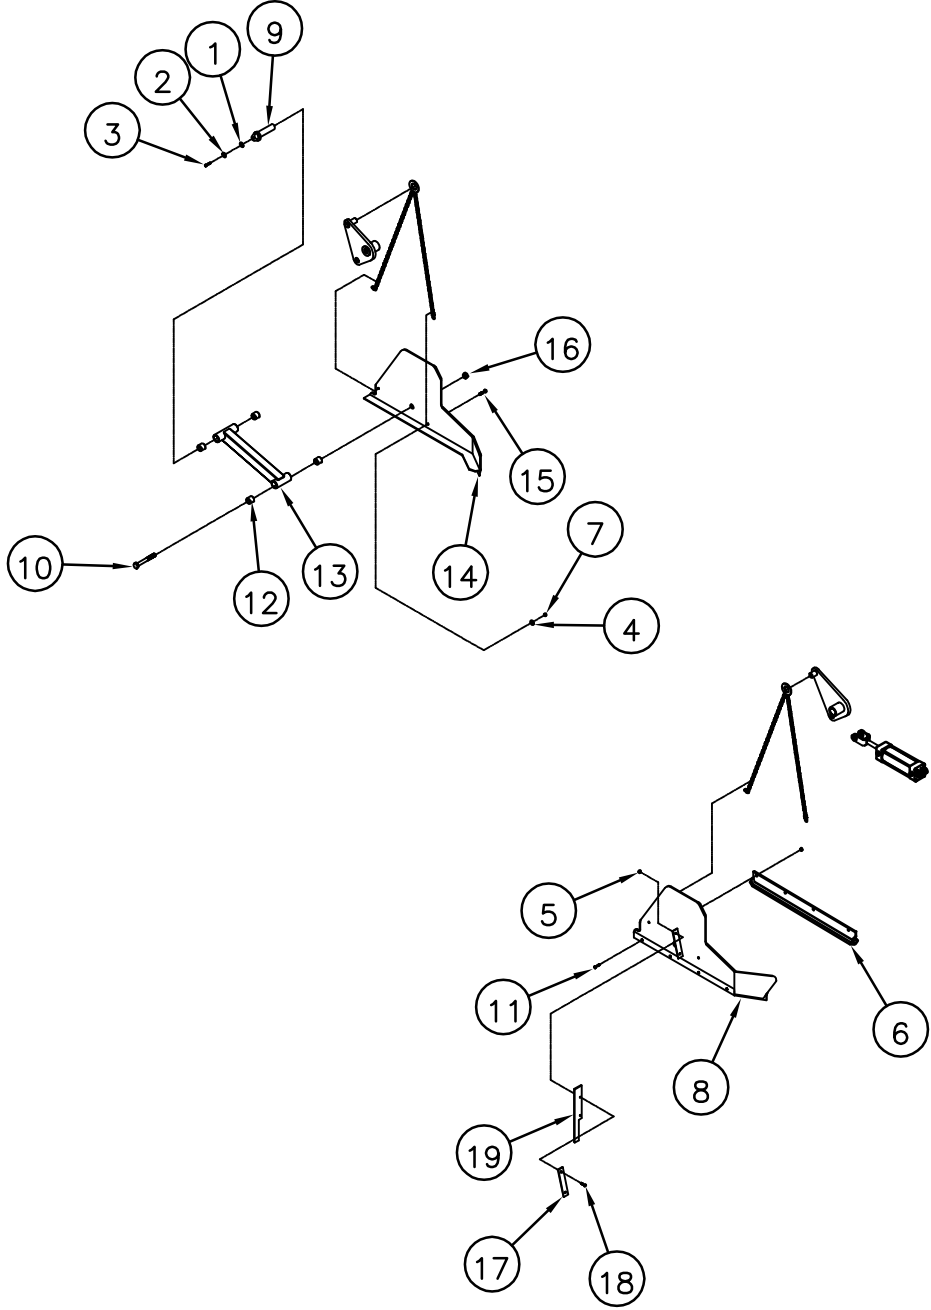


## DRAG SHOE ASSEMBLY

ITEM	PART #	DESCRIPTION	QTY
1	1822	WASHER	2
2	1670	WASHER	2
3	1537	BOLT	2
4	1521	WASHER	12
5	1501	NUT	4
6	1970	CARBIDE DRAG SHOE	2
7	1502	NUT	8
8	51405	DRAG SHOE MOUNT (RIGHT)	1
9	41401	PIN	6
10	1562	BOLT	2
11	1575	BOLT	8
12	1185	BUSHING	8
13	41429	DRAG LINK	2
14	51404	DRAG SHOE MOUNT (LEFT)	1
15	1534	BOLT	8
16	1508	NUT	2
17	41431	BACKING	2
18	1530	BOLT	4
19	42067	DIRT DEFLECTOR RUBBER	2




# 80134 VALVE ASSEMBLY

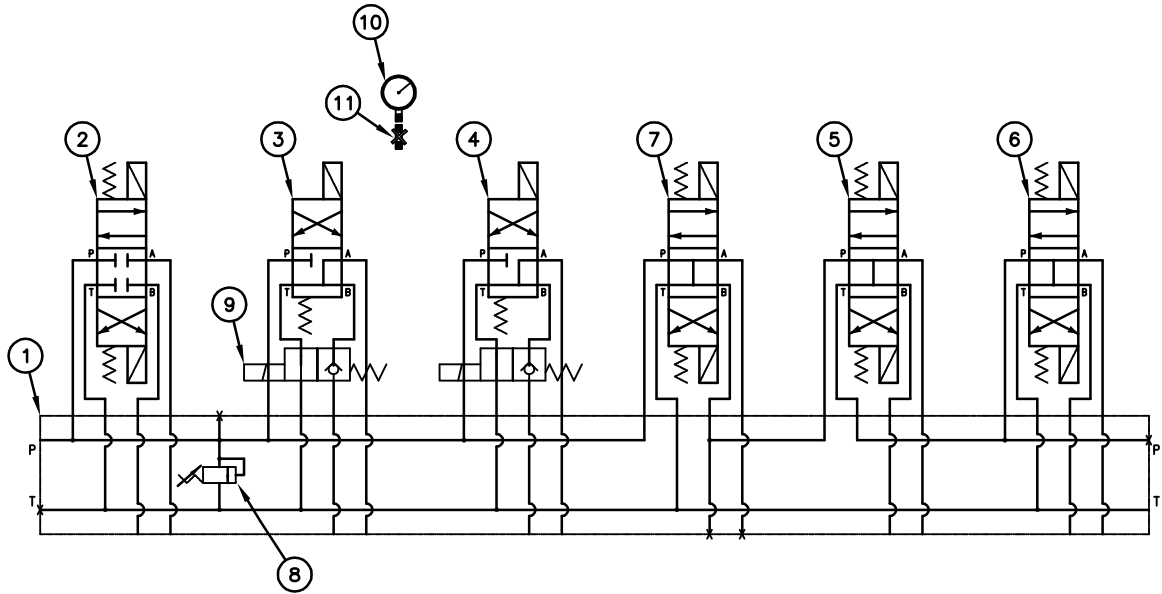

SHOWN AS VIEWED FROM DRIVERS SEAT

ITEM	PART #	DESCRIPTION	QTY
1	1293	MANIFOLD	1
2	2001	HOPPER LIFT CYLINDER VALVE	1
3	1989	LH GUTTER BROOM LIFT CYLINDER VALVE	1
4	1989	RH GUTTER BROOM CYLINDER VALVE	1
5	1295	LH GUTTER BROOM MOTOR VALVE	1
6	1295	RH GUTTER BROOM MOTOR VALVE	1
7	1295	DUMP VALVE	1
8	2000	RELIEF VALVE	1
9	1990	FLOAT VALVE	2
10	2080	5000 psi GAUGE	1
11	2078	GAUGE SHUTOFF VALVE	1


# 80120 VALVE ASSEMBLY

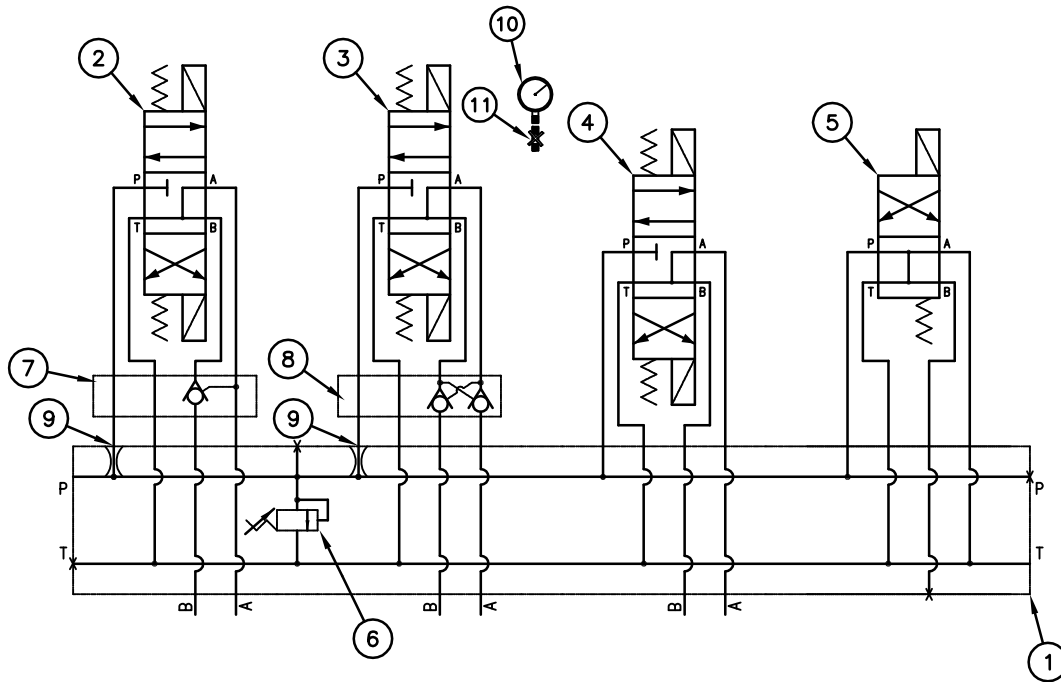

SHOWN AS VIEWED FROM DRIVERS SEAT

ITEM	PART #	DESCRIPTION	QTY
1	1287	MANIFOLD	1
2	1993	MAIN BROOM/ELEVATOR LIFT CYLINDER VALVE	1
3	1993	HOPPER TILT/DOOR CYLINDER VALVE	1
4	1993	MAIN BROOM/ELEVATOR MOTOR VALVE	1
5	1291	DUMP VALVE	1
6	2000	RELIEF VALVE	1
7	1994	P.O. CHECK VALVE	1
8	2010	DOUBLE P.O. CHECK VALVE	1
9	2089	8GPM RESTRICTOR	2
10	2080	5000 psi GAUGE	1
11	2078	GAUGE SHUTOFF VALVE	1

# HOPPER SIDE HYDRAULIC HOSE SCHEMATIC

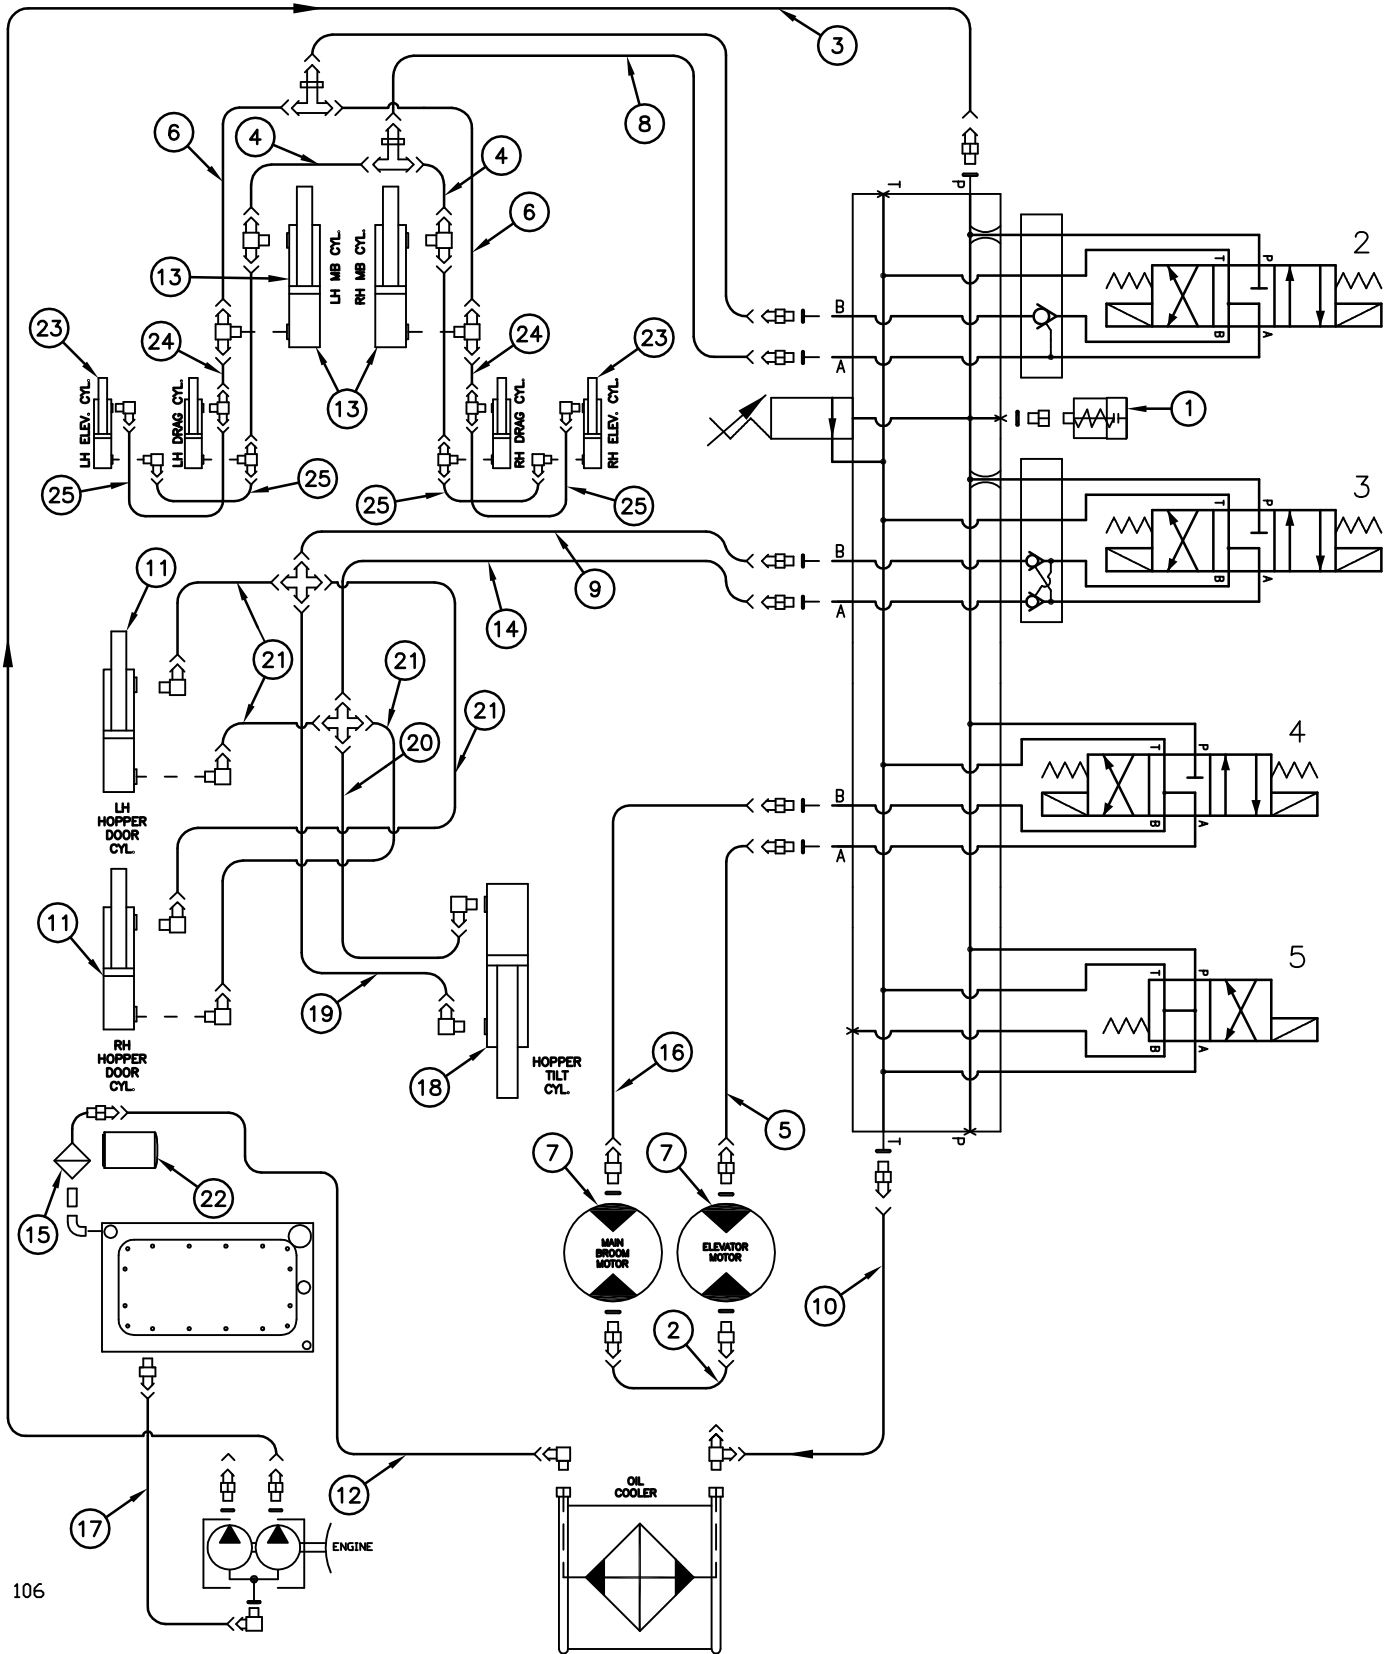




**STEWART-AMOS**

Sweeper Co

# DRIVERS SIDE HYDRAULIC HOSE SCHEMATIC

ITEM	PART #	DESCRIPTION	QTY
1	1037	ELEVATOR STALL SWITCH	1
2	1453	HOSE-MB MOTOR TO ELEV. MOTOR	1
3	1466	HOSE-FRONT OF PUMP TO LH VALVE	1
4	1456	HOSE-MB ROD TO "T"	2
5	1488	HOSE-ELEV. MOTOR TO VALVE	1
6	1455	HOSE-MB HEAD TO "T"	2
7	3243	HYDRAULIC MOTOR	2
8	1454	HOSE-MB VALVE TO "T"	2
9	1440	HOSE-HOPPER TILT VALVE TO CROSS	1
10	1468	HOSE-VALVE RETURN TO COOLER "T"	1
11	1061	HOPPER DOOR CYLINDER	2
12	1469	HOSE-COOLER TO FILTER	1
13	1043	MB CYLINDER	2
14	1440	HOSE-HOPPER TILT VALVE TO CROSS	1
15	1988	HYDRAULIC OIL FILTER BASE	1
16	1452	HOSE-MB MOTOR TO VALVE	1
17	1489	HOSE-SUCTION	1
18	1985	HOPPER TILT CYLINDER	1
19	1441	HOSE-HOPPER TILT ROD TO CROSS	1
20	1442	HOSE-HOPPER TILT HEAD TO CROSS	1
21	1443	HOSE-HOPPER DOOR CYL.	4
22	1987	HYDRAULIC OIL FILTER	1
23	1986	ELEV/DRAG SHOE CYL.	4
24	1490	HOSE-MB CYL T TO ELEV CYL T	4
25	1491	HOSE-ELEV CYL TO DRAG SHOE CYL	4

# CAB SIDE HYDRAULIC HOSE SCHEMATIC

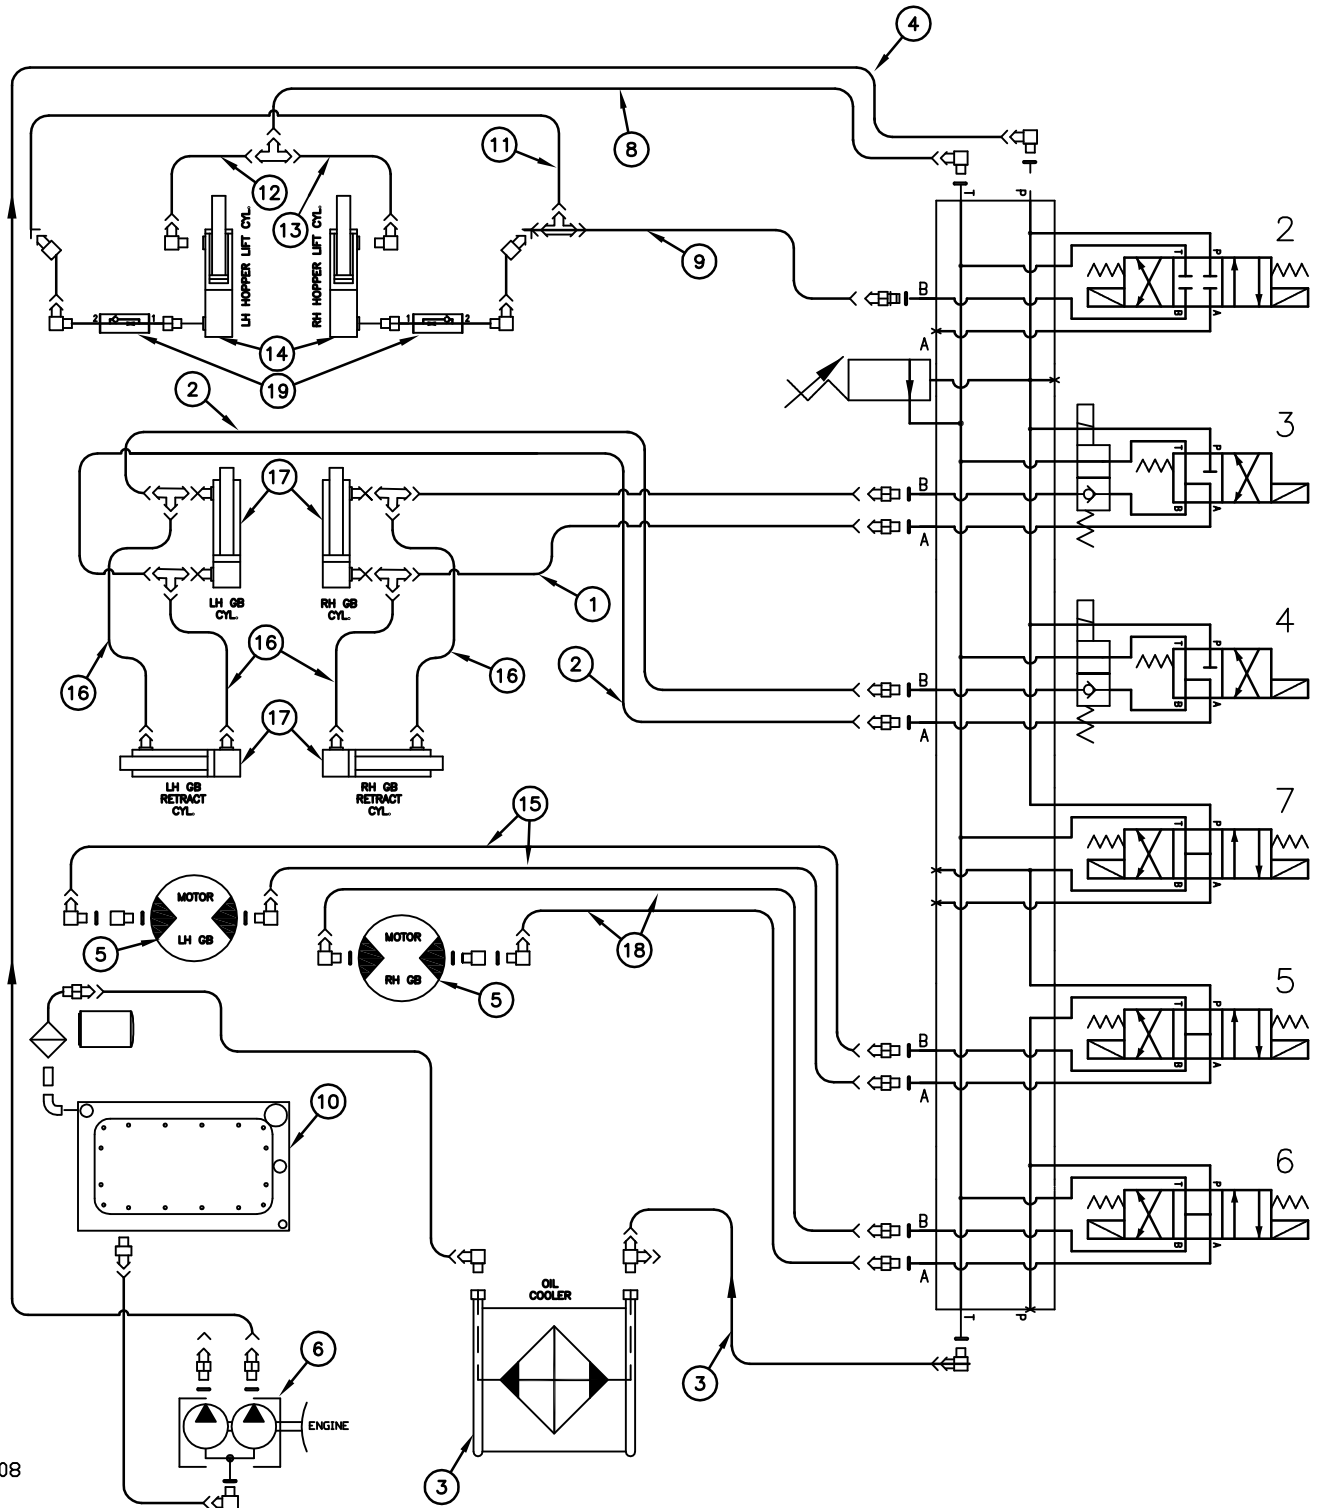




# CAB SIDE HYDRAULIC HOSE SCHEMATIC

ITEM	PART #	DESCRIPTION	QTY
1	1445	HOSE – RH GB CYL. TO VAL.	2
2	1446	HOSE – LH GB CYL. TO VAL.	1
3	1492	HOSE – VALVE RETURN TO T	1
4	1467	HOSE – PUMP TO VALVE	1
5	3243	HYDRAULIC MOTOR	2
6	3251	HYDRAULIC PUMP	–
8	1493	HOSE – HOPPER LIFT RETURN	1
9	1494	HOSE – VALVE TO HOPPER LIFT	1
10	32301	HYDRAULIC TANK	–
11	1495	HOSE – LIFT CROSSOVER	1
12	1496	HOSE – RETURN CROSSOVER	1
13	1497	HOSE – ROD RETURN	1
14	3235	HOPPER LIFT CYLINDER	2
15	1450	HOSE – LH GB MOTOR TO VAL.	2
16	1428	HOSE – RETRACT CYLINDER	4
17	1379	GB CYLINDER	4
18	1451	HOSE – RH GB MOTOR TO VAL.	2
19	2087	DIRECTIONAL RESTRICTOR	2
20	1955	ELECTRIC HYD. OIL COOLER	1

# AUX. ENGINE ASSEMBLY SN 6000 & UP

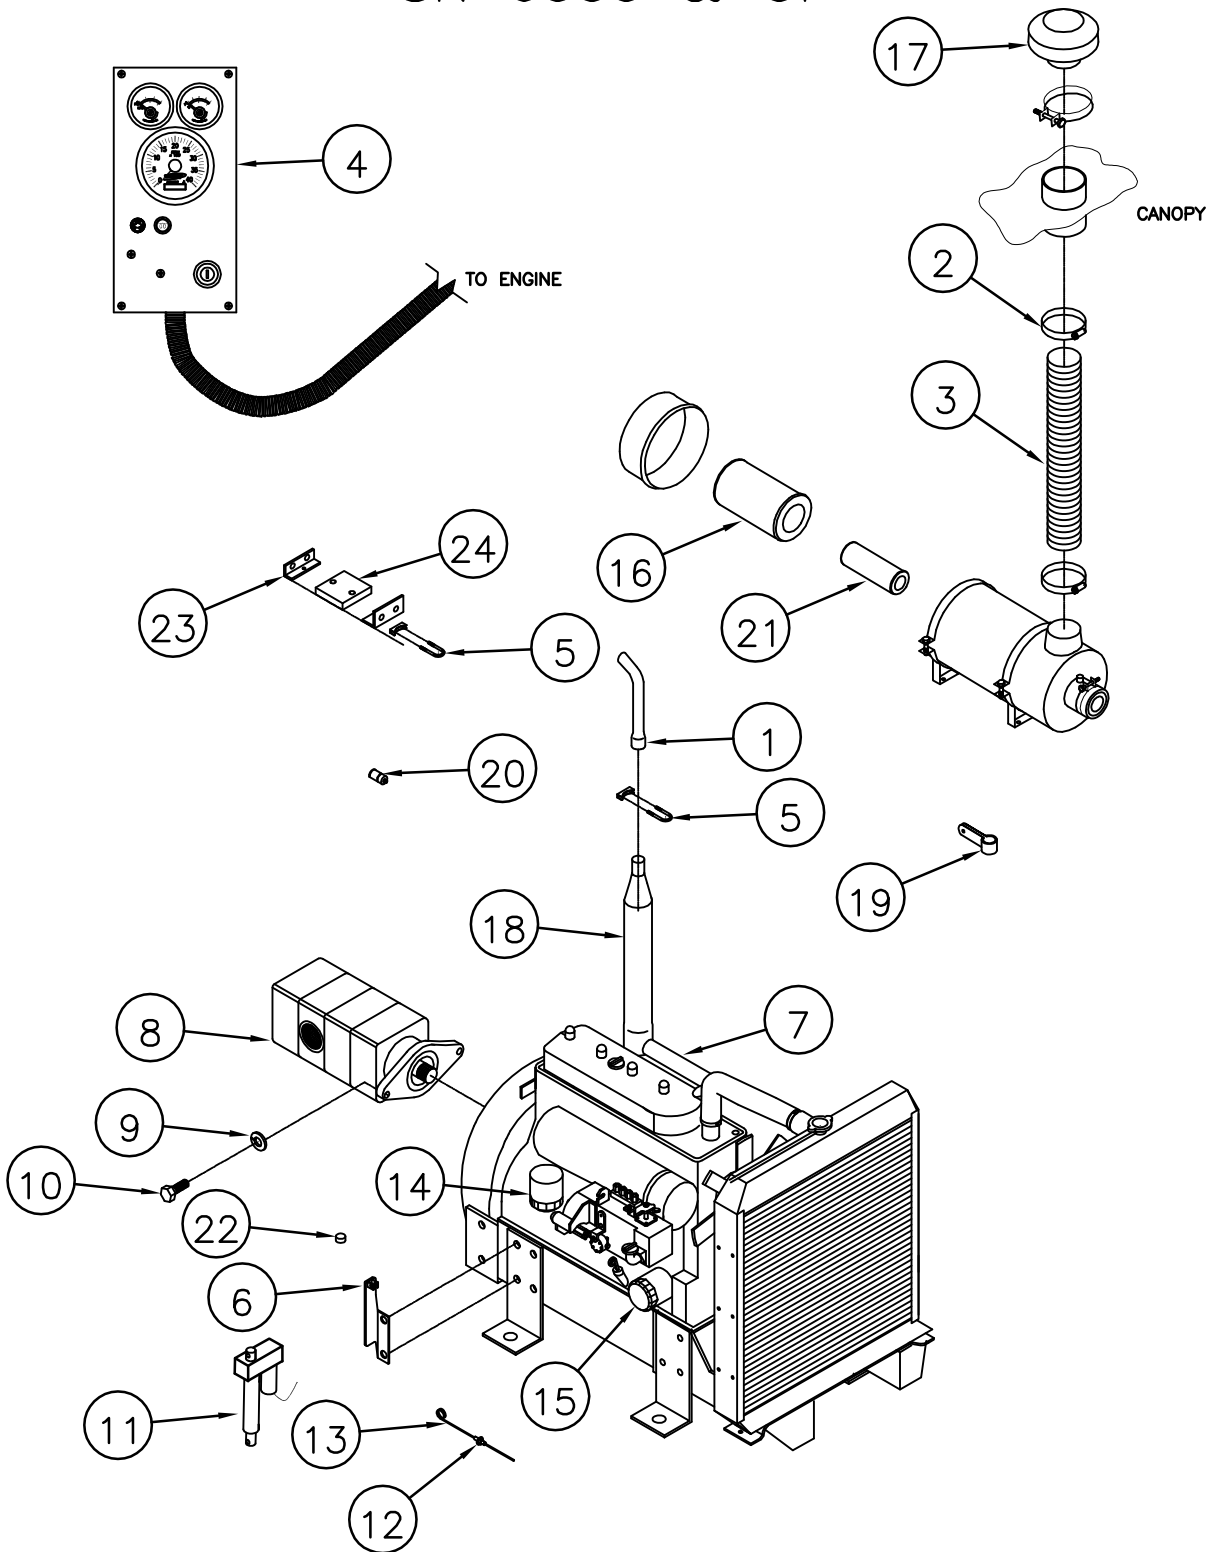



**STEWART-AMOS**


Sweeper Co

AUX. ENGINE  
ASSEMBLY  
SN 4011 & UP

ITEM	PART #	DESCRIPTION	QTY
1	1156	EXHAUST PIPE	1
2	1155	HOSE CLAMP	2
3	1049	INTAKE HOSE	30"
4	42527	ENGINE CONTROL BOX	—
5	1154	EXHAUST CLAMP	2
6	42404	THROTTLE MOUNT	1
7	2077	ENGINE	1
8	3251	HYDRAULIC PUMP	1
9	1524	WASHER	4
10	1545	BOLT	4
11	1387	THROTTLE ACTUATOR	1
12	1299	THROTTLE GUIDE	1
13	1388	THROTTLE ACTUATOR CABLE	1
14	1108	FUEL FILTER	1
15	1106	ENGINE OIL FILTER	1
16	1390	ENGINE OUTER AIR FILTER	1
17	1175	RAIN CAP	1
18	1176	MUFFLER	1
19	1260	CLAMP	1
20	1104	OIL PRESSURE SENDER	1
21	1391	ENGINE INNER AIR FILTER	1
22	2076	RUBBER BUMPER	1
23	42427	MUFFLER BRACE	2
24	42429	RUBBER CONNECTOR	1




# AUX. ENGINE FRAME ASSEMBLY SN 6001 & UP

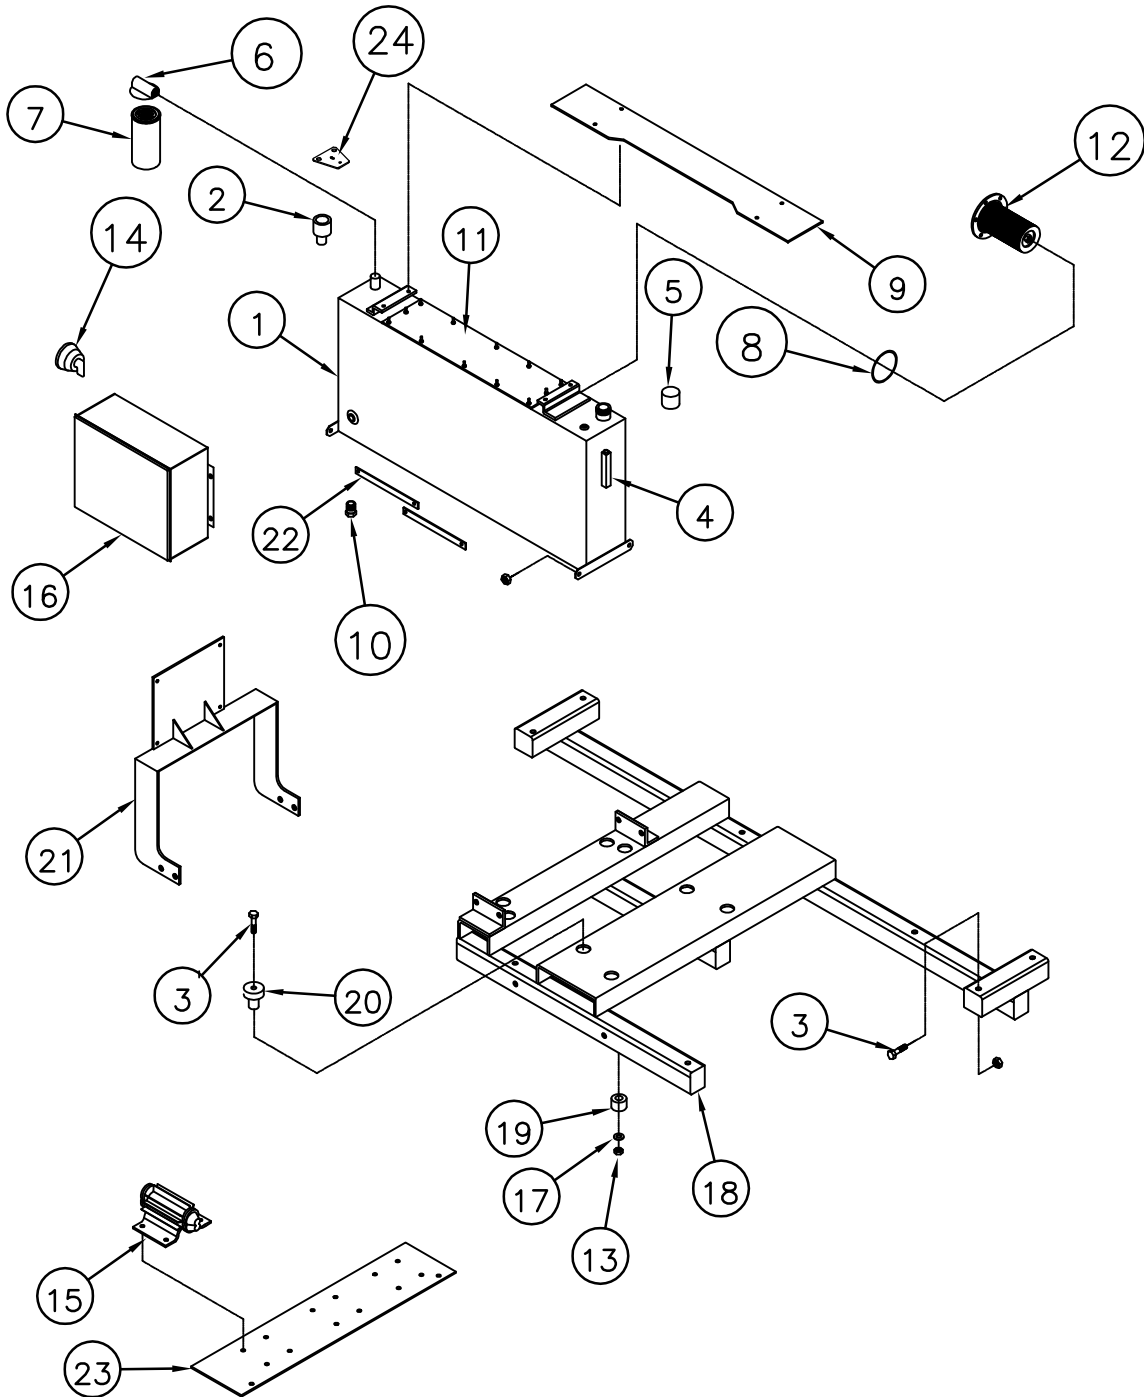

AUX. ENGINE  
FRAME ASSEMBLY  
SN 4011 & UP

ITEM	PART #	DESCRIPTION	QTY
1	52303	HYDRAULIC TANK	1
2	1177	HYD. TANK BREATHER	1
3	1547	BOLT	14
4	1062	SITE GAUGE	1
5	1178	FILL CAP	1
6	1988	FILTER BASE	1
7	1987	HYD FILTER	1
8	2063	O RING	1
9	62301	VALVE MOUNT PLATE	1
10	1179	MAGNETIC DRAIN PLUG	2
11	42305	TANK COVER	1
12	2070	SUCTION SCREEN	1
13	1505	NUT	32
14	9138	DISCONNECT SWITCH	1
15	3232	WATER PUMP	—
16	62512	AUX. BOX	—
17	1524	WASHER	4
18	92401	ENGINE SKID	1
19	1526	WASHER	4
20	1047	ISOLATION MOUNT	4
21	92402	AUX. BOX MOUNT	1
22	42310	HOSE TIE STRAP	3
23	92403	WATER PUMP PLATE	1
24	42315	PRESSURE GAUGE MOUNT	1

# ELEVATOR ASSEMBLY SN 6000 & UP

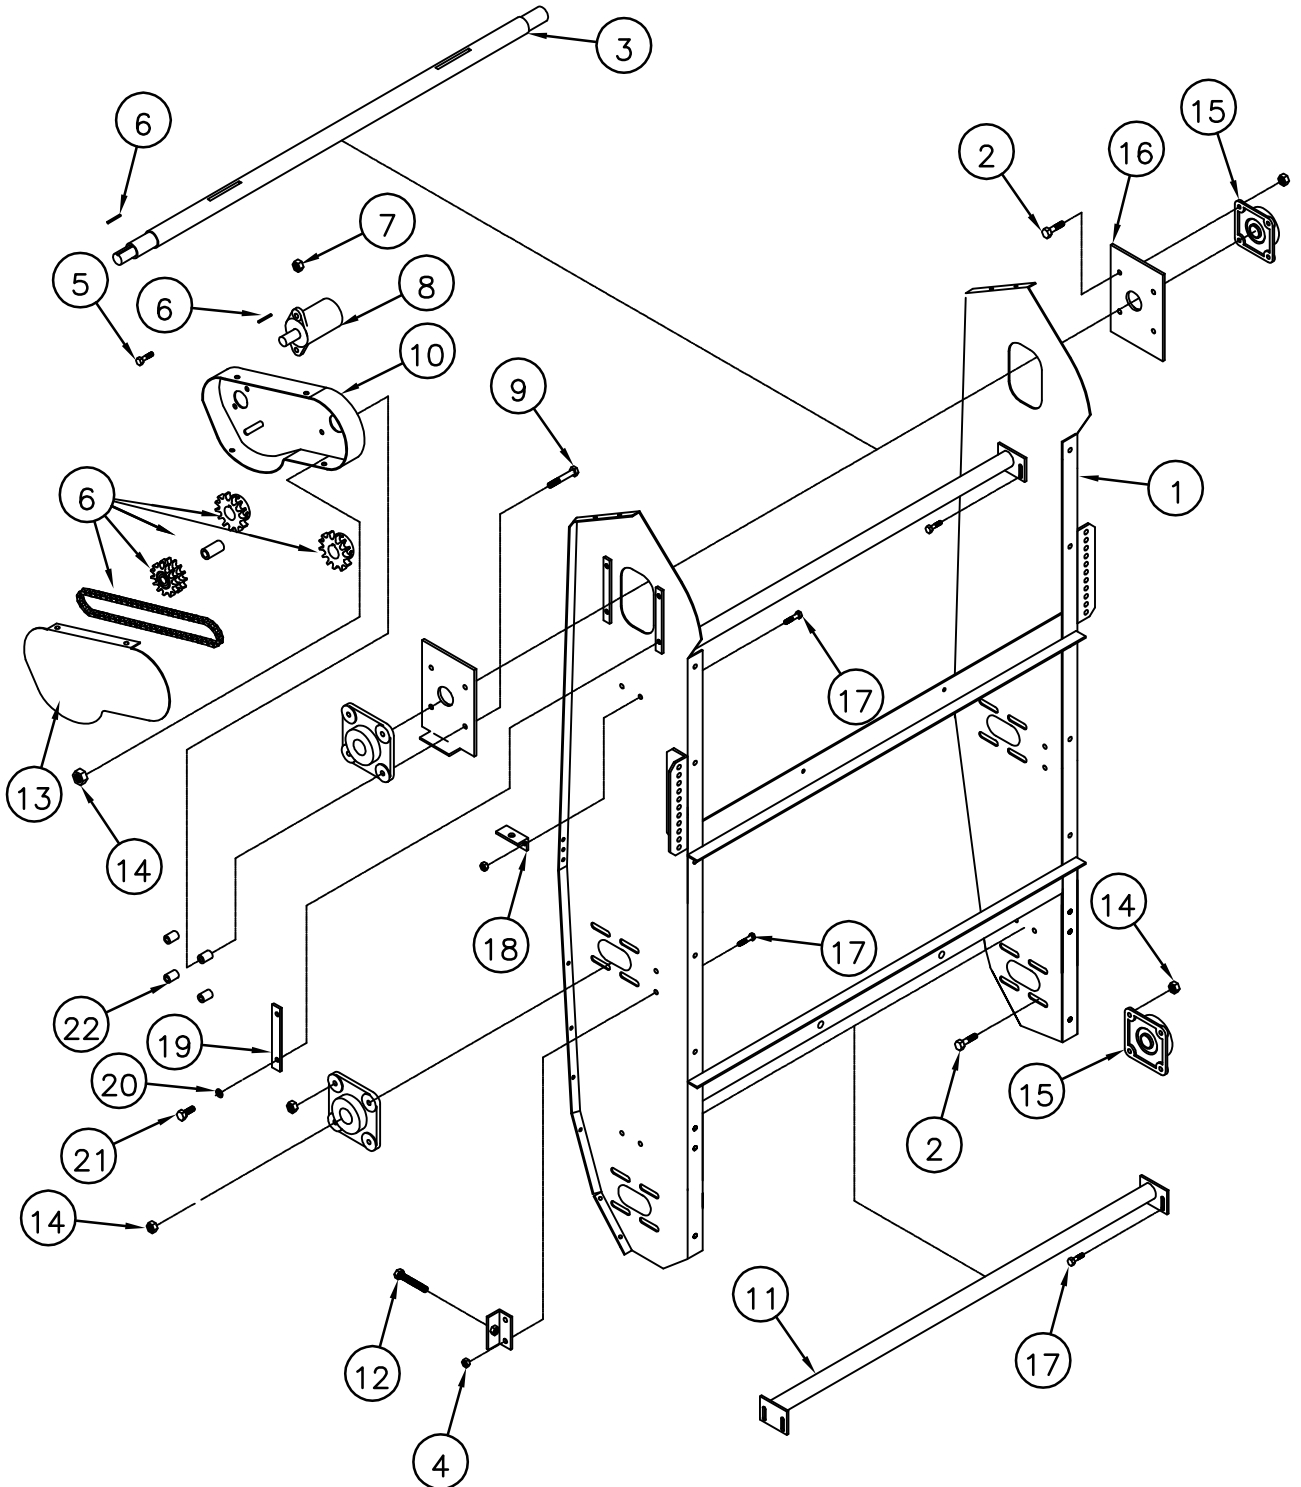




**STEWART-AMOS**

Sweeper Co

ELEVATOR  
ASSEMBLY  
SN 6001 & UP

ITEM	PART #	DESCRIPTION	QTY
1	93103	ELEVATOR FRAME	1
2	1577	BOLT	20
3	43113	TOP SHAFT	1
4	1503	NUT	12
5	1546	BOLT	2
6	80133	ELEV. DRIVE CHAIN ASSEM.	1
7	1505	NUT	2
8	3243	HYDRAULIC MOTOR	1
9	1551	BOLT	4
10	43134	CHAIN GUARD	1
11	43107	SEPARATOR	2
12	1147	BOLT	4
13	43135	COVER	1
14	1506	NUT	24
15	1030	BEARING	6
16	43125	SLIDE	2
17	1540	BOLT	12
18	43127	ADJUSTMENT ANGLE	4
19	43123	GUIDE	4
20	1671	WASHER	8
21	1533	BOLT	8
22	43115	SPACER	4


# ELEVATOR ASSEMBLY

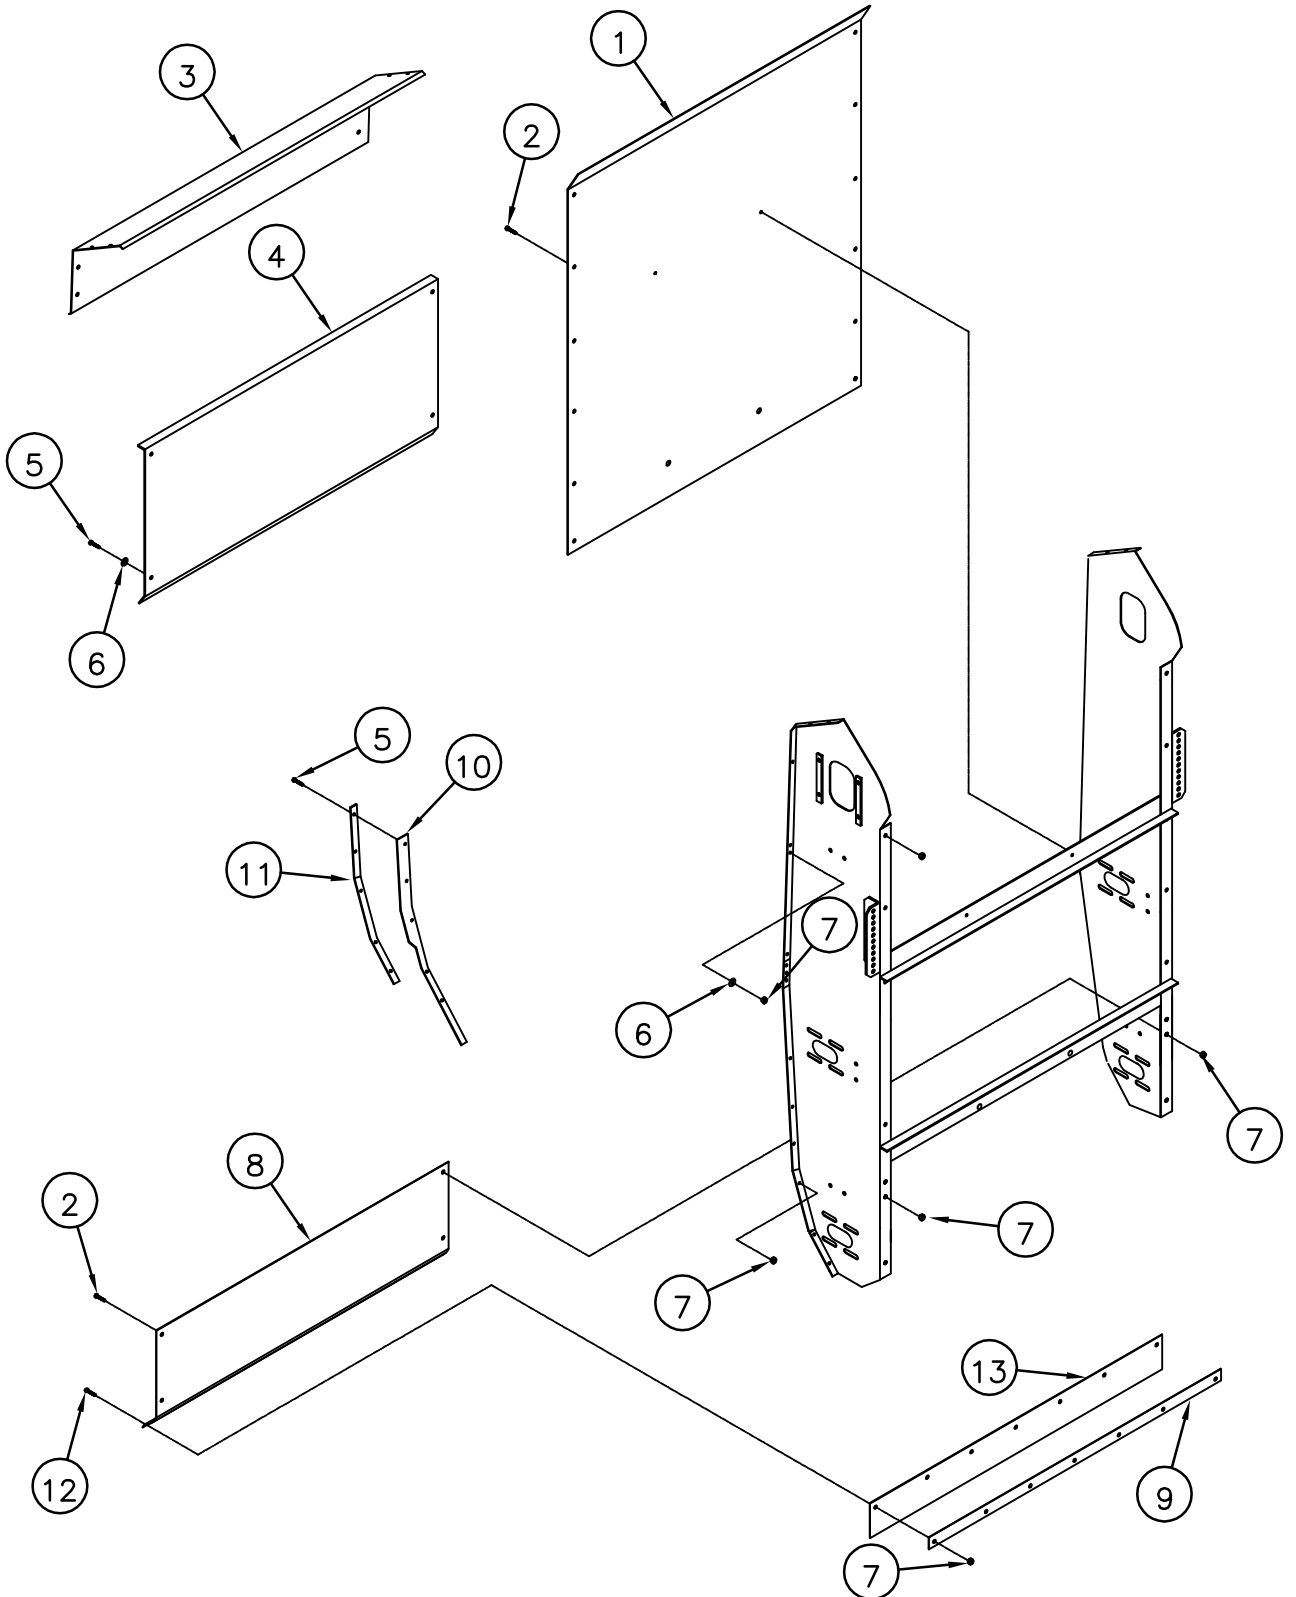

ELEVATOR  
ASSEMBLY

ITEM	PART #	DESCRIPTION	QTY
1	93111	TOP LINER	1
2	1711	BOLT	14
3	43121	CANOPY	1
4	43131	CANOPY EXTENSION	1
5	1535	BOLT	24
6	1521	WASHER	48
7	1502	NUT	50
8	43105	BOTTOM LINER	1
9	41744	END STRAP	1
10	41776	RUBBER SEAL	2
11	41710	HOLD DOWN	2
12	1713	BOLT	7
13	41772	BOTTOM RUBBER	1

# ELEVATOR ASSEMBLY

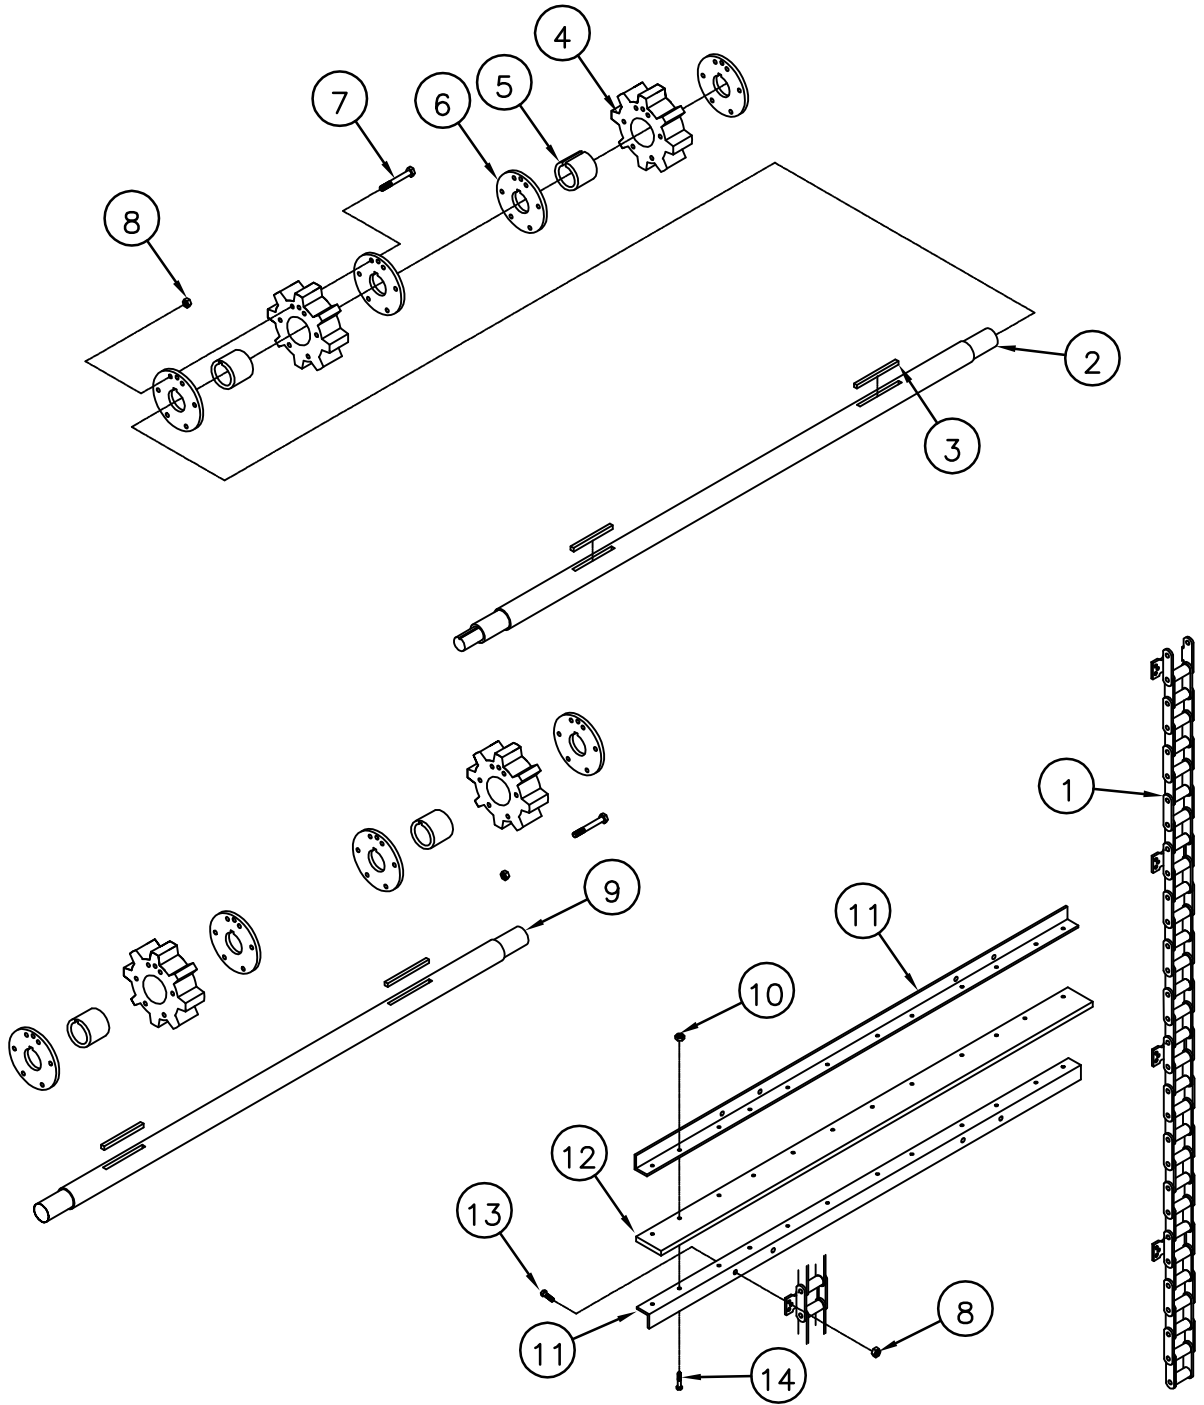


## ELEVATOR ASSEMBLY

ITEM	PART #	DESCRIPTION	QTY
1	93109	ELEVATOR CHAIN	2
2	43113	TOP SHAFT	—
3	1149	SHAFT KEY	6
4	1039	RUBBER SPROCKET	6
5	41738	SHAFT SPACER	6
6	41740	LOCK PLATE	12
7	1541	BOLT	42
8	1503	NUT	70
9	43109	BOTTOM AND MIDDLE SHAFT	2
10	1501	NUT	84
11	41728	SQUEEGEE ANGLE	18
12	41726	SQUEEGEE RUBBER	9
13	1537	BOLT	28
14	1531	BOLT	84




# ELEVATOR LIFT ASSEMBLY

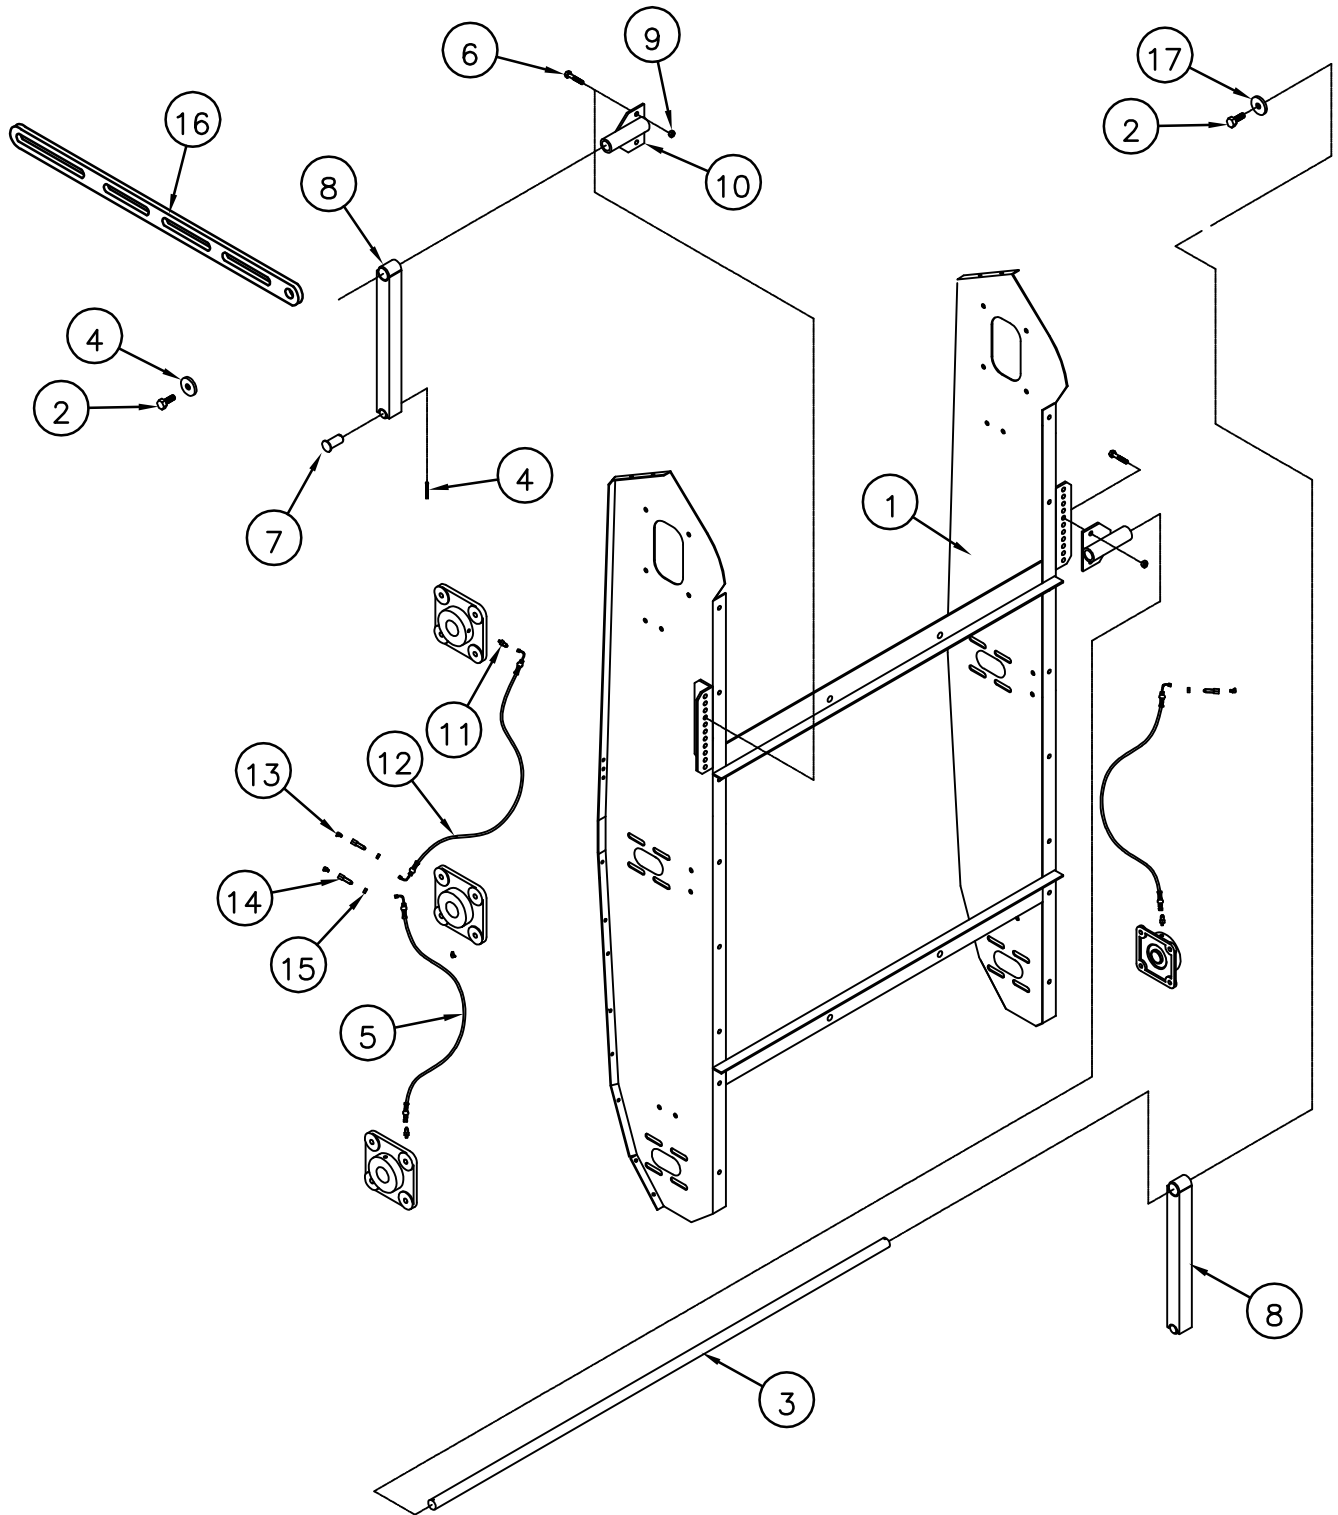

## ELEVATOR LIFT ASSEMBLY

ITEM	PART #	DESCRIPTION	QTY
1	93103	ELEVATOR FRAME	—
2	1782	BOLT	2
3	63105	SWIVEL SHAFT	1
4	62813	WASHER	2
5	1137	HOSE	2
6	1545	BOLT	12
7	41441	PIN	2
8	93113	LIFT ARM	2
9	1505	NUT	12
10	63104	PIVOT SHAFT MOUNT	2
11	1140	FITTING	3
12	1138	HOSE	1
13	1139	GREASE FITTING	6
14	1141	BULKHEAD FITTING	3
15	1142	NUT	3
16	91770	LIFT STRAP	2


# WATER SYSTEM

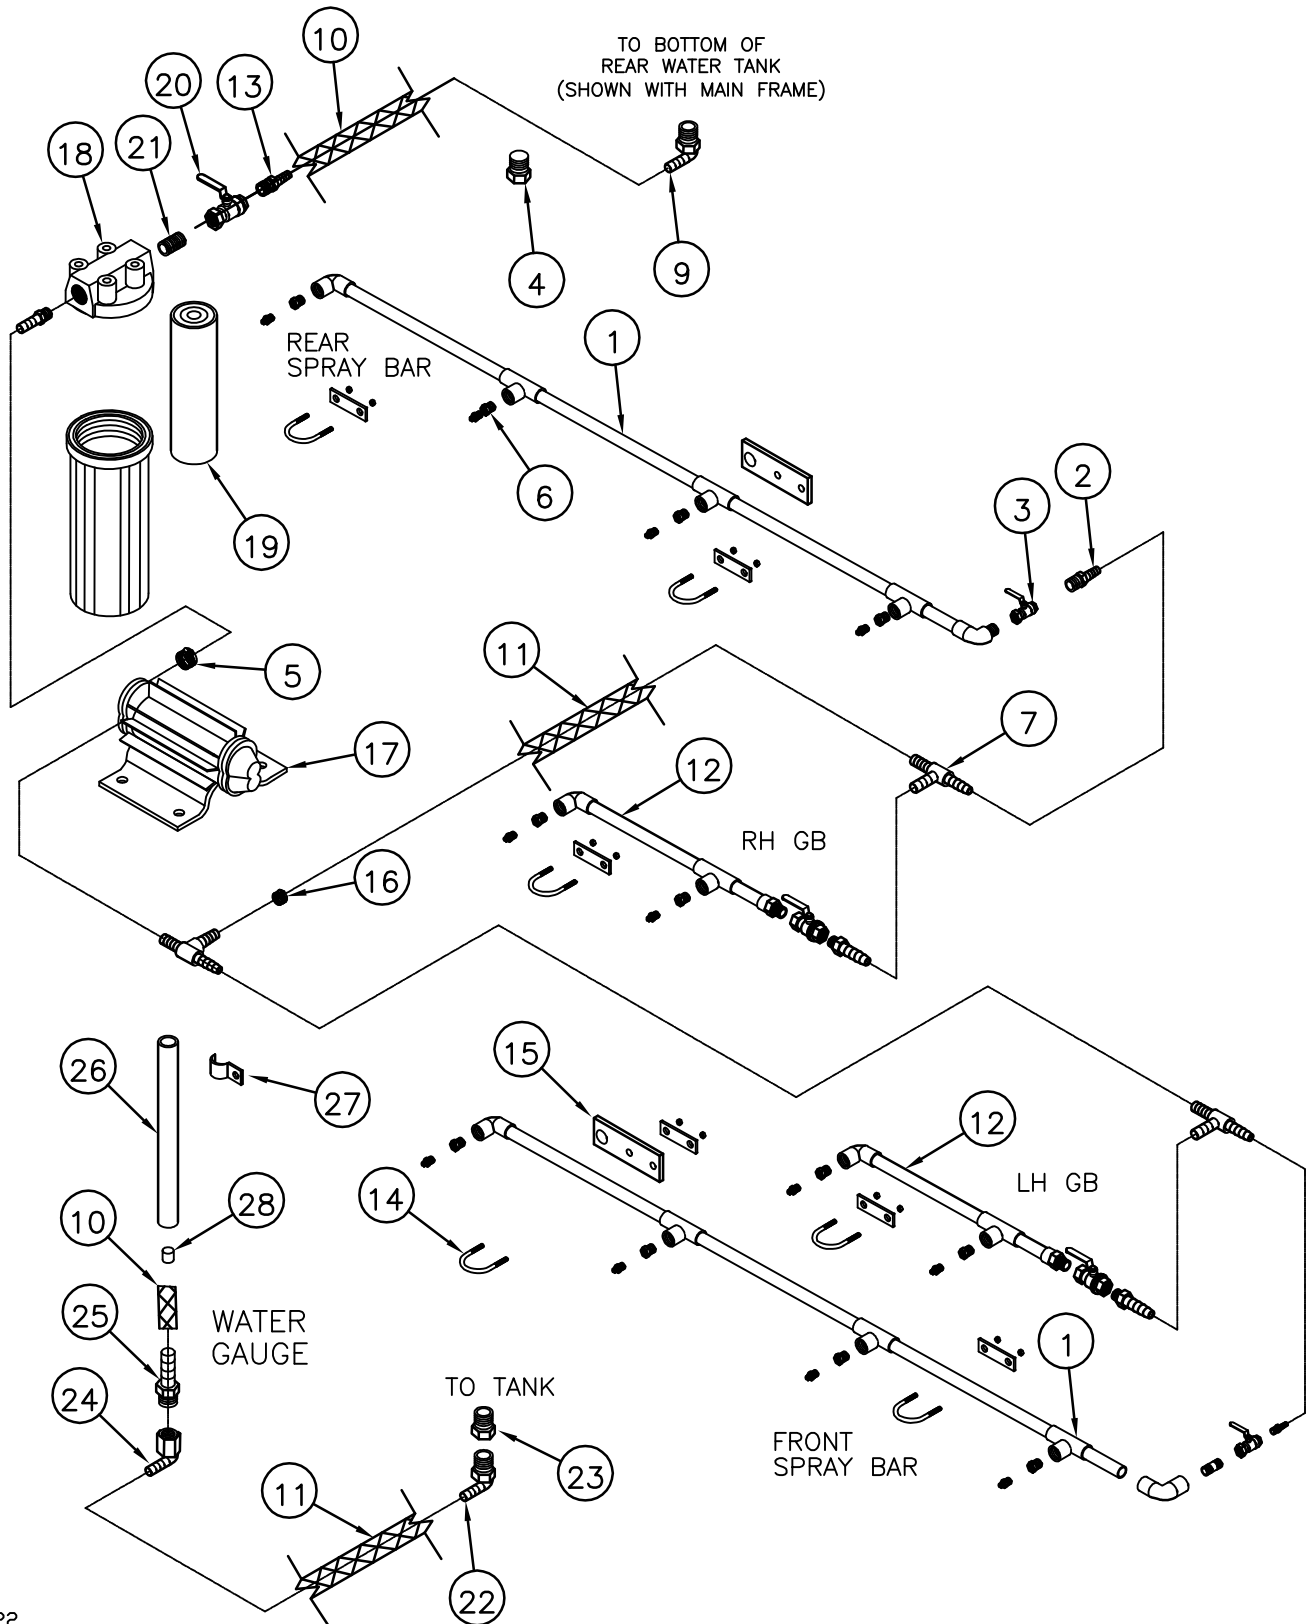

## WATER SYSTEM

ITEM	PART #	DESCRIPTION	QTY
1	42201	SPRAY BAR	2
2	1158	HOSE BARB FITTING	4
3	1204	BALL VALVE	4
4	1185	PLUG	1
5	1203	HOSE CLAMP	4
6	9216	NOZZLE & ADAPTER	12
7	1163	HOSE BARB TEE ADAPTER	5
8			
9	1130	WATER TANK ELBOW	1
10	1165	HOSE	25'
11	1166	HOSE	30'
12	42203	GB SPRAY BAR	2
13	1167	HOSE BARB FITTING	2
14	1168	U BOLT	8
15	42205	SPRAY BAR HANGER	4
16	1169	HOSE CLAMP	20
17	3232	WATER PUMP	1
18	1117	WATER FILTER HOUSING	1
19	1172	WATER FILTER ELEMENT	1
20	1159	BALL VALVE	1
21	1160	NIPPLE	1
22	1371	HOSE BARB FITTING	1
23	1372	ADAPTER	1
24	1373	HOSE BARB FITTING	1
25	1374	HOSE BARB FITTING	1
26	1375	CLEAR TUBING	48"
27	1376	CLAMP	2
28	1377	FLOAT	1

# 42527 ENGINE CONTROL BOX LAYOUT

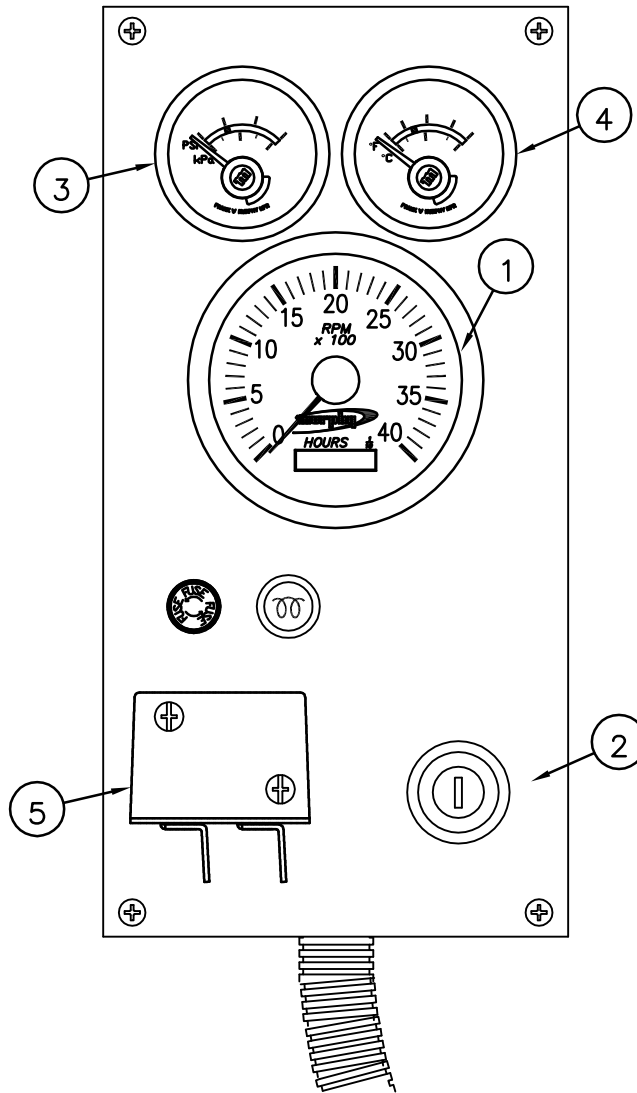


ITEM	PART #	DESCRIPTION	QTY
1	1092	TACH/HOUR METER	1
2	1095	IGNITION SWITCH	1
3	1090	OIL PRESSURE GAUGE	1
4	1091	WATER TEMP GAUGE	1
5	1094	SHUT DOWN MODULE	1




**STEWART-AMOS**

Sweeper Co

# 42527 ENGINE CONTROL BOX SCHEMATIC

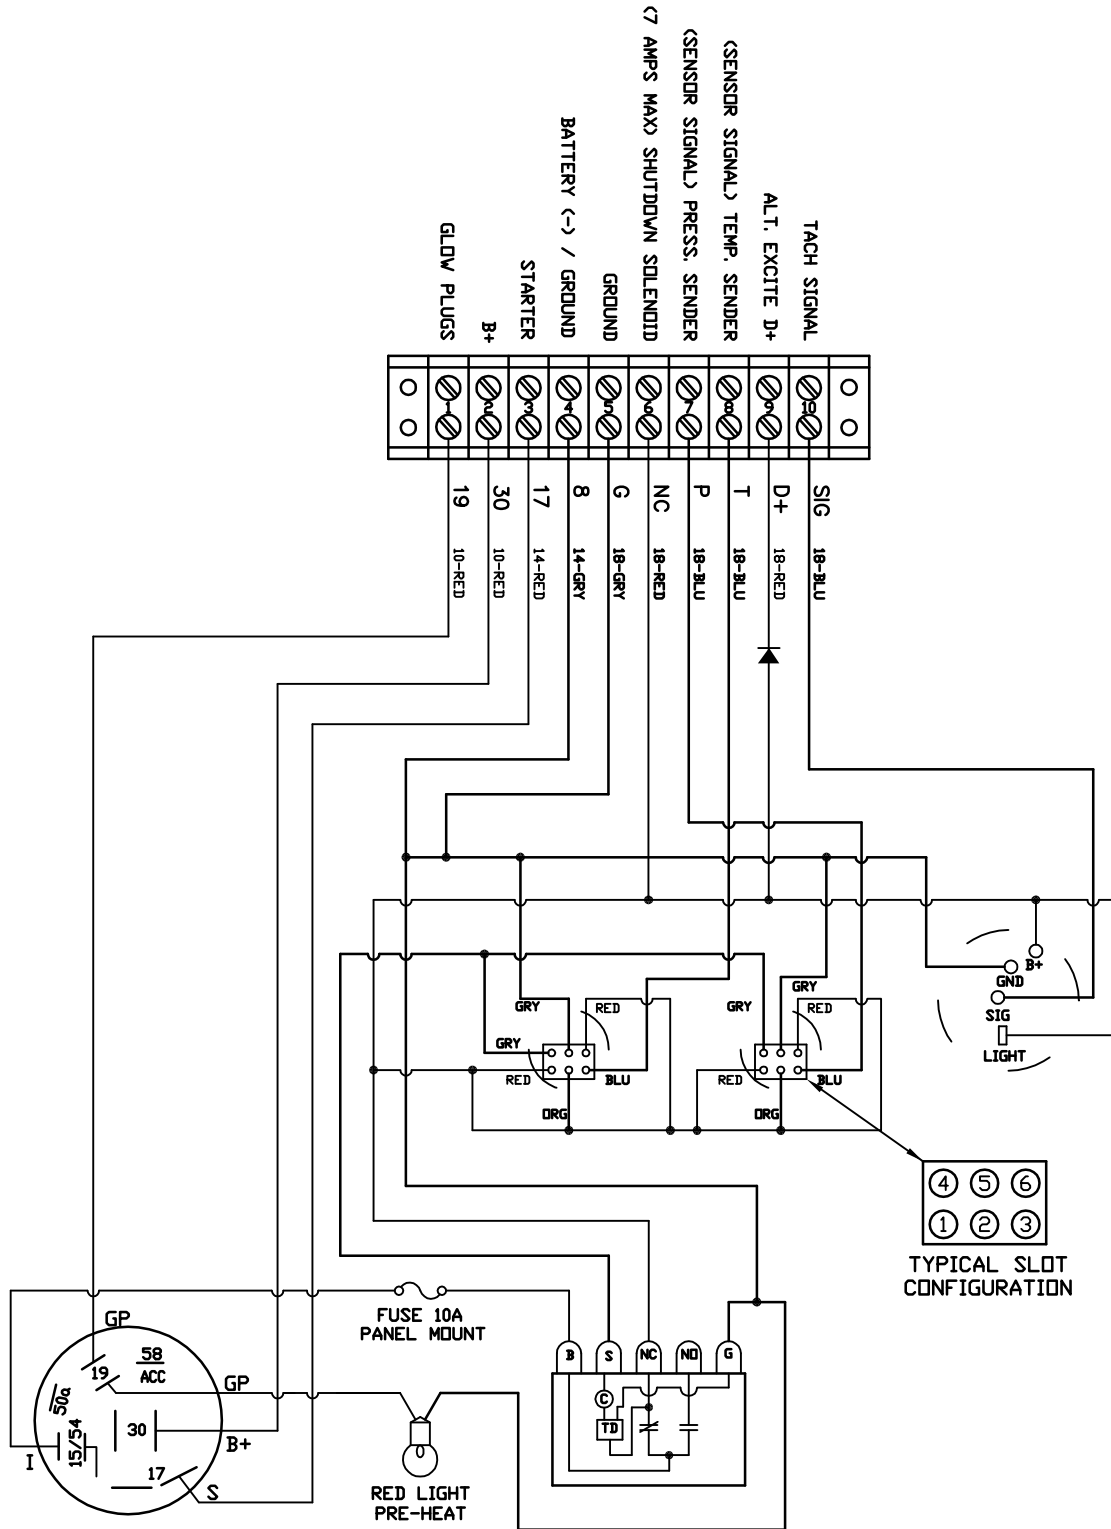


62512  
AUXILIARY CONTROL  
BOX SCHEMATIC

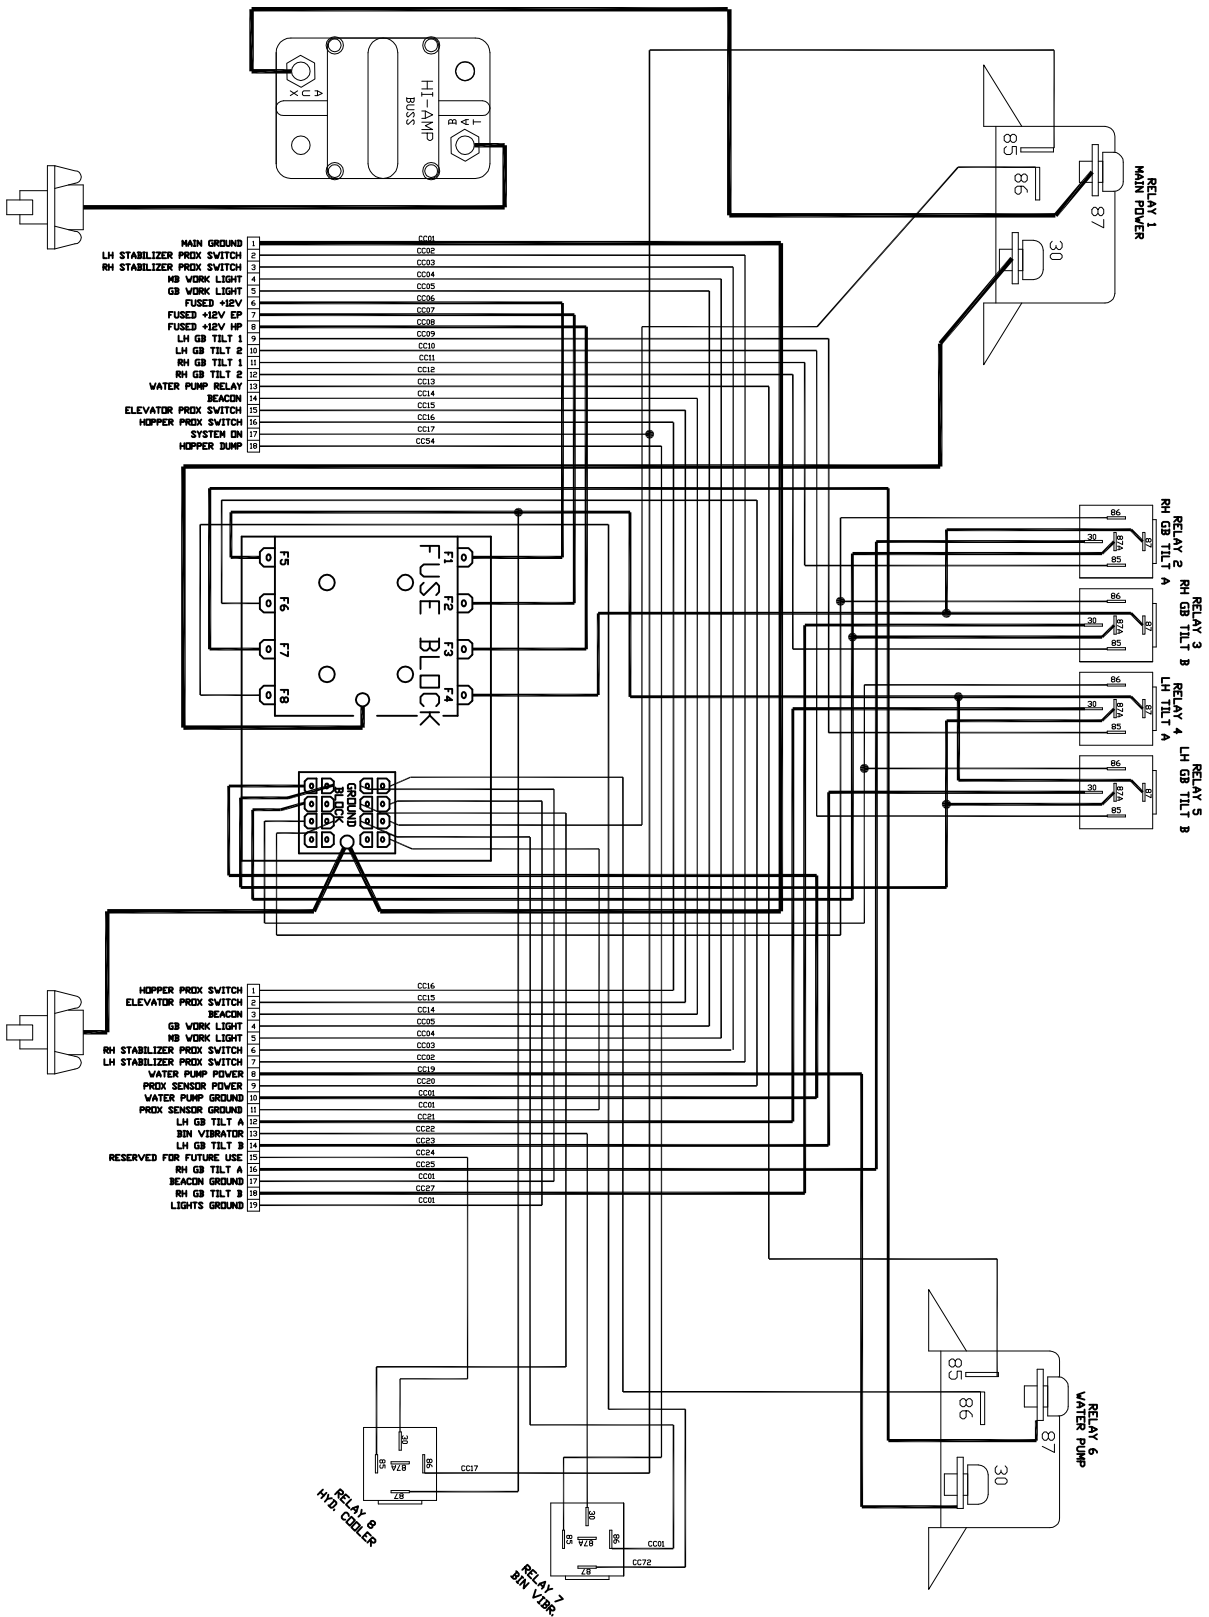




# 80207 AUXILIARY CONTROL BOX LAYOUT

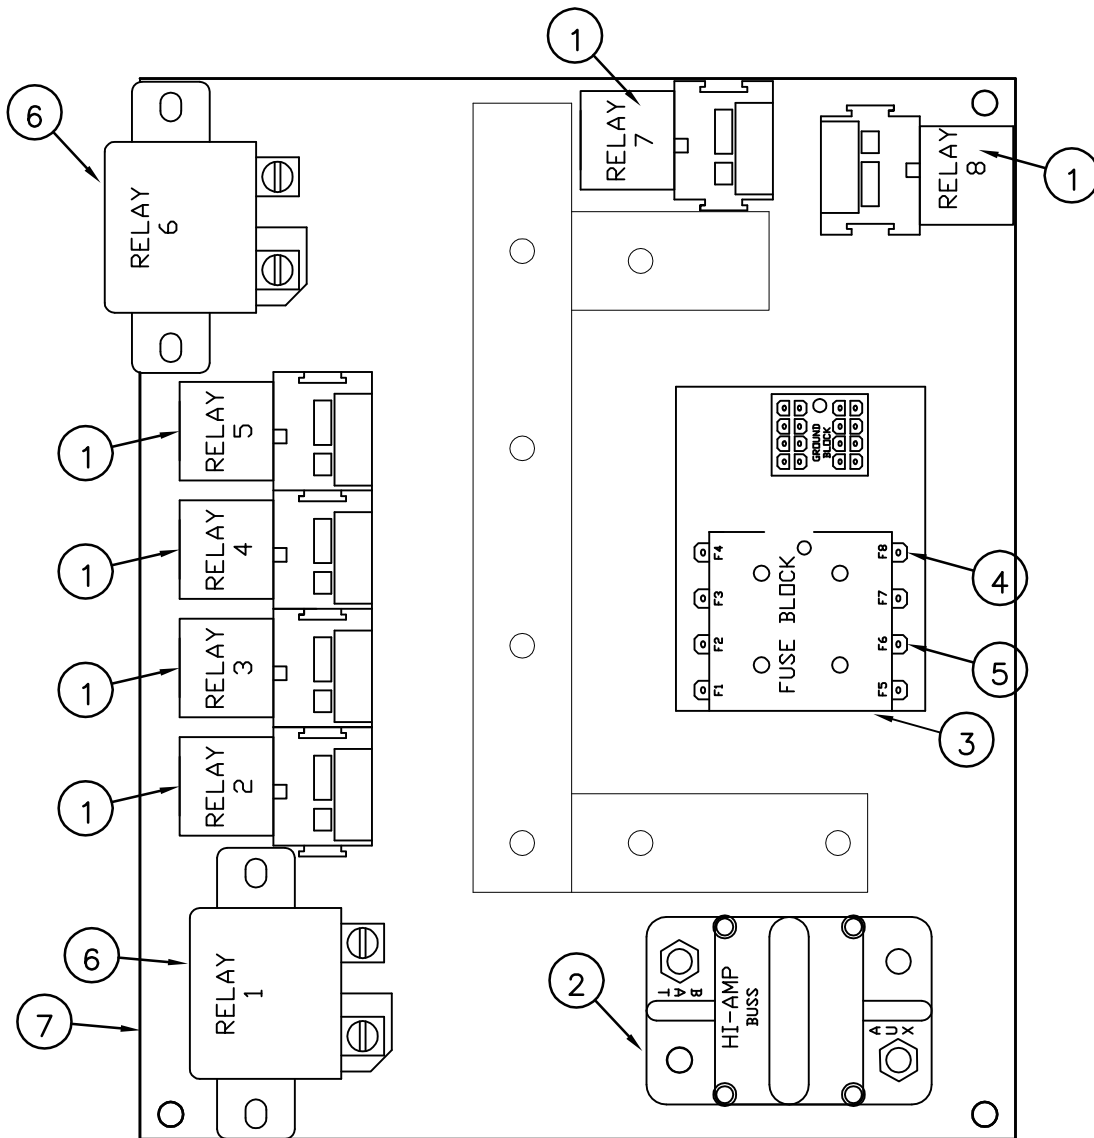

ITEM	PART #	DESCRIPTION	QTY
1	1947	RELAY	6
2	2043	CIRCUIT BREAKER	1
3	2041	FUSE HOLDER 8 POSITION	1
4	2042	FUSE 15 amp F1-5/7/8	7
5	1193	FUSE 5 amp F6	1
6	1946	RELAY	2
7	62507	Aux. Box Mounting Plate	1
8	62512	Harness (not shown)	1




# 62508 REAR LIGHT HARNES

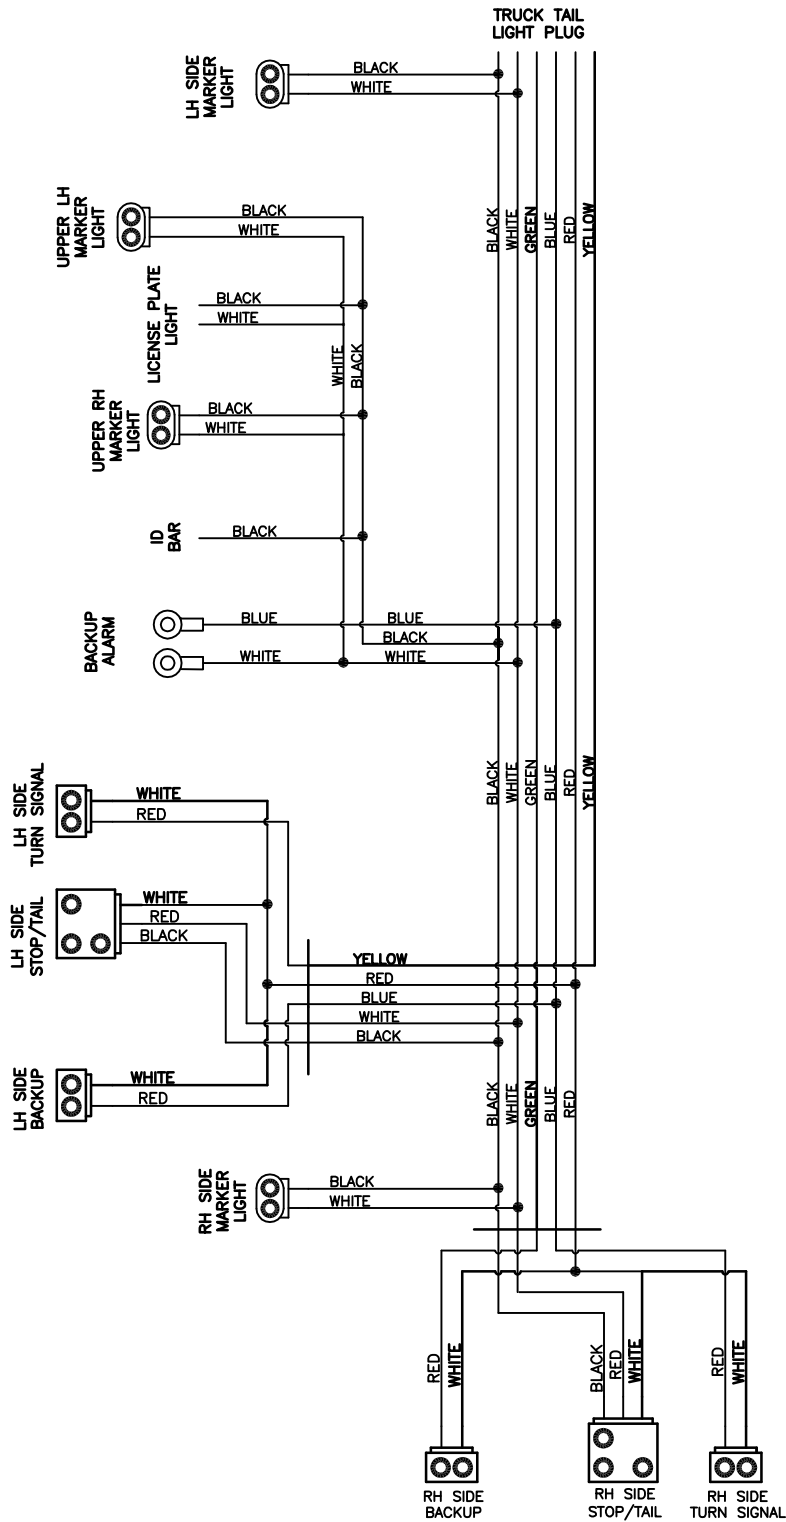




# SWEEPER CONTROL PANEL

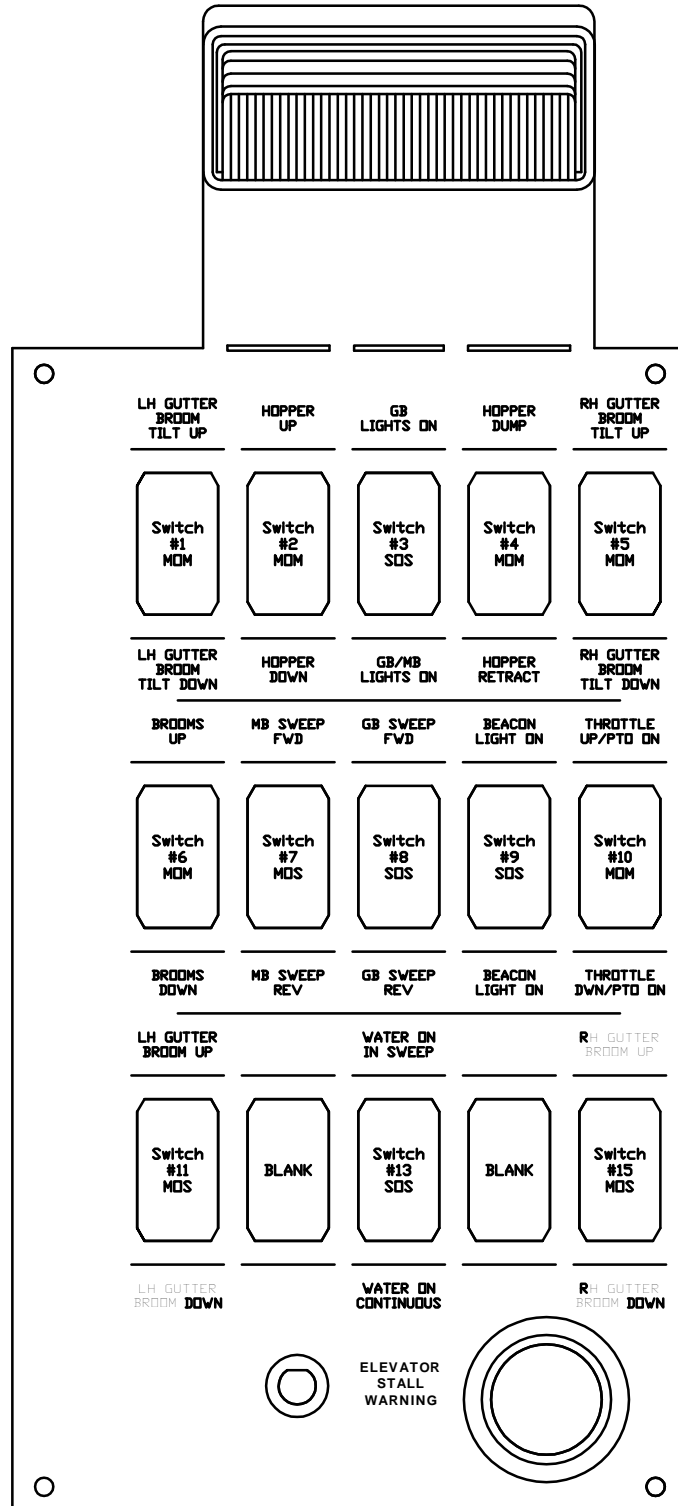


SWEEPER CONTROL  
BOX

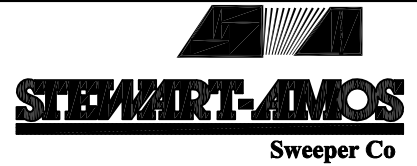

ITEM	PART #	DESCRIPTION	QTY
1	1101	SHOCK MOUNT	4
2	62505	BOX	1
3	62506	PANEL	1
4	42545	PANEL DECAL	1
5	1127	STALL ALARM	1
6	1128	STALL LIGHT	1
7	1686	SWITCH (M-O-M)	6
8	1684	SWITCH (S-O-S)	4
9	1685	SWITCH (S-O-M)	3
10	1689	HOLE PLUG	2
11	1691	COURTESY LIGHT	1

# 62510 VALVE HARNESS

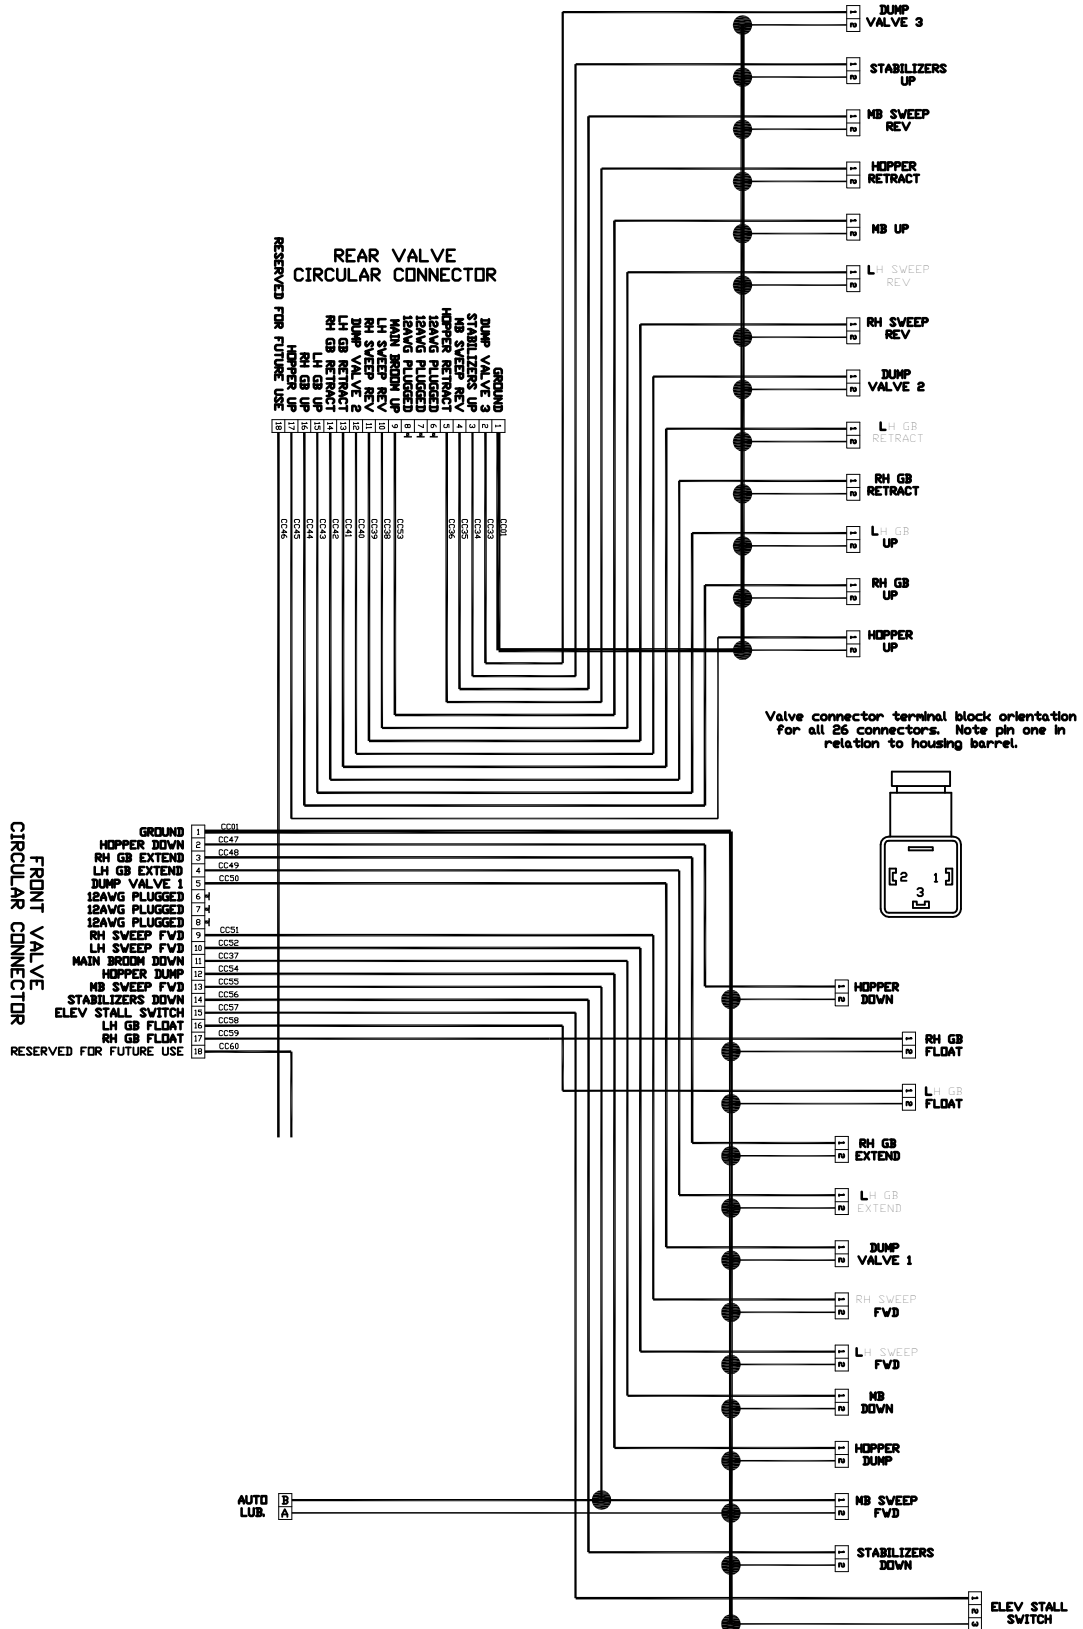




**STEWART-AMOS**


Sweeper Co

# 62513 SWEEPER HARNESS

## CHASSIS HARNESS CONNECTOR

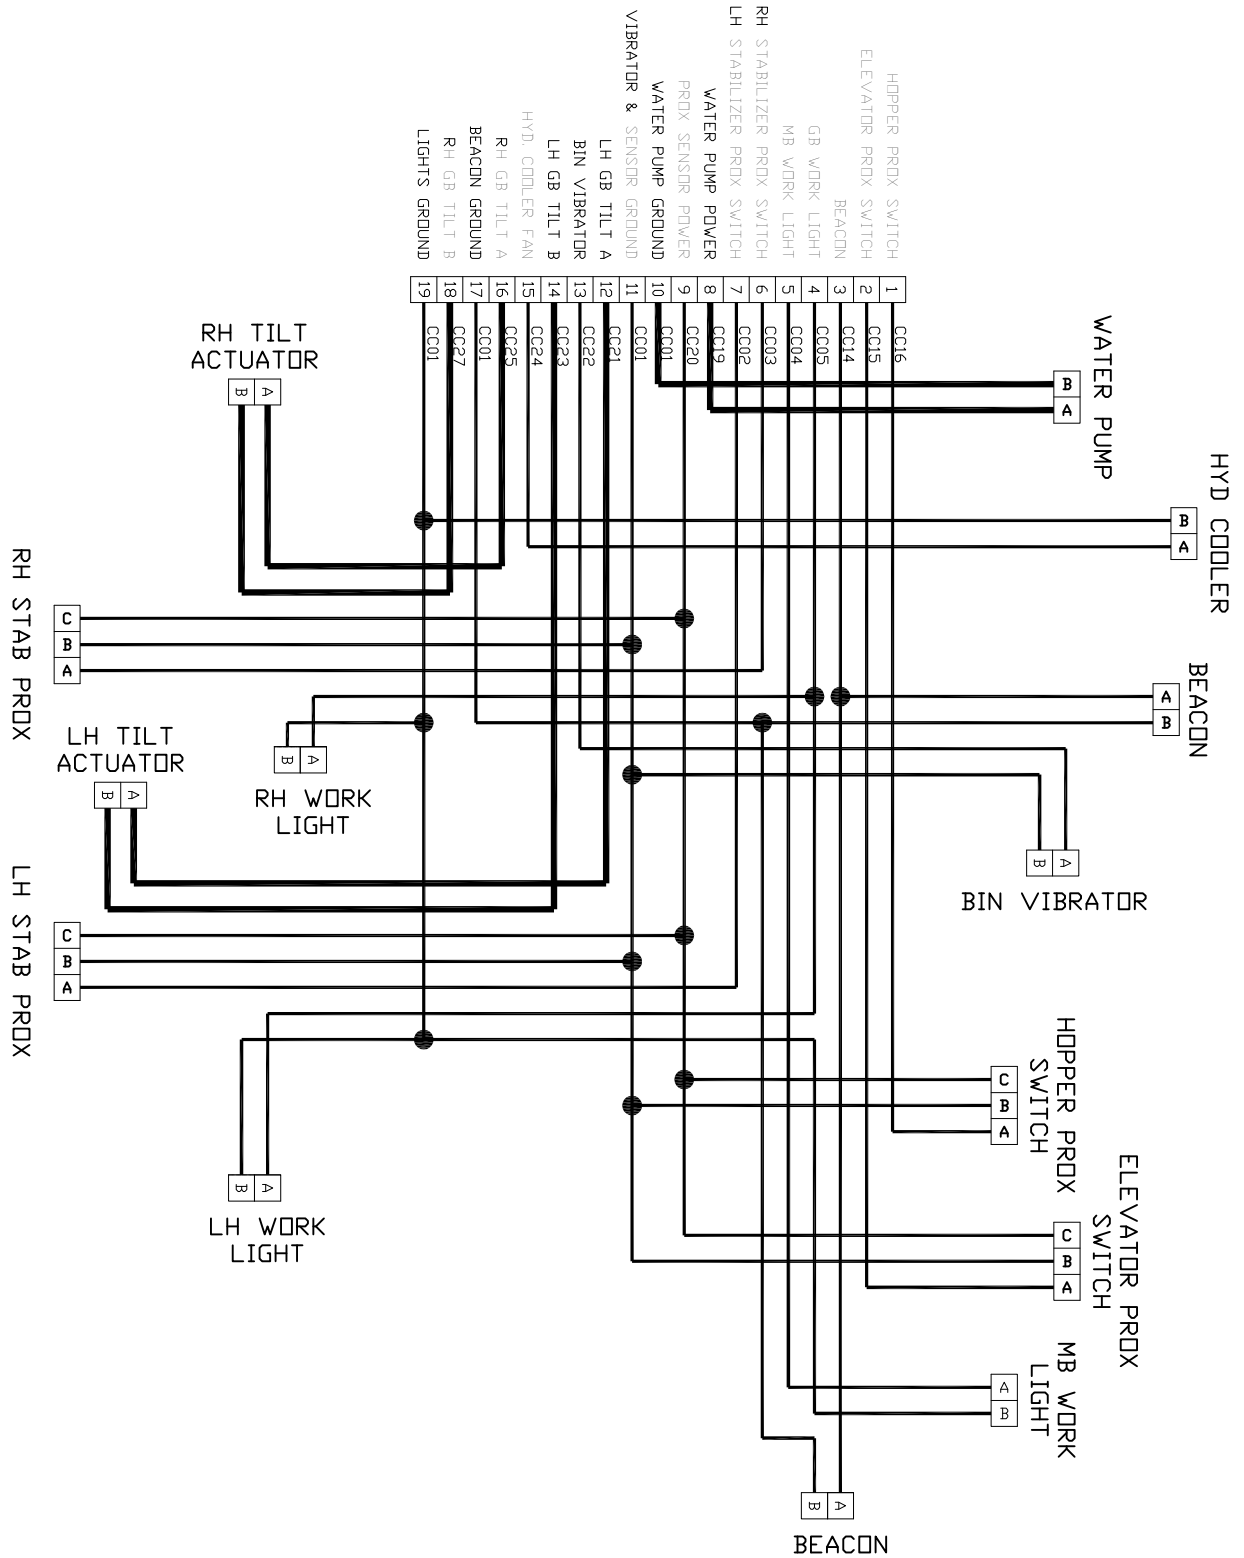


# 3225 POWER CABLE

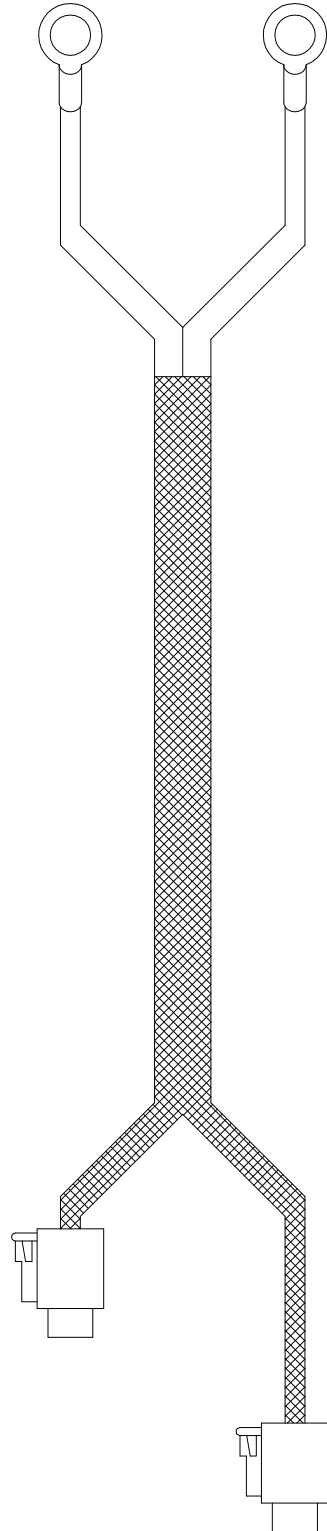



# IN CAB PANEL MOUNTING

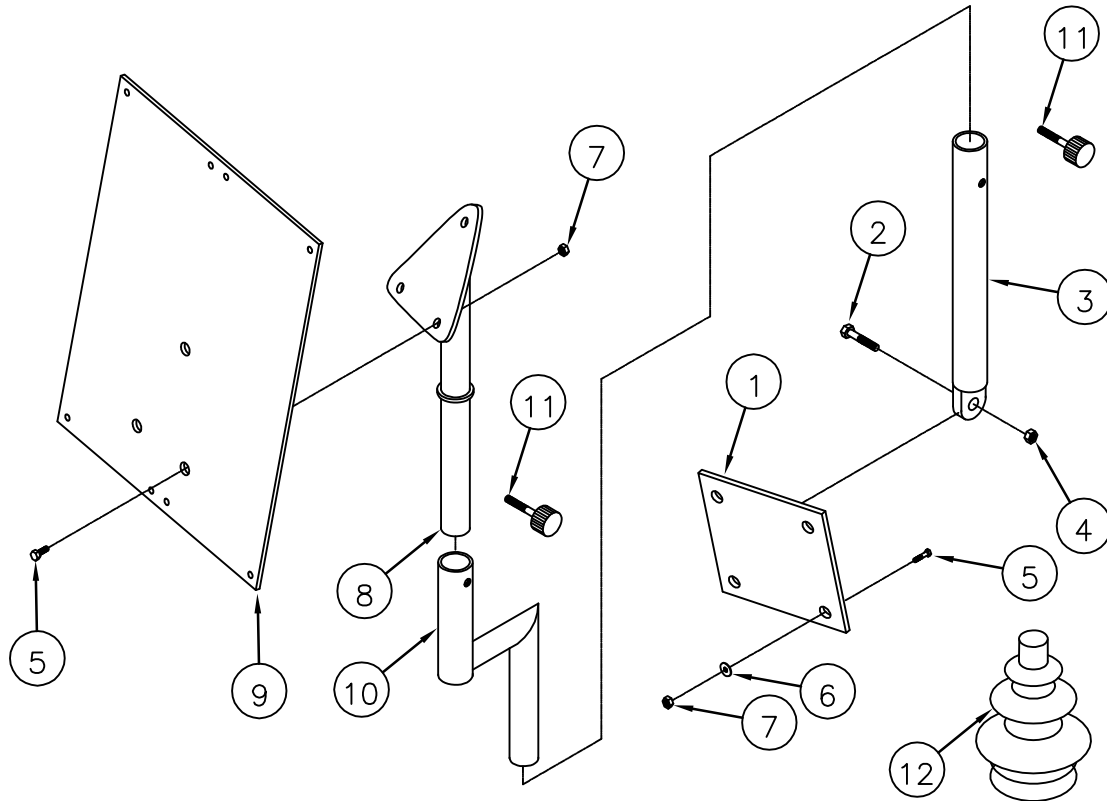

ITEM	PART #	DESCRIPTION	QTY
1	42501	ADAPTER PLATE	1
2	1546	BOLT	1
3	42502	SUPPORT POST	1
4	1505	NUT	1
5	1531	BOLT	7
6	1520	WASHER	4
7	1501	NUT	7
8	42503	TOP MOUNT	1
9	42506	BOX MOUNT PLATE	1
10	62501	OFFSET POST	1
11	1194	KNOB	2
12	1233	ELECT. BOOT	1





# Decals

## S-4 DECAL CHARTS

To Order:

CALL toll free: 800-482-2302

Call Direct: 717 901-5600

[7am to 5pm eastern]

Send Fax: 717-901-2326

[24/7/365]

Email: [parts@stewart-amos.com](mailto:parts@stewart-amos.com)



PT # 43201 8/UNIT




PT # 43205 4/UNIT



PT # 43207 4/UNIT



PT # 43211 4/UNIT

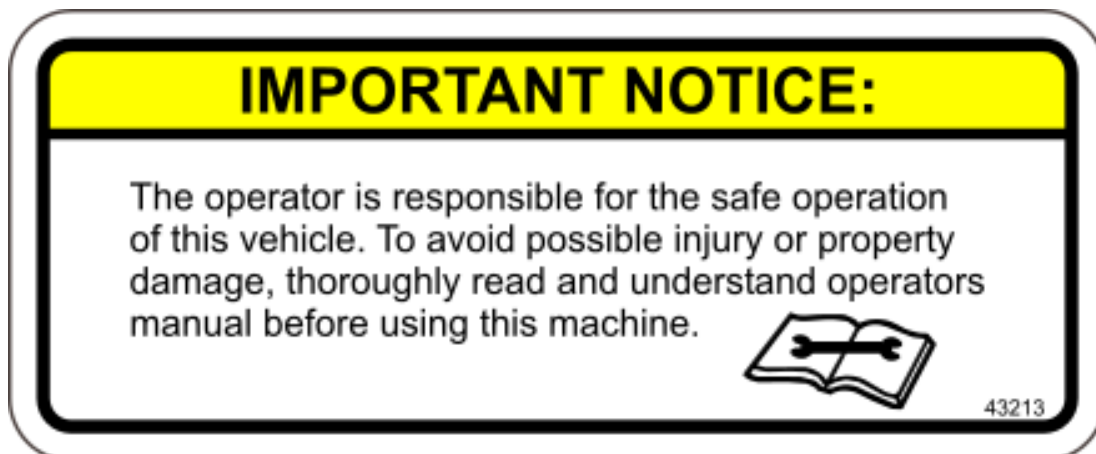

PT # 43213 1/UNIT



PT # 43215 4/UNIT



PT # 43217 2/UNIT




**PT # 43219 1/UNIT**




**PT # 43221 1/UNIT**




PT # 43223 4/UNIT

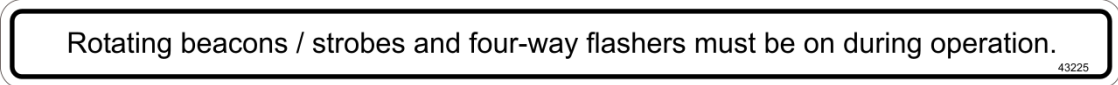


PT # 43225 1/UNIT

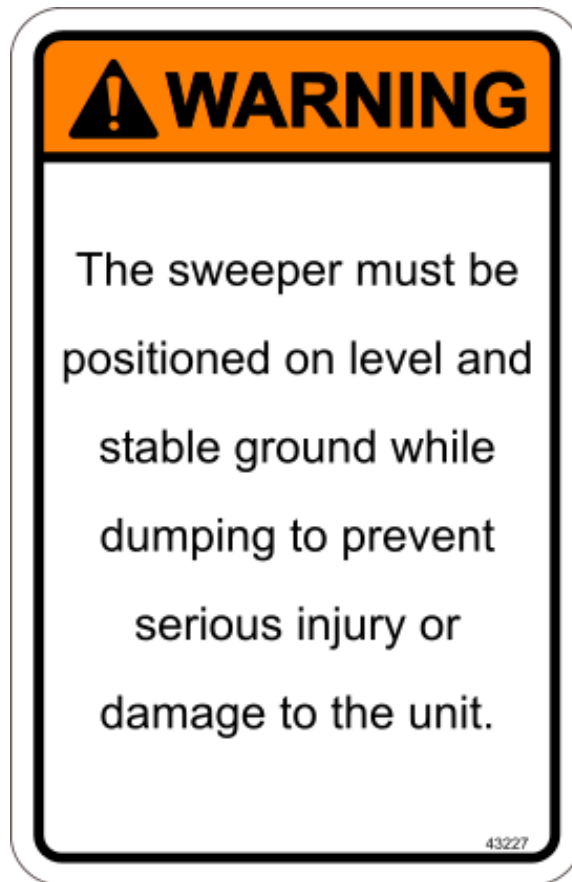

PT # 43227 2/UNIT

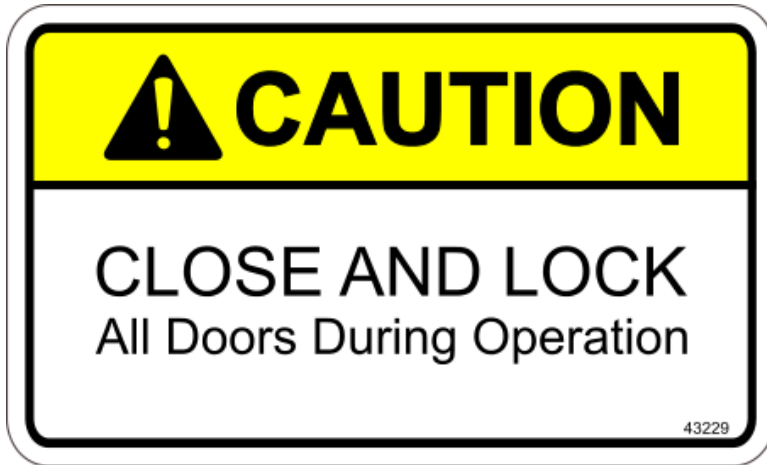

PT # 43229 7/UNIT

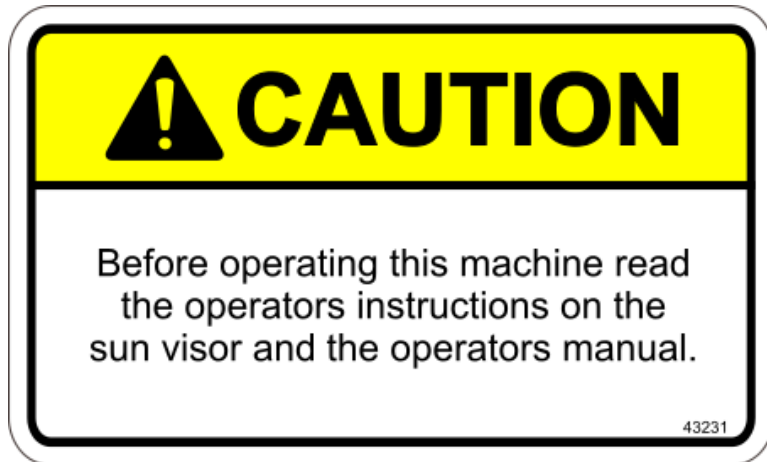

PT # 43231 2/UNIT



PT # 43233 2/UNIT

# WATER ONLY

PT # 43235 1/UNIT

**DUMP ON LEVEL GROUND ONLY**

43237

PT # 43237 1/UNIT

**! DANGER**

**High Wire      Hazardous Voltage**

Machine contact with hazardous lines  
will cause severe injury or death.

Raise or dump hopper in areas free of power lines.  
Refer to operator's manual.


43239

PT # 43239 1/UNIT



Driving at low speeds for sustained periods of time may overheat the transmission fluid. Driver should select "L" position during low speed operation, under 11mph (18kmh)

PT # 43244 1/UNIT

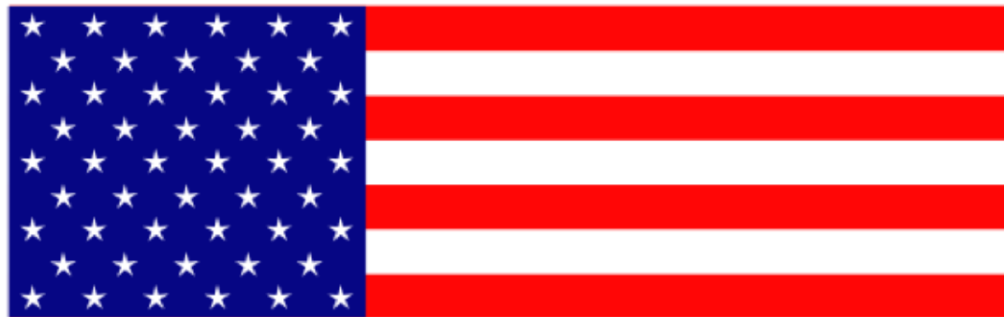

**PROUDLY MADE IN THE U.S.A.**

PT # 43245 1/UNIT



**PT # 43247 2/UNIT**



**PT # 43264 2/UNIT**

**STARFIRE**

**S-4**

**PT # 43248 2/UNIT**

**STARFIRE**


**S-4**


**PT # 43249 1/UNIT**



**STARFIRE**

**PT # 43246 1/UNIT**

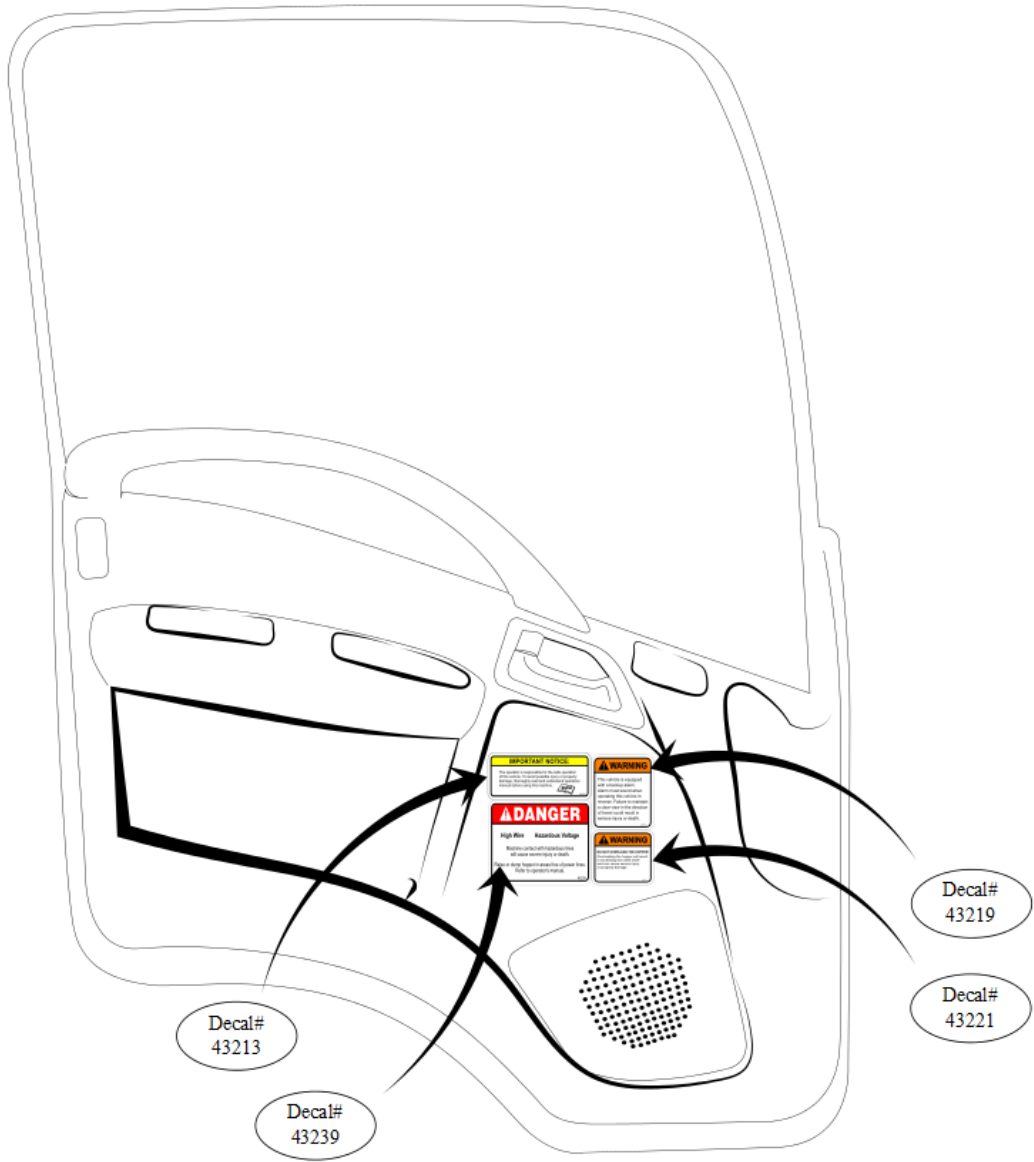


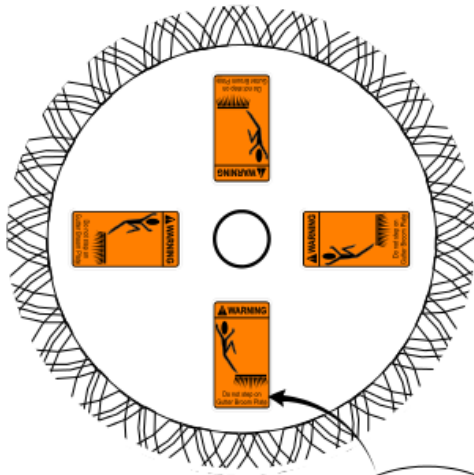


Decal# 43225

Decal# 43201


Decal# 43244

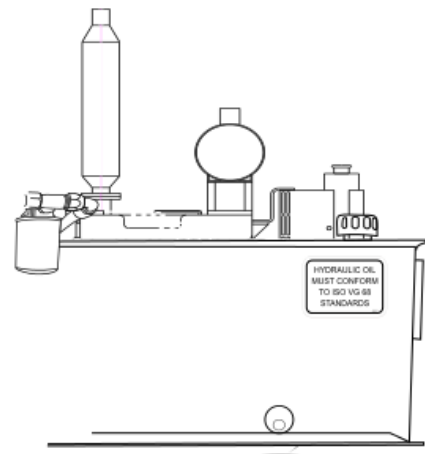

Decal# 43217

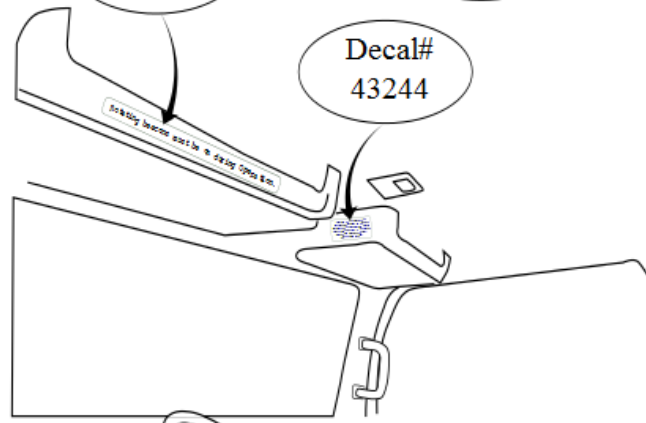



Decal# 43237


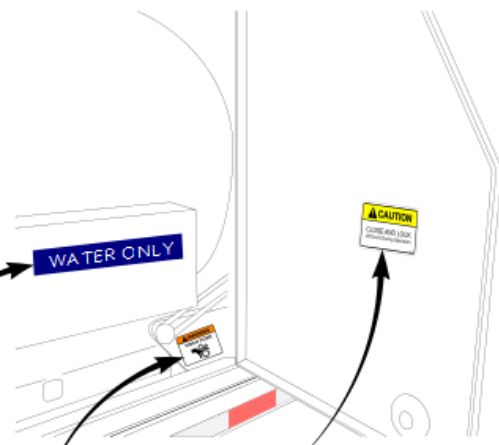



Decal# 43235

Decal# 43205

Decal# 43229

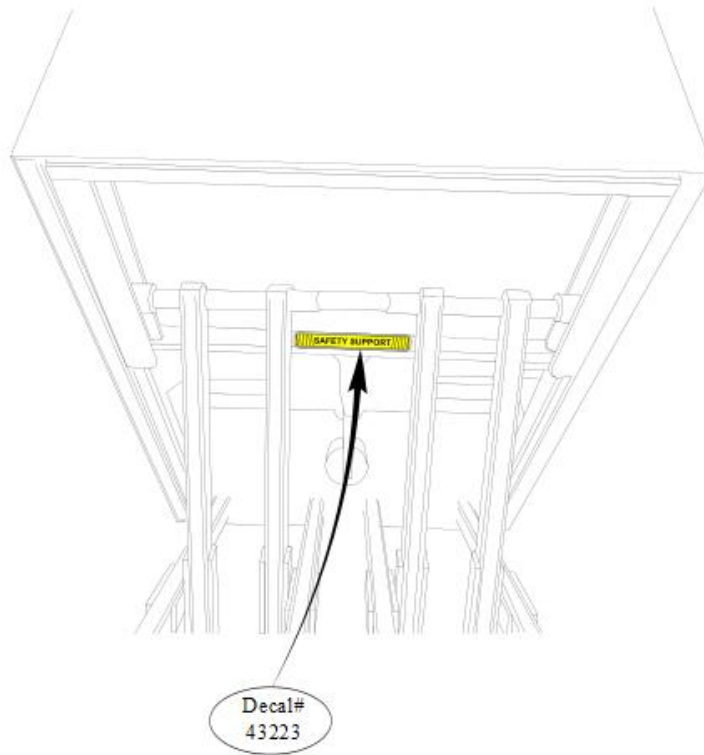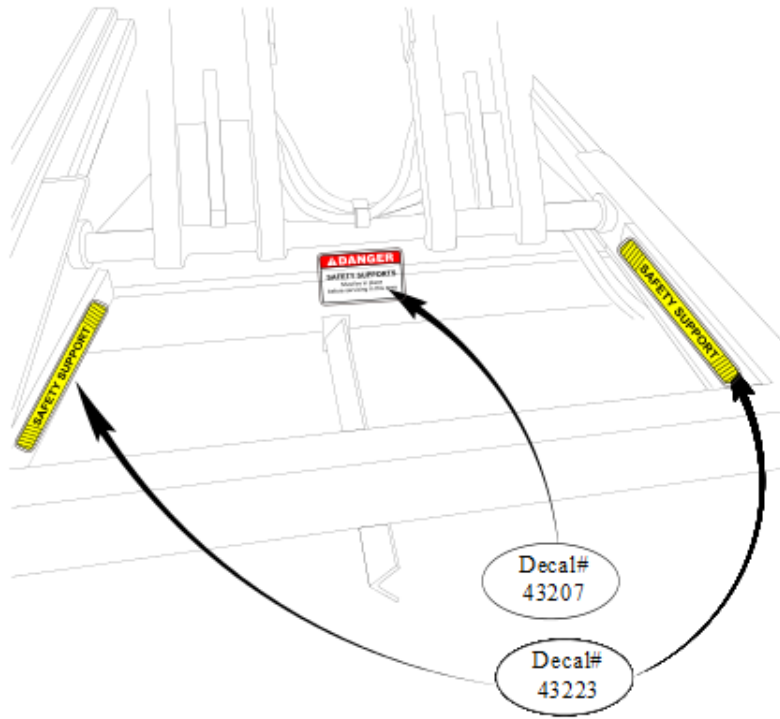

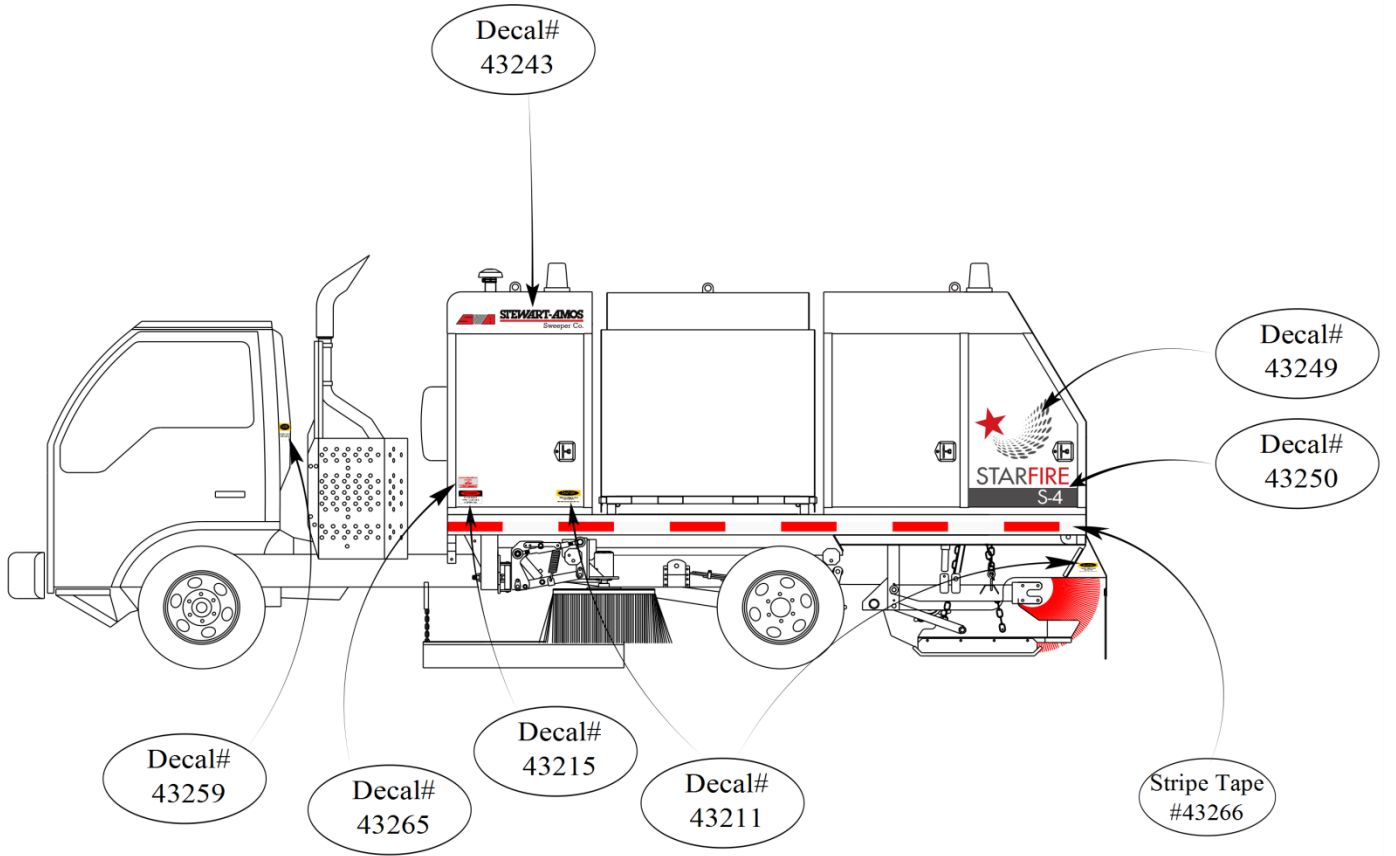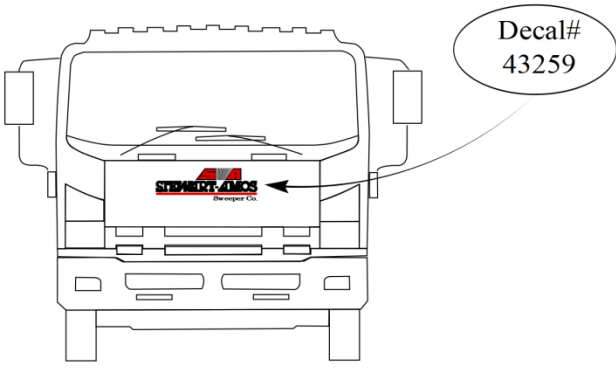

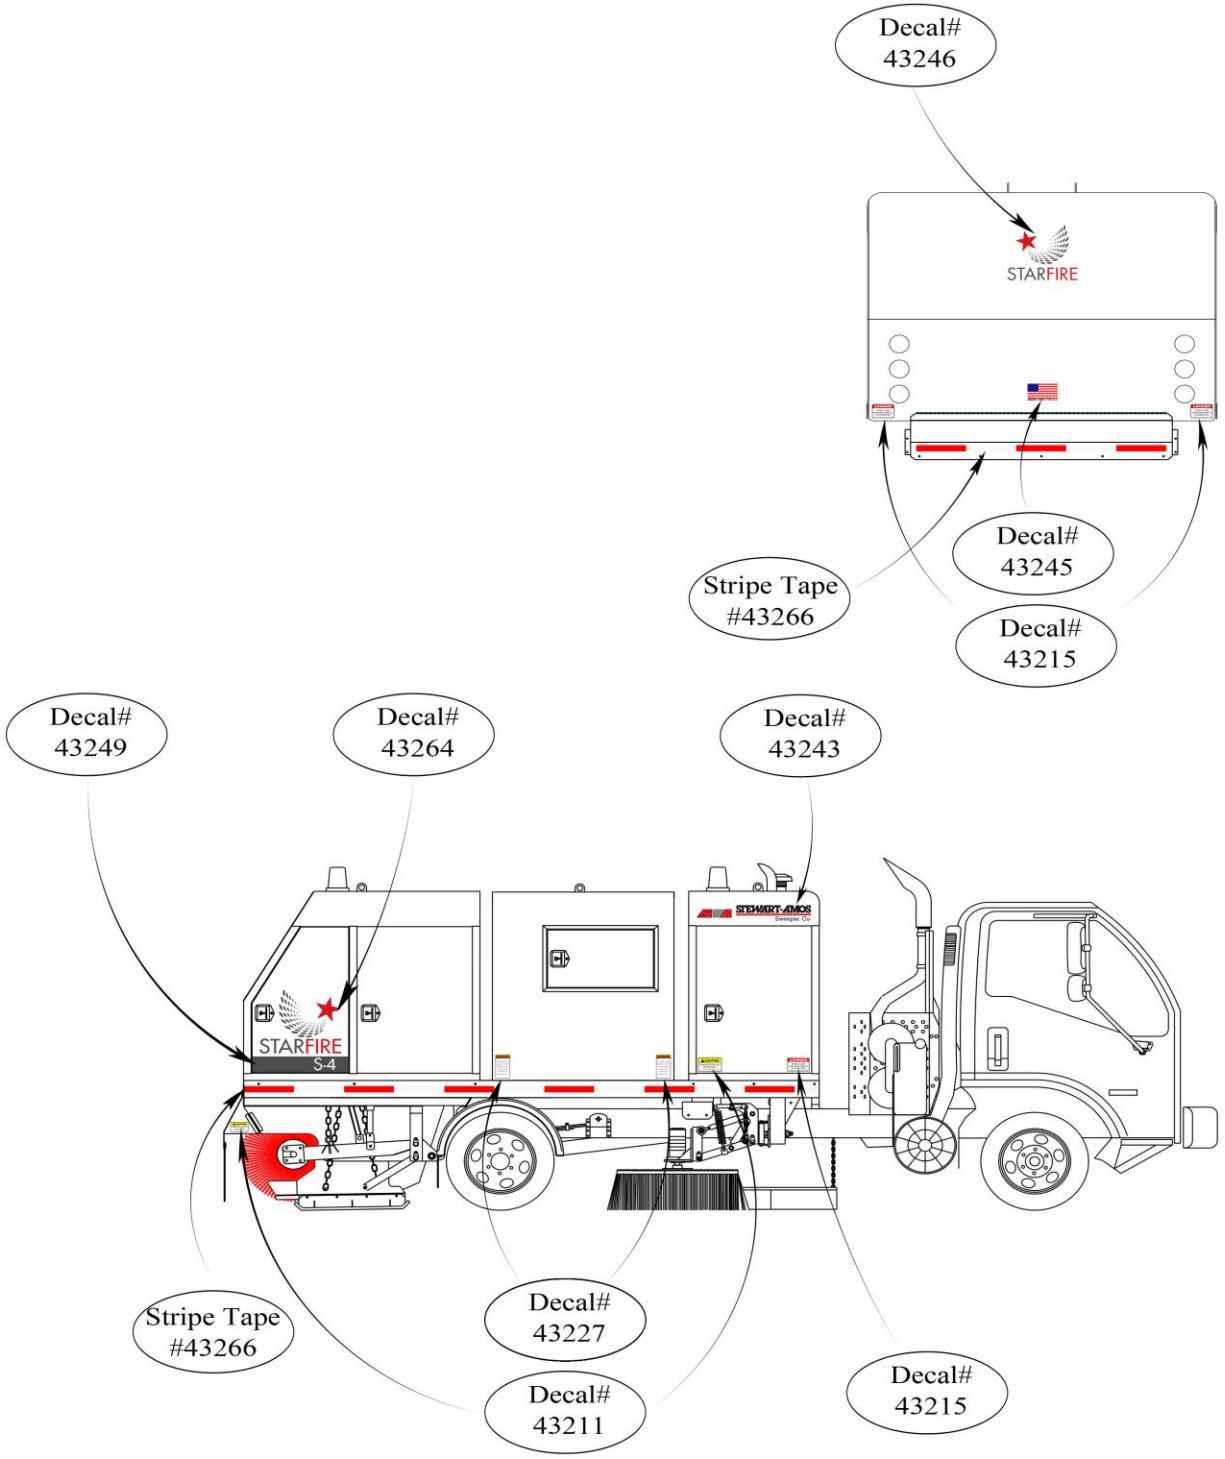



<b>80216</b>	<b>SAFETY DECAL KIT</b>		
	8	43201	DO NOT STEP
	2	43205	PINCH POINT SQ
	5	43207	DANGER SAFETY SUPPORT IN PLACE
	1	43211	CAUTION ROTATING BROOMS
	1	43213	IMPORTANT OPERATOR IS RESPONSIBLE
	6	43215	DANGER STAND CLEAR
	2	43217	HYDRAULIC OIL MUST CONFORM
	1	43219	WARNING THIS VEHICLE IS EQUIPED
	1	43221	WARNING DO NOT OVERLOAD
	2	43223	SAFETY SUPPORT
	1	43225	ROTATING BEACONS AND STROBES
	2	43227	WARNING SWEEPER MUST BE LEVEL
	7	43229	CAUTION CLOSE AND LOCK
	1	43231	CAUTION BEFORE OPERATING
	2	43233	PINCH POINT STRIP
	1	43235	WATER ONLY
	1	43237	DUMP ON LEVEL GROUND ONLY
	1	43239	DANGER HIGH WIRE HAZARD VOLTAGE
	1	43244	LOW SPEED WARNING
	1	43245	MADE IN USA

-

<b>80217</b>	<b>S-4 DECAL KIT</b>		
	1	43246	STARFIRE LOGO DECAL REAR CANOPY
	1	43247	LH STARFIRE LOGO REAR CANOPY DOORS
	1	43264	RH STARFIRE LOGO REAR CANOPY DOORS
	1	43248	LH S-4 STARFIRE DECAL REAR CANOPY DOOR
	1	43249	RH S-4 STARFIRE DECAL REAR CANOPY DOOR
	2	43243	STEWART-AMOS SWEEPER CO.
	1	43254	Lg STEWART-AMOS DECAL

## INDEX

1075	200 GAL. PLASTIC WATER TANK	87	1
1116	HYDRANT HOSE	87	1
1143	FENDER	87	2
1502	NUT	87	17
1503	NUT	87	12
1505	NUT	87	4
1534	BOLT	87	12
1535	BOLT	87	17
1537	BOLT	87	2
1591	SCREW	87	6
1670	WASHER	87	4
1822	WASHER	87	16
1843	BOLT	87	2
1843	BOLT	87	4
1915	WORK LIGHT	87	2
9185	130 GAL. PLASTIC WATER TANK	87	1
41771	REST TUBE	87	1
42060	REAR SKIRT	87	1
42065	WATER VALVE	87	1
42073	SKIRT	87	1
42075	BASE STRIP	87	1
42077	BEARING INSPECTION COVER	87	2
42083	WATER VALVE ROD	87	1
42085	SAFETY PROP	87	2
42101	CENTER DRAG RUBBER	87	1
42103	CENTER DRAG SUPPORT	87	2
42121	MUD FLAP	87	2
42146	CENTER DRAG BUBBER	87	1
42214	FILL RELIEF BUBBER	87	1
42220	WATER TANK MOUNT	87	1
43129	ELEVATOR CENTERING BUSHING	87	2
91201	GB MOUNT	87	1
92001	MAIN FRAME	87	1
92201	WATER TANK TUB	87	1
92202	END PLATE	87	2
1087-3	PROXIMITY SWITCH	87	2
42220-06	WATER TANK STRAP	87	2
1005	DOOR LATCH	89	4
1031	HINGE	89	4
1394	WATER LEVEL FLOAT	89	1
1395	CLEAR FLOAT TUBE	89	1
1501	NUT	89	20
1503	NUT	89	6

1843	BOLT	89	6
1861	DOOR STOP SPRING	89	2
1916	STROBE	89	1
1955	HYD. COOLER & FAN	89	1
41503	DOOR	89	2
41504	SPACER	89	4
42107	LIMB GUARD	89	1
91501	FRONT CANOPY	89	1
91502	DOOR STOP	89	2
1005	DOOR LATCH	91	4
1024	BACKUP ALARM	91	1
1031	HINGE	91	8
1501	NUT	91	36
1503	NUT	91	6
1520	WASHER	91	36
1579	BOLT	91	32
1750	INSERT	91	16
1768	CAMERA CABLE	91	2
1769	CAMERA/MONITER	91	1
1770	CAMERA	91	1
1822	WASHER	91	6
1843	BOLT	91	6
1861	DOOR STOP SPRING	91	4
1905	CLERANCE LIGHT	91	4
1906	GROMMET	91	4
1907	ID BAR	91	1
1908	LICENSE PLATE LIGHT	91	1
1909	BRAKE LIGHT	91	4
1911	BACKUP LIGHT	91	2
1912	GROMMET	91	6
1915	WORK LIGHT	91	1
1916	STROBE	91	1
41503	DOOR	91	2
41612	LEFT REAR DOOR	91	1
41614	RIGHT REAR DOOR	91	1
42081	WATER VALVE LEVER	91	1
42107	LIMB GUARD	91	1
91502	DOOR STOP	91	4
91602	REAR CANOPY	91	1
1005	DOOR LATCH	93	1
1031	HINGE	93	2
1033	WINDOW RUBBER	93	37"
1061	CYLINDER	93	2

1520	WASHER	89	20
1522	WASHER	89	6
1579	BOLT	89	8
1750	INSERT	89	8
1530	BOLT	93	13
1558	BOLT	93	4
1560	BOLT	93	2
1579	BOLT	93	8
1583	NUT	93	4
1934	BIN VIB.	93	1
32910	DRAIPER MOUNT	93	1
32911	DRAIPER RUBBER	93	1
42905	DOOR LINK	93	4
42913	WINDOW	93	1
42915	RUBBER FLASHING	93	1
42917	UPRIGHT FLASHING	93	2
62907	ACCESS DOOR	93	1
92901	HOPPER	93	1
92904	PIN	93	1
92906	HOPPER DOOR	93	1
1074	SNAP RING	95	16
1185	BUSHING	95	8
1604	COTTER PIN	95	6
1623	PIN	95	6
1782	BOLT	95	16
1985	CYLINDER	95	1
3210	CYLINDER	95	2
42813	SCISSOR ROLLER	95	4
62811	SCISSOR PIN	95	16
62812	CENTER PIN	95	8
62813	RETAINER WASHER	95	16
92801	UPPER SCISSOR ROLLER	95	1
92806	LOWER SCISSOR ROLLER	95	1
92811	UPPER ANCHOR LEG #1	95	1
92812	UPPER ANCHOR LEG #2	95	1
92813	UPPER ANCHOR LEG #3	95	1
92814	UPPER ANCHOR LEG #4	95	1
92815	LOWER ANCHOR LEG #1	95	1
92816	LOWER ANCHOR LEG #2	95	1
92817	LOWER ANCHOR LEG #3	95	1
92818	LOWER ANCHOR LEG #4	95	1
93002	HOPPER LIFT FRAME	95	1
1018	SUSPENSION SPRING	97	4
1019	RETRACT SPRING	97	2
1020	BUSHING	97	8

1173	CHAIN	93	2-6"
1185	BUSHING	93	18
1501	NUT	93	20
1520	WASHER	93	34
1505	NUT	97	2
1506	NUT	97	10
1507	NUT	97	14
1508	NUT	97	2
1526	WASHER	97	4
1537	BOLT	97	6
1540	BOLT	97	4
1556	BOLT	97	4
1559	BOLT	97	10
1560	BOLT	97	4
1561	BOLT	97	2
1574	BOLT	97	2
1581	WASHER	97	2
1640	NUT	97	2
1642	NUT	97	4
1670	WASHER	97	6
1822	WASHER	97	6
9137	LANYARD	97	4
41205	LINKAGE MOUNT (LEFT)	97	1
41211	PIN	97	4
41215	SPRING BELL CRANK	97	2
41221	LINK	97	2
41230	EXTEND SPRING MOUNT	97	2
41316	LINKAGE MOUNT (RIGHT)	97	1
61201	GB MOUNT (LEFT)	97	1
61203	GB PIVOT (LEFT)	97	1
61213	PIN	97	2
61235	RETRACT PLATE (LEFT)	97	1
61301	GB MOUNT (RIGHT)	97	1
61303	GB PIVOT (RIGHT)	97	1
61335	RETRACT PLATE (RIGHT)	97	1
1078	LINEAR ACTUATOR	99	2
1148	GB BUSH SET FOR 32" PLATE	99	2
1505	NUT	99	4
1506	NUT	99	8
1525	WASHER	99	4
1526	WASHER	99	2
1537	BOLT	99	6
1540	BOLT	99	48
1546	BOLT	99	4
1549	BOLT	99	8

1022	TURN BUCKLE	97	4
1023	TURN BUCKLE	97	2
1042	QUICK LINK	97	8
1185	BUSHING	97	8
1379	CYLINDER	97	4
1503	NUT	97	4
41207	MOTOR BRACKET (LEFT)	99	1
41209	DRIVER HUB	99	2
41227	32" PLATE	99	2
41318	MOTOR BRACKET (RIGHT)	99	1
61307	OPTIONAL 42" PLATE	99	2
1014	MAIN BROOM MANDREL	101	1
1016	MAINBROOM STRIP SET	101	1
1030	BEARING	101	1
1043	CYLINDER	101	2
1046	SHOCK	101	2
1185	BUSHING	101	4
1266	MANDRELL END PLATE	101	2
1503	NUT	101	10
1505	NUT	101	6
1537	BOLT	101	2
1545	BOLT	101	6
1545	BOLT	101	2
1546	BOLT	101	6
1604	COTTER PIN	101	2
1630	CAPSCREW	101	4
1639	NUT	101	2
1669	WASHER	101	6
1670	WASHER	101	2
1671	WASHER	101	6
1680	KEY	101	1
1683	KEY	101	1
1781	BOLT	101	6
1782	BOLT	101	4
1822	WASHER	101	30
1843	BOLT	101	4
3212	LONG MANDRELL SHAFT	101	1
3243	HYDRAULIC MOTOR	101	1
34501	MB LIFT ARM (LEFT)	101	1
34502	MB LIFT ARM (RIGHT)	101	1
41401	PIN	101	2
41413	MAIN BROOM ROCK SHAFT	101	1
41417	PIN	101	2
41421	MAIN BROOM LIFT STRAP	101	2
41427	MAIN BROOM LIFT CHAIN	101	2

1670	WASHER	99	10
1683	OFFSET KEY	99	2
1822	WASHER	99	2
3229	OPTIONAL GB BRUSH (SET FOR 61307)	99	2
3243	MOTOR	99	2
3248	BUSHING	99	2
1501	NUT	103	4
1502	NUT	103	8
1508	NUT	103	2
1521	WASHER	103	12
1530	BOLT	103	4
1534	BOLT	103	8
1537	BOLT	103	2
1562	BOLT	103	2
1575	BOLT	103	8
1670	WASHER	103	2
1822	WASHER	103	2
41401	PIN	103	2
41429	DRAG LINK	103	2
41431	BACKING	103	2
41433	DRAG SHOE MOUNT (LEFT)	103	1
41435	DRAG SHOE MOUNT (RIGHT)	103	1
42067	DIRT DEFLECTOR RUBBER	103	2
1293	MANIFOLD	104	
1295	GUTTER BROOM MOTOR & DUMP VALVE	104	3
1989	GUTTER BROOM LIFT CYLINDER VALVE	104	2
1990	FLOAT VALVE	104	
2000	RELIEF VALVE	104	
2001	HOPPER LIFT CYLINDER VALVE	104	
2078	GAUGE SHUTOFF VALVE	104	
2080	5000 psi GAUGE	104	
80134	VALVE	104	1
1287	MANIFOLD	105	1
1291	VALVE	105	1
1839	1/16" RESTRICTOR	105	2
1993	VALVE	105	3
1994	CHECK VALVE	105	1
2000	RELIEF VALVE	105	1
2010	CHECK VALVE	105	1
2078	GAUGE SHUTOFF VALVE	105	1
2080	5000PSI GAUGE	105	1
80120	VALVE	105	1
1037	ELEVATOR STALL SWITCH	107	1
1043	MB CYLINDER	107	2
1061	HOPPER DOOR CYLINDER	107	2

41437	DRAG SHOE LIFT CHAIN	101	2
62813	WASHER	101	4
80129	MAIN BROOM COUPLER	101	1
91405	LIFT BELL CRANK (RIGHT)	101	1
91406	LIFT BELL CRANK (LEFT)	101	1
3213-3	MANDRELL SHAFT	101	1
1115	CARBIDE DRAG SHOE	103	2
1185	BUSHING	103	8
1455	HOSE-MB HEAD TO "T"	107	2
1456	HOSE-MB ROD TO "T"	107	2
1466	HOSE-FRONT OF PUMP TO LH VALVE	107	1
1468	HOSE-VALVE RETURN TO COOLER "T"	107	1
1469	HOSE-COOLER TO FILTER	107	1
1488	HOSE-ELEV. MOTOR TO VALVE	107	1
1489	HOSE-SUCTION	107	1
1490	HOSE-MB CYL T TO ELEV CYL T	107	4
1491	HOSE-ELEV CYL TO DRAG SHOE CYL	107	4
1985	HOPPER TILT CYLINDER	107	1
1986	ELEV/DRAG SHOE CYL.	107	4
1987	HYDRAULIC OIL FILTER	107	1
1988	HYDRAULIC OIL FILTER BASE	107	1
3243	HYDRAULIC MOTOR	107	2
1379	GB CYLINDER	109	4
1428	HOSE - RETRACT CYLINDER	109	4
1445	HOSE - RH GB CYL. TO VAL.	109	2
1446	HOSE - LH GB CYL. TO VAL.	109	1
1450	HOSE - LH GB MOTOR TO VAL.	109	2
1451	HOSE - RH GB MOTOR TO VAL.	109	2
1467	HOSE - PUMP TO VALVE	109	1
1492	HOSE - VALVE RETURN TO T	109	1
1493	HOSE - HOPPER LIFT RETURN	109	1
1494	HOSE - VALVE TO HOPPER LIFT	109	1
1495	HOSE - LIFT CROSSOVER	109	1
1496	HOSE - RETURN CROSSOVER	109	1
1497	HOSE - ROD RETURN	109	1
1955	ELECTRIC HYD. OIL COOLER	109	1
2087	DIRECTIONAL RESTRICTOR	109	2
3235	HOPPER LIFT CYLINDER	109	2
3243	HYDRAULIC MOTOR	109	2
1049	INTAKE HOSE	111	30"
1104	OIL PRESSURE SENDER	111	1
1106	ENGINE OIL FILTER	111	1
1108	FUEL FILTER	111	1
1154	EXHAUST CLAMP	111	2
1155	HOSE CLAMP	111	2

1440	HOSE-HOPPER TILT VALVE TO CROSS	107	1
1440	HOSE-HOPPER TILT VALVE TO CROSS	107	1
1441	HOSE-HOPPER TILT ROD TO CROSS	107	1
1442	HOSE-HOPPER TILT HEAD TO CROSS	107	1
1443	HOSE-HOPPER DOOR CYL.	107	4
1452	HOSE-MB MOTOR TO VALVE	107	1
1453	HOSE-MB MOTOR TO ELEV. MOTOR	107	1
1454	HOSE-MB VALVE TO "T"	107	2
1545	BOLT	111	4
2076	RUBBER BUMPER	111	1
2077	ENGINE	111	1
3251	HYDRAULIC PUMP	111	1
42404	THROTTLE MOUNT	111	1
42427	MUFFLER BRACE	111	2
42429	RUBBER CONNECTOR	111	1
1047	ISOLATION MOUNT	113	4
1062	SITE GAUGE	113	1
1177	HYD. TANK BREATHER	113	1
1178	FILL CAP	113	1
1179	MAGNETIC DRAIN PLUG	113	2
1505	NUT	113	32
1524	WASHER	113	4
1526	WASHER	113	4
1547	BOLT	113	14
1987	HYD FILTER	113	1
1988	FILTER BASE	113	1
2063	O RING	113	1
2070	SUCTION SCREEN	113	1
9138	DISCONNECT SWITCH	113	1
42305	TANK COVER	113	1
42310	HOSE TIE STRAP	113	2
52303	HYDRAULIC TANK	113	1
62301	VALVE MOUNT PLATE	113	1
92401	ENGINE SKID	113	1
92402	AUX. BOX MOUNT	113	1
92403	WATER PUMP PLATE	113	1
1030	BEARING	115	6
1147	BOLT	115	4
1503	NUT	115	12
1505	NUT	115	2
1506	NUT	115	24
1533	BOLT	115	8
1540	BOLT	115	12
1546	BOLT	115	2
1551	BOLT	115	4

1156	EXHAUST PIPE	111	1
1175	RAIN CAP	111	1
1176	MUFFLER	111	1
1260	CLAMP	111	1
1299	THROTTLE GUIDE	111	1
1387	THROTTLE ACTUATOR	111	1
1388	THROTTLE ACTUATOR CABLE	111	1
1390	ENGINE OUTER AIR FILTER	111	1
1391	ENGINE INNER AIR FILTER	111	1
1524	WASHER	111	4
43135	COVER	115	1
80133	ELEV. DRIVE CHAIN ASSEM.	115	1
93103	ELEVATOR FRAME	115	1
1502	NUT	117	50
1521	WASHER	117	48
1535	BOLT	117	24
1711	BOLT	117	14
1713	BOLT	117	7
41710	HOLD DOWN	117	2
41744	END STRAP	117	1
41772	BOTTOM RUBBER	117	1
41776	RUBBER SEAL	117	2
43105	BOTTOM LINER	117	1
43121	CANOPY	117	1
43131	CANOPY EXTENTION	117	1
93111	TOP LINER	117	1
1039	RUBBER SPROCKET	119	6
1149	SHAFT KEY	119	6
1501	NUT	119	84
1503	NUT	119	70
1531	BOLT	119	84
1537	BOLT	119	28
1541	BOLT	119	42
41726	SQUEEGEE RUBBER	119	9
41728	SQUEEGEE ANGLE	119	18
41738	SHAFT SPACER	119	6
41740	LOCK PLATE	119	12
43109	BOTTOM AND MIDDLE SHAFT	119	2
93109	ELEVATOR CHAIN	119	2
1137	HOSE	121	2
1138	HOSE	121	1
1139	GREASE FITTING	121	6
1140	FITTING	121	3
1141	BULKHEAD FITTING	121	3
1142	NUT	121	3

1571	WASHER	115	8
1577	BOLT	115	20
3243	HYDRAULIC MOTOR	115	1
43107	SEPARATOR	115	2
43113	TOP SHAFT	115	1
43115	SPACER	115	4
43123	GUIDE	115	4
43125	SLIDE	115	2
43127	ADJUSTMENT ANGLE	115	4
43134	CHAIN GUARD	115	1
1160	NIPPLE	123	1
1162	ADAPTER	123	12
1163	HOSE BARB TEE ADAPTER	123	5
1164	NOZZLE	123	12
1165	HOSE	123	25'
1166	HOSE	123	30'
1167	HOSE BARB FITTING	123	2
1168	U BOLT	123	8
1169	HOSE CLAMP	123	20
1172	WATER FILTER ELEMENT	123	1
1185	PLUG	123	1
1203	HOSE CLAMP	123	4
1204	BALL VALVE	123	4
1371	HOSE BARB FITTING	123	1
1372	ADAPTER	123	1
1373	HOSE BARB FITTING	123	1
1374	HOSE BARB FITTING	123	1
1375	CLEAR TUBEING	123	48"
1376	CLAMP	123	2
1377	FLOAT	123	1
3232	WATER PUMP	123	1
42201	SPRAY BAR	123	2
42203	GB SPRAY BAR	123	2
42205	SPRAY BAR HANGER	123	4
42430	FILTER MOUNT	123	1
1090	OIL PRESSURE GAUGE	124	1
1091	WATER TEMP GAUGE	124	1
1092	TACH/HOUR METER	124	1
1094	SHUT DOWN MODULE	124	1
1095	IGNITION SWITCH	124	1
42527	CONTROL BOX HARNESS	124	
62512	AUXILIARY BOX HARNESS	126	1
1193	FUSE 5 AMP F6	127	1
1946	RELAY	127	2
1947	RELAY	127	6

1505	NUT	121	12
1545	BOLT	121	12
1782	BOLT	121	2
41441	PIN	121	2
41764	SWIVEL SHAFT	121	1
41764	PIVOT SHAFT MOUNT	121	2
62813	WASHER	121	2
93113	LIFT ARM	121	2
1117	WATER FILTER HOUSING	123	1
1130	WATER TANK ELBOW	123	1
1158	HOSE BARB FITTING	123	4
1159	BALL VALVE	123	1
1686	SWITCH (M-O-M)	131	6
1689	HOLE PLUG	131	2
1691	COURTESY LIGHT	131	1
42531	PANEL DECAL	131	1
62505	BOX	131	1
62506	PANEL	131	1
62510	VALVE HARNESS	132	1
62513	SWEEPER HARNESS	133	1
3225	POWER CABLE	134	1
1194	PEDISTAL KNOB	135	2
1233	ELECT. BOOT	135	1
1501	NUT	135	7
1505	NUT	135	1
1520	WASHER	135	4
1531	BOLT	135	7
1546	BOLT	135	1
42501	ADAPTER PLATE	135	1
42502	SUPPORT POST	135	1
42503	TOP MOUNT	135	1
42506	BOX MOUNT PLATE	135	1
62501	OFFSET POST	135	1

2041	FUSE HOLDER	127	1
2042	FUSE 15 AMP F1-5/7/8	127	7
2043	CIRCUIT BRAKER	127	1
62507	AUX. BOX MOUNTING PLATE	127	1
62508	REAR LIGHT HARNESS	128	1
62511	SWITCH BOX	129	1
62506	CONTROL PANEL	130	1
1101	SHOCK MOUNT	131	4
1127	STALL ALARM	131	1
1128	STALL LIGHT	131	1
1684	SWITCH (S-O-S)	131	4
1685	SWITCH (S-O-M)	131	3

1005	DOOR LATCH	89	4
1005	DOOR LATCH	91	4
1005	DOOR LATCH	93	1
1014	MAIN BROOM MANDREL	101	1
1016	MAINBROOM STRIP SET	101	1
1018	SUSPENSSION SPRING	97	4
1019	RETRACT SPRING	97	2
1020	BUSHING	97	8
1022	TURN BUCKLE	97	4
1023	TURN BUCKLE	97	2
1024	BACKUP ALARM	91	1
1030	BEARING	101	1
1030	BEARING	115	6
1031	HINGE	89	4
1031	HINGE	91	8
1031	HINGE	93	2
1033	WINDOW RUBBER	93	37"
1037	ELEVATOR STALL SWITCH	107	1
1039	RUBBER SPROCKET	119	6
1042	QUICK LINK	97	8
1043	CYLINDER	101	2
1043	MB CYLINDER	107	2
1046	SHOCK	101	2
1047	ISOLATION MOUNT	113	4
1049	INTAKE HOSE	111	30"
1061	CYLINDER	93	2
1061	HOPPER DOOR CYLINDER	107	2
1062	SITE GAUGE	113	1
1074	SNAP RING	95	16
1075	200 GAL. PLASTIC WATER TANK	87	1
1078	LINEAR ACTUATOR	99	2
1090	OIL PRESSURE GAUGE	124	1
1091	WATER TEMP GAUGE	124	1
1092	TACH/HOUR METER	124	1
1094	SHUT DOWN MODULE	124	1
1095	IGNITION SWITCH	124	1
1101	SHOCK MOUNT	131	4
1104	OIL PRESSURE SENDER	111	1
1106	ENGINE OIL FILTER	111	1
1108	FUEL FILTER	111	1
1115	CARBIDE DRAG SHOE	103	2
1116	HYDRANT HOSE	87	1
1117	WATER FILTER HOUSING	123	1
1127	STALL ALARM	131	1
1128	STALL LIGHT	131	1
1130	WATER TANK ELBOW	123	1



1137	HOSE	121	2
1138	HOSE	121	1
1139	GREASE FITTING	121	6
1140	FITTING	121	3
1141	BULKHEAD FITTING	121	3
1142	NUT	121	3
1143	FENDER	87	2
1147	BOLT	115	4
1148	GB BUSH SET FOR 32" PLATE	99	2
1149	SHAFT KEY	119	6
1154	EXHAUST CLAMP	111	2
1155	HOSE CLAMP	111	2
1156	EXHAUST PIPE	111	1
1158	HOSE BARB FITTING	123	4
1159	BALL VALVE	123	1
1160	NIPPLE	123	1
1162	ADAPTER	123	12
1163	HOSE BARB TEE ADAPTER	123	5
1164	NOZZLE	123	12
1165	HOSE	123	25'
1166	HOSE	123	30'
1167	HOSE BARB FITTING	123	2
1168	U BOLT	123	8
1169	HOSE CLAMP	123	20
1172	WATER FILTER ELEMENT	123	1
1173	CHAIN	93	2-6"
1175	RAIN CAP	111	1
1176	MUFFLER	111	1
1177	HYD. TANK BREATHER	113	1
1178	FILL CAP	113	1
1179	MAGNETIC DRAIN PLUG	113	2
1185	BUSHING	93	18
1185	BUSHING	95	8
1185	BUSHING	97	8
1185	BUSHING	101	4
1185	BUSHING	103	8
1185	PLUG	123	1
1193	FUSE 5 AMP F6	127	1
1194	PEDISTAL KNOB	135	2
1203	HOSE CLAMP	123	4
1204	BALL VALVE	123	4
1233	ELECT. BOOT	135	1
1260	CLAMP	111	1
1266	MANDRELL END PLATE	101	2
1287	MANIFOLD	105	1
1291	VALVE	105	1
1293	MANIFOLD	104	

1295	GUTTER BROOM MOTOR & DUMP VALVE	104	3
1299	THROTTLE GUIDE	111	1
1371	HOSE BARB FITTING	123	1
1372	ADAPTER	123	1
1373	HOSE BARB FITTING	123	1
1374	HOSE BARB FITTING	123	1
1375	CLEAR TUBEING	123	48"
1376	CLAMP	123	2
1377	FLOAT	123	1
1379	CYLINDER	97	4
1379	GB CYLINDER	109	4
1387	THROTTLE ACTUATOR	111	1
1388	THROTTLE ACTUATOR CABLE	111	1
1390	ENGINE OUTER AIR FILTER	111	1
1391	ENGINE INNER AIR FILTER	111	1
1394	WATER LEVEL FLOAT	89	1
1395	CLEAR FLOAT TUBE	89	1
1428	HOSE - RETRACT CYLINDER	109	4
1440	HOSE-HOPPER TILT VALVE TO CROSS	107	1
1440	HOSE-HOPPER TILT VALVE TO CROSS	107	1
1441	HOSE-HOPPER TILT ROD TO CROSS	107	1
1442	HOSE-HOPPER TILT HEAD TO CROSS	107	1
1443	HOSE-HOPPER DOOR CYL.	107	4
1445	HOSE - RH GB CYL. TO VAL.	109	2
1446	HOSE - LH GB CYL. TO VAL.	109	1
1450	HOSE - LH GB MOTOR TO VAL.	109	2
1451	HOSE - RH GB MOTOR TO VAL.	109	2
1452	HOSE-MB MOTOR TO VALVE	107	1
1453	HOSE-MB MOTOR TO ELEV. MOTOR	107	1
1454	HOSE-MB VALVE TO "T"	107	2
1455	HOSE-MB HEAD TO "T"	107	2
1456	HOSE-MB ROD TO "T"	107	2
1466	HOSE-FRONT OF PUMP TO LH VALVE	107	1
1467	HOSE - PUMP TO VALVE	109	1
1468	HOSE-VALVE RETURN TO COOLER "T"	107	1
1469	HOSE-COOLER TO FILTER	107	1
1488	HOSE-ELEV. MOTOR TO VALVE	107	1
1489	HOSE-SUCTION	107	1
1490	HOSE-MB CYL T TO ELEV CYL T	107	4
1491	HOSE-ELEV CYL TO DRAG SHOE CYL	107	4
1492	HOSE - VALVE RETURN TO T	109	1
1493	HOSE - HOPPER LIFT RETURN	109	1
1494	HOSE - VALVE TO HOPPER LIFT	109	1
1495	HOSE - LIFT CROSSOVER	109	1
1496	HOSE - RETURN CROSSOVER	109	1
1497	HOSE - ROD RETURN	109	1
1501	NUT	89	20

1501	NUT	91	36
1501	NUT	93	20
1501	NUT	103	4
1501	NUT	119	84
1501	NUT	135	7
1502	NUT	87	17
1502	NUT	103	8
1502	NUT	117	50
1503	NUT	87	12
1503	NUT	89	6
1503	NUT	91	6
1503	NUT	97	4
1503	NUT	101	10
1503	NUT	115	12
1503	NUT	119	70
1505	NUT	87	4
1505	NUT	97	2
1505	NUT	99	4
1505	NUT	101	6
1505	NUT	113	32
1505	NUT	115	2
1505	NUT	121	12
1505	NUT	135	1
1506	NUT	97	10
1506	NUT	99	8
1506	NUT	115	24
1507	NUT	97	14
1508	NUT	97	2
1508	NUT	103	2
1520	WASHER	89	20
1520	WASHER	91	36
1520	WASHER	93	34
1520	WASHER	135	4
1521	WASHER	103	12
1521	WASHER	117	48
1522	WASHER	89	6
1524	WASHER	111	4
1524	WASHER	113	4
1525	WASHER	99	4
1526	WASHER	97	4
1526	WASHER	99	2
1526	WASHER	113	4
1530	BOLT	93	13
1530	BOLT	103	4
1531	BOLT	119	84
1531	BOLT	135	7
1533	BOLT	115	8

1534	BOLT	87	12
1534	BOLT	103	8
1535	BOLT	87	17
1535	BOLT	117	24
1537	BOLT	87	2
1537	BOLT	97	6
1537	BOLT	99	6
1537	BOLT	101	2
1537	BOLT	103	2
1537	BOLT	119	28
1540	BOLT	97	4
1540	BOLT	99	48
1540	BOLT	115	12
1541	BOLT	119	42
1545	BOLT	101	6
1545	BOLT	101	2
1545	BOLT	111	4
1545	BOLT	121	12
1546	BOLT	99	4
1546	BOLT	101	6
1546	BOLT	115	2
1546	BOLT	135	1
1547	BOLT	113	14
1549	BOLT	99	8
1551	BOLT	115	4
1556	BOLT	97	4
1558	BOLT	93	4
1559	BOLT	97	10
1560	BOLT	93	2
1560	BOLT	97	4
1561	BOLT	97	2
1562	BOLT	103	2
1571	WASHER	115	8
1574	BOLT	97	2
1575	BOLT	103	8
1577	BOLT	115	20
1579	BOLT	89	8
1579	BOLT	91	32
1579	BOLT	93	8
1581	WASHER	97	2
1583	NUT	93	4
1591	SCREW	87	6
1604	COTTER PIN	95	6
1604	COTTER PIN	101	2
1623	PIN	95	6
1630	CAPSCREW	101	4
1639	NUT	101	2

1640	NUT	97	2
1642	NUT	97	4
1669	WASHER	101	6
1670	WASHER	87	4
1670	WASHER	97	6
1670	WASHER	99	10
1670	WASHER	101	2
1670	WASHER	103	2
1671	WASHER	101	6
1680	KEY	101	1
1683	OFFSET KEY	99	2
1683	KEY	101	1
1684	SWITCH (S-O-S)	131	4
1685	SWITCH (S-O-M)	131	3
1686	SWITCH (M-O-M)	131	6
1689	HOLE PLUG	131	2
1691	COURTESY LIGHT	131	1
1711	BOLT	117	14
1713	BOLT	117	7
1750	INSERT	89	8
1750	INSERT	91	16
1768	CAMERA CABLE	91	2
1769	CAMERA/MONITER	91	1
1770	CAMERA	91	1
1781	BOLT	101	6
1782	BOLT	95	16
1782	BOLT	101	4
1782	BOLT	121	2
1822	WASHER	87	16
1822	WASHER	91	6
1822	WASHER	97	6
1822	WASHER	99	2
1822	WASHER	101	30
1822	WASHER	103	2
1839	1/16" RESTRICTOR	105	2
1843	BOLT	87	2
1843	BOLT	87	4
1843	BOLT	89	6
1843	BOLT	91	6
1843	BOLT	101	4
1861	DOOR STOP SPRING	89	2
1861	DOOR STOP SPRING	91	4
1905	CLERANCE LIGHT	91	4
1906	GROMMET	91	4
1907	ID BAR	91	1
1908	LICENSE PLATE LIGHT	91	1
1909	BRAKE LIGHT	91	4

1911	BACKUP LIGHT	91	2
1912	GROMMET	91	6
1915	WORK LIGHT	87	2
1915	WORK LIGHT	91	1
1916	STROBE	89	1
1916	STROBE	91	1
1934	BIN VIB.	93	1
1946	RELAY	127	2
1947	RELAY	127	6
1955	HYD. COOLER & FAN	89	1
1955	ELECTRIC HYD. OIL COOLER	109	1
1985	CYLINDER	95	1
1985	HOPPER TILT CYLINDER	107	1
1986	ELEV/DRAG SHOE CYL.	107	4
1987	HYDRAULIC OIL FILTER	107	1
1987	HYD FILTER	113	1
1988	HYDRAULIC OIL FILTER BASE	107	1
1988	FILTER BASE	113	1
1989	GUTTER BROOM LIFT CYLINDER VALVE	104	2
1990	FLOAT VALVE	104	
1993	VALVE	105	3
1994	CHECK VALVE	105	1
2000	RELIEF VALVE	104	
2000	RELIEF VALVE	105	1
2001	HOPPER LIFT CYLINDER VALVE	104	
2010	CHECK VALVE	105	1
2041	FUSE HOLDER	127	1
2042	FUSE 15 AMP F1-5/7/8	127	7
2043	CIRCUIT BRAKER	127	1
2063	O RING	113	1
2070	SUCTION SCREEN	113	1
2076	RUBBER BUMPER	111	1
2077	ENGINE	111	1
2078	GAUGE SHUTOFF VALVE	104	
2078	GAUGE SHUTOFF VALVE	105	1
2080	5000 psi GAUGE	104	
2080	5000PSI GAUGE	105	1
2087	DIRECTIONAL RESTRICTOR	109	2
3210	CYLINDER	95	2
3212	LONG MANDRELL SHAFT	101	1
3225	POWER CABLE	134	1
3229	OPTIONAL GB BRUSH (SET FOR 61307)	99	2
3232	WATER PUMP	123	1
3235	HOPPER LIFT CYLINDER	109	2
3243	MOTOR	99	2
3243	HYDRAULIC MOTOR	101	1

3243	HYDRAULIC MOTOR	107	2
3243	HYDRAULIC MOTOR	109	2
3243	HYDRAULIC MOTOR	115	1
3248	BUSHING	99	2
3251	HYDRAULIC PUMP	111	1
9137	LANYARD	97	4
9138	DISCONNECT SWITCH	113	1
9185	130 GAL. PLASTIC WATER TANK	87	1
32910	DRAIPER MOUNT	93	1
32911	DRAIPER RUBBER	93	1
34501	MB LIFT ARM (LEFT)	101	1
34502	MB LIFT ARM (RIGHT)	101	1
41205	LINKAGE MOUNT (LEFT)	97	1
41207	MOTOR BRACKET (LEFT)	99	1
41209	DRIVER HUB	99	2
41211	PIN	97	4
41215	SPRING BELL CRANK	97	2
41221	LINK	97	2
41227	32" PLATE	99	2
41230	EXTEND SPRING MOUNT	97	2
41316	LINKAGE MOUNT (RIGHT)	97	1
41318	MOTOR BRACKET (RIGHT)	99	1
41401	PIN	101	2
41401	PIN	103	2
41413	MAIN BROOM ROCK SHAFT	101	1
41417	PIN	101	2
41421	MAIN BROOM LIFT STRAP	101	2
41427	MAIN BROOM LIFT CHAIN	101	2
41429	DRAG LINK	103	2
41431	BACKING	103	2
41433	DRAG SHOE MOUNT (LEFT)	103	1
41435	DRAG SHOE MOUNT (RIGHT)	103	1
41437	DRAG SHOE LIFT CHAIN	101	2
41441	PIN	121	2
41503	DOOR	89	2
41503	DOOR	91	2
41504	SPACER	89	4
41612	LEFT REAR DOOR	91	1
41614	RIGHT REAR DOOR	91	1
41710	HOLD DOWN	117	2
41726	SQUEEGEE RUBBER	119	9
41728	SQUEEGEE ANGLE	119	18
41738	SHAFT SPACER	119	6
41740	LOCK PLATE	119	12
41744	END STRAP	117	1
41764	SWIVEL SHAFT	121	1
41764	PIVOT SHAFT MOUNT	121	2

41771	REST TUBE	87	1
41772	BOTTOM RUBBER	117	1
41776	RUBBER SEAL	117	2
42060	REAR SKIRT	87	1
42065	WATER VALVE	87	1
42067	DIRT DEFLECTOR RUBBER	103	2
42073	SKIRT	87	1
42075	BASE STRIP	87	1
42077	BEARING INSPECTION COVER	87	2
42081	WATER VALVE LEVER	91	1
42083	WATER VALVE ROD	87	1
42085	SAFETY PROP	87	2
42101	CENTER DRAG RUBBER	87	1
42103	CENTER DRAG SUPPORT	87	2
42107	LIMB GUARD	89	1
42107	LIMB GUARD	91	1
42121	MUD FLAP	87	2
42146	CENTER DRAG BUBBER	87	1
42201	SPRAY BAR	123	2
42203	GB SPRAY BAR	123	2
42205	SPRAY BAR HANGER	123	4
42214	FILL RELIEF BUBBER	87	1
42220	WATER TANK MOUNT	87	1
42305	TANK COVER	113	1
42310	HOSE TIE STRAP	113	2
42404	THROTTLE MOUNT	111	1
42427	MUFFLER BRACE	111	2
42429	RUBBER CONNECTOR	111	1
42430	FILTER MOUNT	123	1
42501	ADAPTER PLATE	135	1
42502	SUPPORT POST	135	1
42503	TOP MOUNT	135	1
42506	BOX MOUNT PLATE	135	1
42527	CONTROL BOX HARNESS	124	
42531	PANEL DECAL	131	1
42813	SCISSOR ROLLER	95	4
42905	DOOR LINK	93	4
42913	WINDOW	93	1
42915	RUBBER FLASHING	93	1
42917	UPRIGHT FLASHING	93	2
43105	BOTTOM LINER	117	1
43107	SEPARATOR	115	2
43109	BOTTOM AND MIDDLE SHAFT	119	2
43113	TOP SHAFT	115	1
43115	SPACER	115	4
43121	CANOPY	117	1
43123	GUIDE	115	4



43125	SLIDE	115	2
43127	ADJUSTMENT ANGLE	115	4
43129	ELEVATOR CENTERING BUSHING	87	2
43131	CANOPY EXTENTION	117	1
43134	CHAIN GUARD	115	1
43135	COVER	115	1
52303	HYDRAULIC TANK	113	1
61201	GB MOUNT (LEFT)	97	1
61203	GB PIVOT (LEFT)	97	1
61213	PIN	97	2
61235	RETRACT PLATE (LEFT)	97	1
61301	GB MOUNT (RIGHT)	97	1
61303	GB PIVOT (RIGHT)	97	1
61307	OPTIONAL 42" PLATE	99	2
61335	RETRACT PLATE (RIGHT)	97	1
62301	VALVE MOUNT PLATE	113	1
62501	OFFSET POST	135	1
62505	BOX	131	1
62506	CONTROL PANEL	130	1
62506	PANEL	131	1
62507	AUX. BOX MOUNTING PLATE	127	1
62508	REAR LIGHT HARNESS	128	1
62510	VALVE HARNESS	132	1
62511	SWITCH BOX	129	1
62512	AUXILIARY BOX HARNESS	126	1
62513	SWEEPER HARNESS	133	1
62811	SCISSOR PIN	95	16
62812	CENTER PIN	95	8
62813	RETAINER WASHER	95	16
62813	WASHER	101	4
62813	WASHER	121	2
62907	ACCESS DOOR	93	1
80120	VALVE		
80129	MAIN BROOM COUPLER	101	1
80133	ELEV. DRIVE CHAIN ASSEM.	115	1
80134	VALVE		
91201	GB MOUNT	87	1
91405	LIFT BELL CRANK (RIGHT)	101	1
91406	LIFT BELL CRANK (LEFT)	101	1
91501	FRONT CANOPY	89	1
91502	DOOR STOP	89	2
91502	DOOR STOP	91	4
91602	REAR CANOPY	91	1
92001	MAIN FRAME	87	1
92201	WATER TANK TUB	87	1
92202	END PLATE	87	2
92401	ENGINE SKID	113	1

92402	AUX. BOX MOUNT	113	1
92403	WATER PUMP PLATE	113	1
92801	UPPER SCISSOR ROLLER	95	1
92806	LOWER SCISSOR ROLLER	95	1
92811	UPPER ANCHOR LEG #1	95	1
92812	UPPER ANCHOR LEG #2	95	1
92813	UPPER ANCHOR LEG #3	95	1
92814	UPPER ANCHOR LEG #4	95	1
92815	LOWER ANCHOR LEG #1	95	1
92816	LOWER ANCHOR LEG #2	95	1
92817	LOWER ANCHOR LEG #3	95	1
92818	LOWER ANCHOR LEG #4	95	1
92901	HOPPER	93	1
92904	PIN	93	1
92906	HOPPER DOOR	93	1
93002	HOPPER LIFT FRAME	95	1
93103	ELEVATOR FRAME	115	1
93109	ELEVATOR CHAIN	119	2
93111	TOP LINER	117	1
93113	LIFT ARM	121	2
1087-3	PROXIMITY SWITCH	87	2
3213-3	MANDRELL SHAFT	101	1
42220-06	WATER TANK STRAP	87	2